


**2006
Honda CR125R
OWNER'S MANUAL & COMPETITION HANDBOOK**

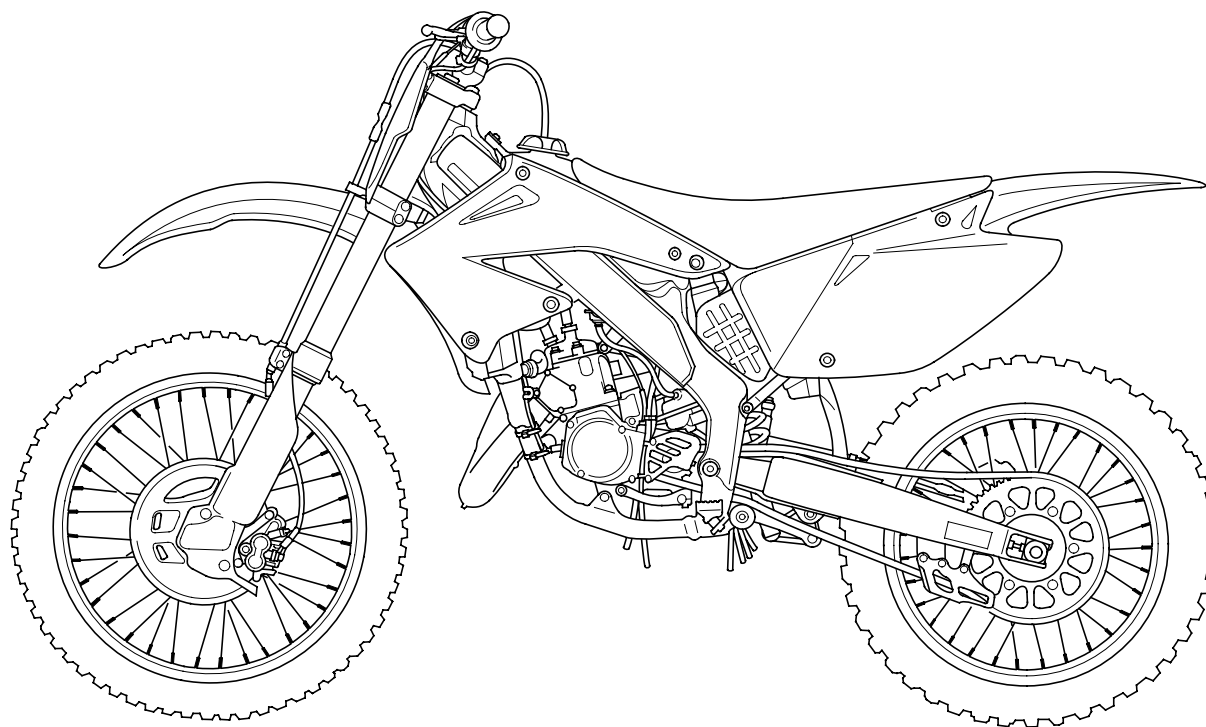

Introduction

Congratulations on choosing your Honda CR motocross motorcycle.

When you own a Honda, you're part of a worldwide family of satisfied customers - people who appreciate Honda's reputation for building quality into every product.

Your CR is a high performance racing motorcycle that utilizes the latest motocross technology and is intended for competition use in sanctioned, closed-course events by experienced riders only.

Be aware that motocross is a physically demanding sport that requires more than just a fine CR. To do well, you must be in excellent physical condition and be a skillful rider. For the best results, work diligently on your physical conditioning and practice frequently.

Before riding, take time to get acquainted with your CR and how it works. To protect your investment, we urge you to take responsibility for keeping your CR well maintained. Scheduled service is a must, of course. But it's just as important to observe the break-in guidelines, and perform all the pre-ride and other periodic checks detailed in this manual.

You should also read the owner's manual before you ride. It's full of facts, instructions, safety information, and helpful tips. To make it easy to use, the manual contains a table of contents, a detailed list of topics at the beginning of each section, and an index at the back of the book.

As you read this manual, you will find information that is preceded by a **NOTICE** symbol. This information is intended to help you avoid damage to your CR, other property, or the environment.

Unless you are mechanically qualified and have the proper tools, you should see your Honda dealer for the service and adjustment procedures discussed in this manual.

The official Honda Service Manual for your CR is available (page 130). It is the same manual your dealer uses. If you plan to do any service on your CR beyond the standard maintenance procedures in this manual, you will find the Service Manual a valuable reference.

If you have any questions, or if you ever need a special service or repairs, remember that your Honda dealer knows your CR best and is dedicated to your complete satisfaction.

Please report any change of address or ownership to your Honda dealer so we will be able to contact you concerning important production information.

You may also want to visit our website at www.honda.com.

Happy riding!

California Proposition 65 Warning

WARNING: This product contains or emits chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

A Few Words About Safety

Your safety, and the safety of others, is very important. And operating this motorcycle safely is an important responsibility.

To help you make informed decisions about safety, this manual contains a section devoted to *Motorcycle Safety*, as well as a number of Safety Messages throughout the manual.

Safety Messages are preceded by a safety alert symbol ▲ and one of three signal words: **DANGER**, **WARNING**, or **CAUTION**.

These signal words mean:

▲ DANGER

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

▲ WARNING

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

▲ CAUTION

You **CAN** be **HURT** if you don't follow instructions.

Of course, it is not practical or possible to warn you about all hazards associated with operating or maintaining a motorcycle. You must use your own good judgement.

Contents

| | | |
|---|---|---|
| MOTORCYCLE SAFETY.....1 | <i>Service Procedures</i> | TECHNICAL INFORMATION117 |
| Important Safety Information.....2 | <u>Fluid & Filters</u> | Vehicle Identification118 |
| Important Safety Precaution2 | Fuel System.....34 | Specifications119 |
| Accessories & Modifications3 | Transmission Oil36 | Torque Specifications.....120 |
| Safety Labels.....4 | Coolant38 | High Altitude Carburetor Adjustment.....123 |
| OPERATING CONTROLS5 | Air Cleaner40 | Oxygenated Fuels.....124 |
| Operation Component Locations6 | <u>Engine</u> | Competition Logbook125 |
| BEFORE RIDING.....7 | Throttle42 | Optional Parts List127 |
| Are You Ready to Ride?.....8 | Clutch System44 | Spare Parts & Equipment.....128 |
| Is Your Motorcycle Ready to Ride?.....9 | Spark Plug48 | Wiring Diagram.....129 |
| Pre-ride Inspection.....9 | Cylinder System49 | CONSUMER INFORMATION131 |
| BASIC OPERATING INSTRUCTIONS11 | RC Valve55 | Authorized Manuals132 |
| Safe Riding Precautions12 | Reed Valve.....58 | Contacting Honda.....133 |
| Starting & Stopping the Engine13 | <u>Chassis</u> | Your Honda Dealer.....134 |
| Preparation13 | Suspension.....60 | The Honda Rider's Club (USA only)135 |
| Starting Procedure13 | Brakes65 | TABLE OF CONTENTS136 |
| Flooded Engine.....13 | Wheels69 | INDEX137 |
| How to Stop the Engine.....14 | Tires & Tubes70 | QUICK REFERENCE |
| Break-in Guidelines15 | Drive Chain72 | |
| SERVICING YOUR HONDA.....17 | Expansion Chamber75 | |
| <i>Before You Service Your Honda</i> | Additional Maintenance Procedures76 | |
| The Importance of Maintenance18 | Appearance Care78 | |
| Maintenance Safety19 | ADJUSTMENTS FOR COMPETITION81 | |
| Important Safety Precautions.....19 | Front Suspension Adjustments.....82 | |
| Maintenance Schedule20 | Rear Suspension Adjustments.....92 | |
| General Competition Maintenance22 | Suspension Adjustments for Track Conditions..96 | |
| Before & After Competition Maintenance.....26 | Suspension Adjustment Guidelines.....97 | |
| Between Motos & Practice Maintenance26 | Carburetor Adjustments & Tuning Tips.....100 | |
| After Competition Maintenance27 | Chassis Adjustments.....107 | |
| <i>Service Preparations</i> | Gearing108 | |
| Maintenance Component Locations.....28 | Tire Selection for Track Conditions.....109 | |
| Seat Removal29 | Personal Fit Adjustments.....110 | |
| Fuel Tank Removal30 | TIPS111 | |
| Subframe Removal.....32 | Transporting Your Motorcycle112 | |
| | Storing Your Honda.....113 | |
| | You & the Environment114 | |
| | Troubleshooting.....115 | |

This section presents some of the most important information and recommendations to help you ride your CR safely. Please take a few moments to read these pages. This section also includes information about the location of safety labels on your CR.

| | |
|-----------------------------------|---|
| Important Safety Information..... | 2 |
| Important Safety Precaution | 2 |
| Accessories & Modifications | 3 |
| Safety Labels | 4 |

Important Safety Information

Important Safety Precautions

Your CR can provide many years of pleasure, if you take responsibility for your own safety and understand the challenges you can meet in competitive racing.

As an experienced rider, you know there is much you can do to protect yourself when you ride. The following are a few precautions we consider most important.

Never Carry a Passenger.

Your CR is designed for one operator only. Carrying a passenger can cause an accident in which you and others can be hurt.

Wear Protective Gear.

Whether you're practicing to improve your skills, or riding in competition, always wear an approved helmet, eye protection, and proper protective gear.

Take Time to Get to Know Your CR.

Because every motorcycle is unique, take time to become thoroughly familiar with how this one operates and responds to your commands before placing your machine, and yourself, in competition.

Learn and Respect Your Limits.

Never ride beyond your personal abilities or faster than conditions warrant. Remember that alcohol, drugs, illness and fatigue can reduce your ability to perform well and ride safety.

Don't Drink and Ride.

Alcohol and riding don't mix. Even one drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. So don't drink and

ride, and don't let your friends drink and ride either.

Keep Your Honda in Safe Condition.

Maintaining your CR properly is critical to your safety. A loose bolt, for example, can cause a breakdown in which you can be seriously injured.

Installing non-Honda accessories, removing original equipment, or modifying your CR in any way that would change its design or operation, could seriously impair your CR's handling, stability, and braking, making it unsafe to ride.

WARNING

Improper accessories or modifications can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding modifications and accessories.

Safety Labels

Read these labels carefully and don't remove them.


If the label comes off or becomes hard to read, contact your Honda dealer for replacement.

IMPORTANT INFORMATION

Operator only. No passengers. This Honda Motorcycle is sold as is without warranty, and the entire risk as to quality and performance is with the buyer. Read owner's manual.

This vehicle is designed, manufactured and sold for competition use only. It does not conform to Federal Motor Vehicle Safety Standards or U.S. EPA Noise and Emissions Standards. Operation on public streets, roads, highways or for off-road recreation is illegal.




State and Federal laws prohibit operation of this vehicle except in an organized racing or competitive event on a closed course. Or by permit issued by the local governmental agency having jurisdiction.

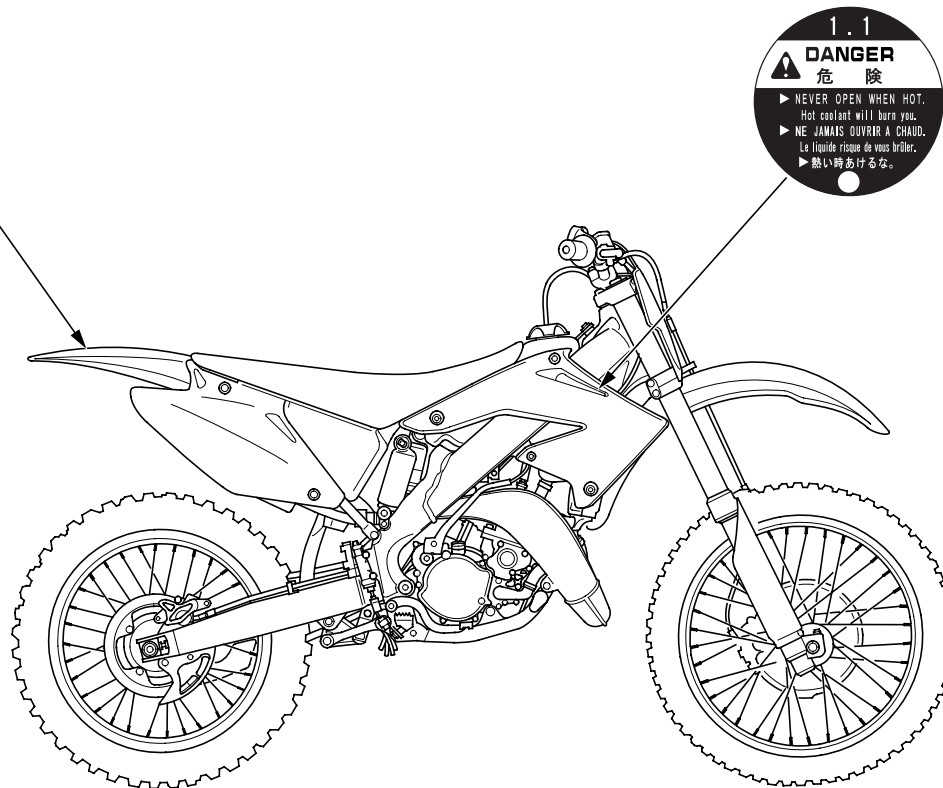

Read this section carefully before you ride. It presents the location of the basic controls on your CR.

Operation Component Locations6

Operation Component Locations

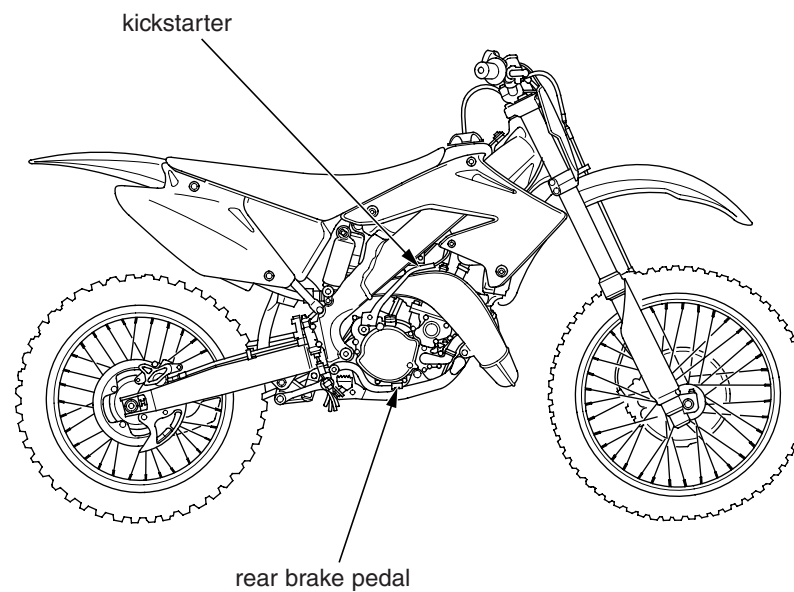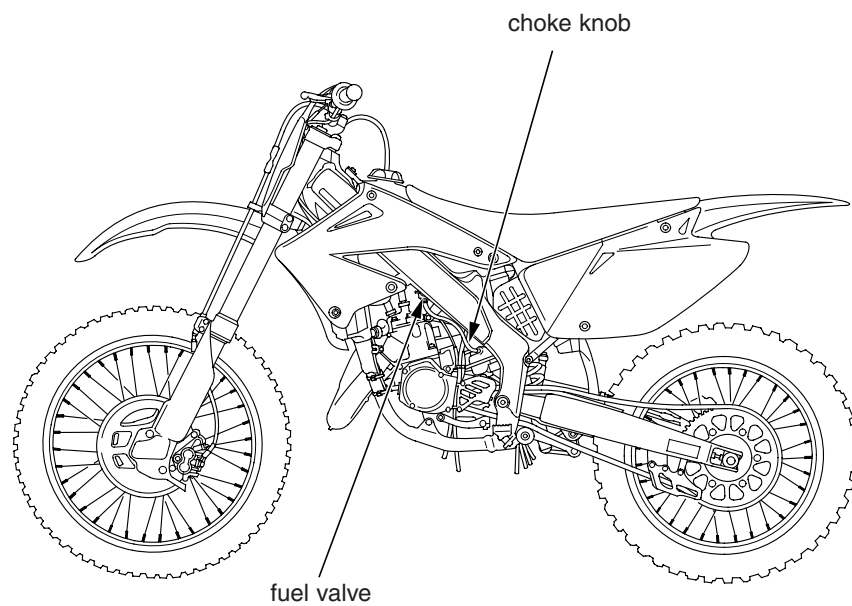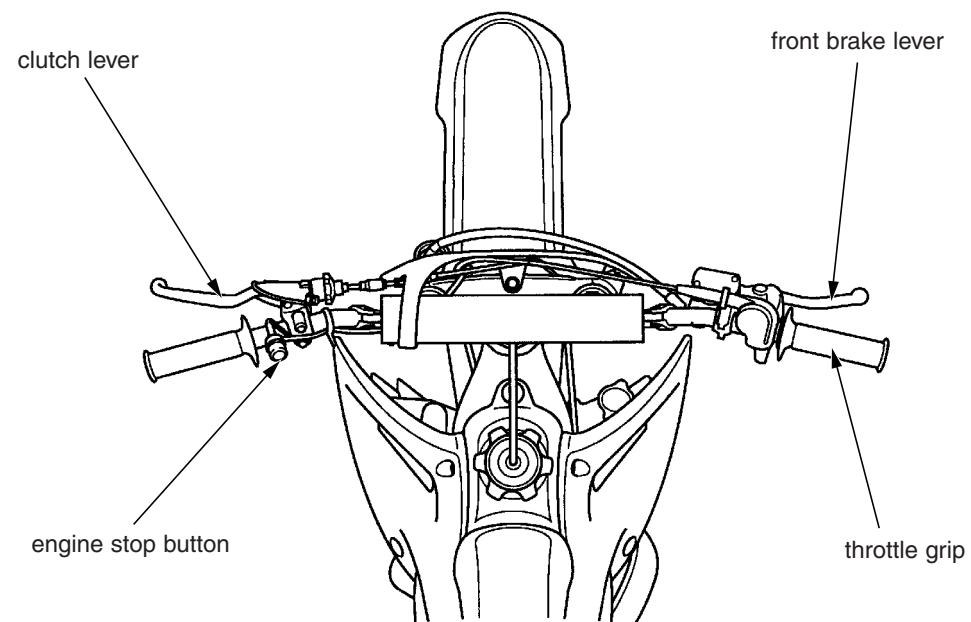

Before each ride, you need to make sure you and your CR are both ready to ride. To help get you prepared, this section discusses how to evaluate your riding readiness, and what items you should check on your CR.

For information about suspension, carburetor and other adjustments, see page 81.

| | |
|--|---|
| Are You Ready to Ride?..... | 8 |
| Is Your Motorcycle Ready to Ride?..... | 9 |
| Pre-ride Inspection | 9 |

Are You Ready to Ride?

Before riding your CR for the first time, we strongly recommend that you read this owner's manual, make sure you understand the safety messages, and know how to operate the controls.

Before each ride, it's also important to make sure you and your CR are both ready to ride.

For information about suspension, carburetor, and other adjustments, see page 81.

Whether you're preparing for competition or for practice, always make sure you are:

- In good physical and mental condition
- Free of alcohol and drugs
- Wearing an approved helmet, eye protection, and other appropriate riding gear

Although complete protection is not possible, wearing the proper gear can reduce the chance or severity of injury when you ride.

WARNING

Not wearing a helmet increases the chance of serious injury or death in a crash.

Be sure you always wear a helmet, eye protection and other protective apparel when you ride.

Competitive riding can be tough on a motorcycle, so it's important to inspect your CR and correct any problems you find before each ride. Check the following items (page numbers are at the right):

WARNING

Improperly maintaining this motorcycle or failing to correct a problem before riding can cause a crash in which you can be seriously hurt or killed.

Always perform a pre-ride inspection before every ride and correct any problems.

Pre-ride Inspection

Check the following before each ride:

- Transmission oil level.....37
- Coolant for proper level.....38
- Cooling system and hoses for condition.....39
- Spark plug for proper heat range, carbon fouling and high tension cord terminal for looseness48
- Air cleaner for condition and contamination.....40
- Clutch lever adjustment and freeplay44
- Steering head bearings and related parts for condition.....76
- Carburetor throttle operation42
- Tires for damage or improper inflation pressure70
- Spokes for looseness.....69
- Rim locks for looseness.....69
- Front and rear suspension for proper operation60, 61
- Front and rear brakes, check operation65
- Drive chain for correct slack and adequate lubrication72
- Drive chain guide, sliders and guide rollers for damage or wear72
- Expansion chamber springs for damage or lack of tension.....75
- Every possible part for looseness (such as cylinder head nuts, carburetor insulator bolts, engine mounting bolts, axle nuts, handlebar holder bolts, fork triple clamp bolts, drive chain adjuster, drive chain guide, wire harness connectors, kickstarter mounting bolt)120

This section gives basic information on how to start and stop your engine as well as break-in guidelines.

Safe Riding Precautions12

Starting & Stopping the Engine13

 Preparation13

 Starting Procedure13

 Flooded Engine13

 How to Stop the Engine.....14

Break-in Guidelines15

Safe Riding Precautions

Before riding your CR for the first time, please review the *Important Safety Precautions* beginning on page 2 and the previous section, titled *Before Riding*.

For your safety, avoid starting or operating the engine in an enclosed area such as a garage. Your CR’s exhaust contains poisonous carbon monoxide gas which can collect rapidly in an enclosed area and cause illness or death.

Always follow the proper starting procedure described below.


Your CR can be kickstarted with the transmission in gear by pulling in the clutch lever before operating the kickstarter.

Preparation

Make sure that the transmission is in neutral. Turn the fuel valve ON.

Starting Procedure

Check the transmission oil and coolant levels before starting the engine (page 37, 38).

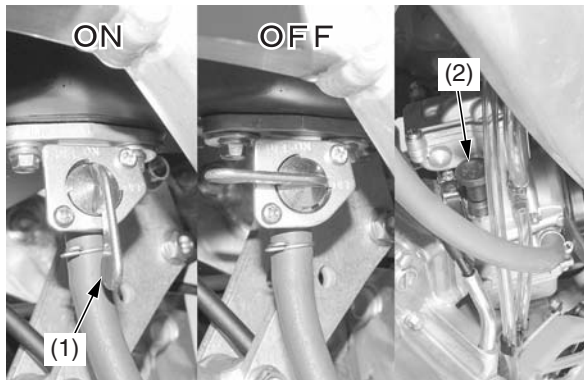

(1) fuel valve

(2) choke knob

Cold Engine Starting

1. Turn the fuel valve (1) ON.
2. Shift the transmission into neutral.
3. Pull the choke knob (2) up.
4. With throttle closed, operate the kickstarter. Starting from the top of the kickstarter stroke, kick through to the bottom with a rapid, continuous motion.
5. After the engine starts, the choke knob should be pushed down as soon as possible to prevent spark plug fouling.
6. Allow the engine to warm up for at least 2 minutes before riding off, preferably until the side of the cylinder is very warm to the touch through your riding glove. Slowly increase rpm and don't blip the throttle. Warming the engine is important to prevent cold seizures.

Warm Engine Starting

1. Turn the fuel valve ON.
2. Shift the transmission into neutral.
3. Push the choke knob down.
4. Open the throttle (1/8 – 1/4) and operate the kickstarter.


Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine:

1. Push the choke knob down all the way to OFF.
2. Open the throttle fully.
3. While pushing the engine stop button, crank the engine several times with the kickstarter.
4. Release the engine stop button.
5. Follow the *Warm Engine Starting* procedure.

Starting & Stopping the Engine

How to Stop the Engine

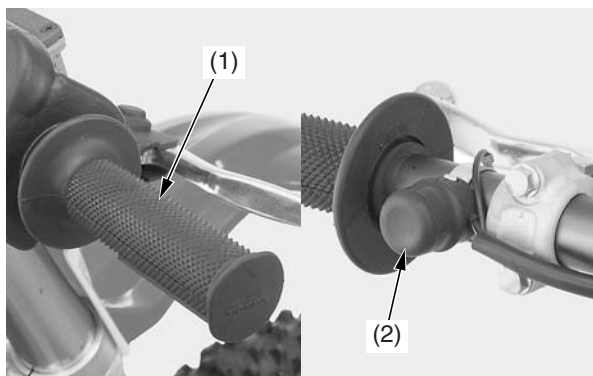

(1) throttle grip

(2) engine stop button

Normal Engine Stop

1. Shift the transmission into neutral.
2. Turn the fuel valve OFF.
3. Lightly open the throttle grip (1) 2 – 3 times, and then close it.
4. Depress and hold the engine stop button (2) until the engine stops completely.

Failure to close the fuel valve may cause the carburetor to overflow, fill the crankcase with fuel and result in hard starting.

Emergency Engine Stop

To stop the engine in an emergency, press the engine stop button.

Help assure your CR's future reliability and performance by paying extra attention to how you ride during the first operating day or 15 miles (25 km).

During this period, avoid full-throttle starts and rapid acceleration.

This same procedure should be followed each time when:

- piston is replaced
- piston ring is replaced
- cylinder is replaced
- crankshaft or crank bearings are replaced

Keeping your CR well maintained is absolutely essential to your safety. It's also a good way to protect your investment, get maximum performance, avoid breakdowns, and have more fun.

To help keep your CR in good shape, this section includes a Maintenance Schedule for required servicing and step-by-step instructions for specific maintenance tasks. You'll also find important safety precautions, information on oils, and tips for keeping your CR looking good.

An ICM (Ignition Control Module) system is used on this motorcycle; consequently, routine ignition timing adjustment is unnecessary. If you want to check the ignition timing, refer to the Honda Service Manual (page 132).

Before You Service Your Honda

The Importance of Maintenance18

Maintenance Safety19

 Important Safety Precautions.....19

Maintenance Schedule20

General Competition Maintenance22

Before & After Competition Maintenance.....26

 Between Motos & Practice Maintenance26

 After Competition Maintenance27

Service Preparations

Maintenance Component Locations.....28

Seat Removal29

Fuel Tank Removal30

Subframe Removal.....32

Service Procedures

Fluids & Filters

Fuel System.....34

Transmission Oil36

Coolant38

Air Cleaner.....40

Engine

Throttle42

Clutch System44

Spark Plug48

Cylinder System49

RC Valve55

Reed Valve.....58

Chassis

Suspension.....60

Brakes.....65

Wheels69

Tires & Tubes70

Drive Chain72

Expansion Chamber75

Additional Maintenance Procedures76

Appearance Care78

The Importance of Maintenance

Keeping your CR well-maintained is absolutely essential to your safety. It's also a good way to get maximum performance during each moto. Careful pre-ride inspections and good maintenance are especially important because your CR is designed to be ridden in off-road competition.

Remember, proper maintenance is your responsibility. Be sure to inspect your CR before each ride and follow the Maintenance Schedule in this section.

WARNING

Improperly maintaining this motorcycle or failing to correct a problem before you ride can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations and schedules in this owner's manual.

This section includes instructions on how to perform some important maintenance tasks. Some of the most important safety precautions follow. However, we cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

WARNING

Failure to properly follow maintenance instructions and precautions can cause you to be seriously hurt or killed.

Always follow the procedures and precautions in this owner's manual.

Important Safety Precautions

- Make sure the engine is off before you begin any maintenance or repairs.

This will help eliminate several potential hazards:

Carbon monoxide poisoning from engine exhaust. Be sure there is adequate ventilation whenever you operate the engine.

Burns from hot motorcycle parts. Let the engine and exhaust system cool before touching.

Injury from moving parts. Do not run the engine unless instructed to do so.

- Read the instructions before you begin, and make sure you have the tools and skills required.
- To help prevent the motorcycle from falling over, park it on a firm, level surface, using the optional work stand or a maintenance stand to provide support.
- To reduce the possibility of a fire or explosion, be careful when working around gasoline. Use only a non-flammable (high flash point) solvent such as kerosene—not gasoline—to clean parts. Keep cigarettes, sparks, and flames away from all fuel-related parts.

Maintenance Schedule

To maintain the safety and reliability of your CR, regular inspection and service is required as shown in the Maintenance Schedule that follows.

The Maintenance Schedule lists items that can be performed with basic mechanical skills and hand tools. Procedures for these items are provided in this manual.

The Maintenance Schedule also includes items that involve more extensive procedures and may require special training, tools, and equipment. Therefore, we recommend that you have your Honda dealer perform these tasks unless you have advanced mechanical skills and the required tools. Procedures for items in this schedule are provided in a service manual available for purchase from your dealer (page 136).

Service intervals in the maintenance schedule are expressed in terms of races and riding hours. To avoid overlooking required service, we urge you to develop a convenient way to record the number of races and/or hours you ride.

If you do not feel capable of performing a given task or need assistance, remember that your Honda dealer knows your CR best and is fully equipped to maintain and repair it. If you decide to do your own maintenance, use only genuine Honda parts or their equivalents for repair or replacement to ensure the best quality and reliability.

Perform the pre-ride inspection (page 9) at each scheduled maintenance period.

Summary of Maintenance Schedule Notes and Procedures:

Notes:

1. Clean after every moto for dusty riding conditions.
2. Replace every 2 years. Replacement requires mechanical skill.
3. Replace after the first break-in ride.

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

L: lubricate

R: replace

Maintenance Schedule

Perform the Pre-ride Inspection at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean. L: Lubricate. R: Replace.

| Items | Frequency | Note | Each race or about 2.5 hours | Every 3 races or about 7.5 hours | Every 9 races or about 22.5 hours | Ref. page |
|---|-----------|----------|------------------------------------|--|---|-----------|
| Throttle Operation | | | I | | | 42 |
| Air Cleaner | | (Note 1) | C | | | 40 |
| Spark Plug | | | I | R | | 48 |
| Radiator Coolant | | (Note 2) | I | | | 38 |
| Cooling System | | | I | | | 39 |
| Cylinder Head Decarbonizing | | | | C | | 51 |
| Exhaust Valve Decarbonizing | | | C | | | 56 |
| Piston and Piston Ring | | | | R | | 51 |
| Piston Pin and Connecting Rod Small End Bearing | | | | | R | 51, 52 |
| Reed Valve Only | | | | R | | 58 |
| Transmission Oil | | | | R | | 36 |
| Drive Chain | | | I, L | R | | 72 |
| Drive Chain Sliders | | | I | | | 72 |
| Drive Chain Rollers | | | I | | | 73 |
| Drive Sprocket | | | I | | | 74 |
| Driven Sprocket | | | I | | | 74 |
| Brake Fluid | | (Note 2) | I | | | 66 |
| Brake Pad Wear | | | I | | | 68 |
| Brake System | | | I | | | 65 |
| Clutch System | | | I | | | 44 |
| Control Cables | | | I, L | | | 76 |
| Expansion Chamber/Silencer | | | I | | | 75 |
| Suspension | | | I | | | 60, 61 |
| Swingarm/Shock Linkage | | | | L | | 25, 61 |
| Fork Oil | | (Note 3) | | R | | 62 |
| Nuts, Bolts, Fasteners | | | I | | | 77, 124 |
| Wheels/Tires | | | I | | | 69, 70 |
| Steering Head Bearing | | | | | I | 76 |

This maintenance schedule is based upon average riding condition. Machines subjected to severe use require more frequent servicing.

NOTE: 1. Clean after every moto for dusty riding conditions.

2. Replace every 2 years. Replacement requires mechanical skill.

3. Replace after the first break-in ride.

General Competition Maintenance

Perform maintenance on firm, level ground using the optional workstand, or equivalent support.

When tightening bolts, nuts or screws, start with the larger diameter or inner fasteners, and tighten them to the specified torque using a crisscross pattern.

Use genuine Honda parts or their equivalent when servicing your CR.

Clean parts in non-flammable (high flash point) cleaning solvent (such as kerosene) when disassembling. Lubricate any sliding surface, O-rings, and seals before reassembling. Grease parts by coating or filling where specified.

After any engine disassembly, always install new gaskets, O-rings, cotter pins, piston pin clips, snap rings, etc. when reassembling. After reassembly, check all parts for proper installation and operation.

All Pre-ride Inspection Items
Refer to *Pre-ride Inspection* (page 9).

Handgrips


Always use Honda Hand Grip Cement (U.S.A only) or Honda Bond A when replacing handgrips.

Throttle Grip


Align the index mark on the throttle grip with the edge of the throttle cable guide.

Left Handlebar Grip

Align the “Δ” mark on the left handlebar grip with the paint mark on the handlebar.
Refer to the Service Manual for installation instructions.

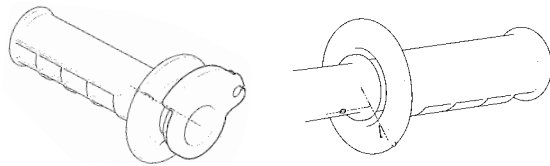


For added security, you may choose to safety wire the hand grips to the handlebar and throttle to prevent the possibility of them loosening. Position the twisted wire ends away from your palms and be sure to bend the wire ends well into the grip rubber so they will not snag your glove.

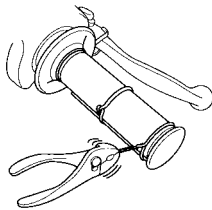

Throttle Control

Remove the throttle control every few rides, clean the inside of the drum and the handlebar thoroughly, and apply a light coating of silicone lubricant. Inspect the cable carefully for kinks or other damage that may restrict throttle control in any way. Move the handlebar from lock to lock to be sure there is no cable interference. Check to be sure the top of the carburetor is screwed on tight. Make certain the throttle operation is perfect after servicing and inspecting.

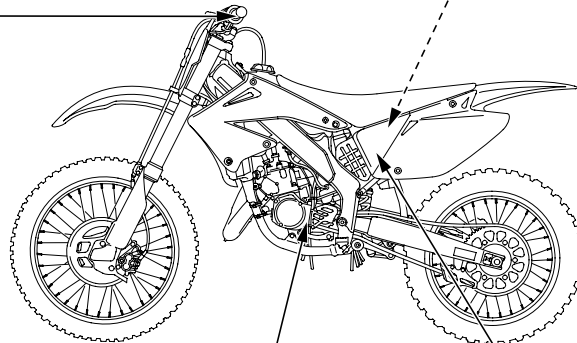

Transmission Oil

Drain and replace transmission oil often to ensure the greatest service life of the transmission and clutch. Frequent changes will also assure consistent performance of both shifting and clutch action (page 36).

Air Cleaner

Clean and oil your air cleaner regularly because the volume of air able to pass through it has a great effect on performance. Both engine performance and long term durability may be affected by an air cleaner that has deteriorated and allows dirt to pass. Inspect the cleaner closely each time it's serviced for evidence of small tears or seam separation. Keep a spare air cleaner oiled and ready to install, sealed in a plastic bag. Riding in dusty conditions may require servicing the air cleaner or replacing it with a pre-serviced air cleaner between motos. Be careful not to over oil the air cleaner. While it is important to oil the air cleaner thoroughly, over oiling will cause an overall rich running condition, probably more noticeable off idle and in low rpm performance. Follow the servicing instructions in the Maintenance section. Use Pro Honda Foam Filter Oil or an equivalent. Be sure to grease the air cleaner flange where it contacts the air cleaner housing. Honda White Lithium Grease, or an equivalent, is handy for this because any dirt that penetrates this sealing area will show up clearly (page 40).

Use the Honda genuine air cleaner or an equivalent air cleaner specified for your model.

Using the wrong Honda air cleaner or a non-Honda air cleaner which does not have equivalent quality may cause premature engine wear or performance problems.


Air Cleaner Housing Sealing

Remove and reseal the air cleaner housing boot where it connects to the air cleaner housing with silicone sealer if there is any doubt to its sealing integrity. Use Honda Thread Lock or an equivalent on the attaching studs. Inspect the air cleaner and air intake tract regularly for signs of deterioration or dirt penetration.

General Competition Maintenance

Spark Plug Cap

Install a small plastic tie-wrap around the spark plug cap to reduce any possibility of it loosening or of water penetration.

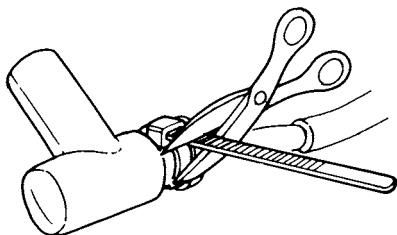


Spark Plug

Some non-resistor plugs may cause ignition problems. Refer to the recommendations elsewhere in this manual for specific types so you will be sure to use the proper reach and heat range. Replace periodically as specified in the Maintenance Schedule (page 21, 48).

Electrical Connectors

Clean electrical connectors and wrap them with electrical tape to reduce the possibility of unwanted disconnections, water shorts or corrosion. Additional corrosion protection is offered by using Honda Dielectric Grease on all electrical connections.

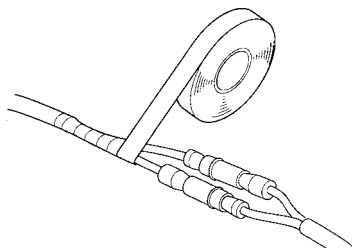

Engine Mounting Bolts

Make sure the engine mounting bolts are tightened to the proper torque specification. For added peace of mind, remove the nuts, clean the threads, and apply Honda Thread Lock or an equivalent prior to torquing the nuts.

Gaskets

Always use new gaskets when reassembling components.

Cylinder Removal

Put a little grease on the cylinder mounting dowels to prevent corrosion from dissimilar metals. The tolerances are quite tight, so it's important to keep these dowels absolutely clean (page 50).

Fuel Filter


Periodically drain the fuel from the tank, remove and clean the fuel valve/filter. Replace the fuel valve O-ring if there are any signs of damage or deterioration (page 35).

Fuel Contamination

Periodically drain the float chamber and inspect the carburetor for contamination from dirt (page 34).

Inlet Tract Sealing

Air leaks around the carburetor insulator and reed valve assembly should be cured by disassembling, cleaning and resealing with new gaskets and some sealing agent. Be careful not to overtighten the mounting bolts — this is the most common cause for leaks here.

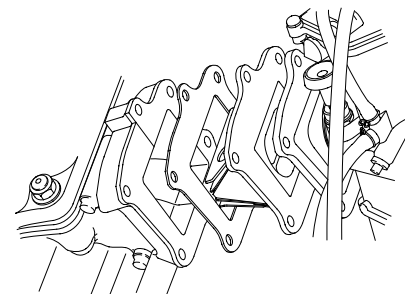

Ignition


Remove the alternator cover and keep it off for a few hours after each washing to let condensation evaporate. Pull the flywheel rotor every few rides and clean it and its crankshaft mounting surface, the alternator stator, the ignition pulse generator pickup and the entire ignition cavity thoroughly. The presence of dirt between the ignition pulse generator and the flywheel makes the ignition control module compensate to maintain the ignition curve. Cleaning dirt from the ignition side main seal helps to prevent premature seal wear. Close inspection of this seal can reveal a leakage problem before engine damage occurs.

Pressure/Vacuum Leak-Down Test

Perform this test at regular intervals to minimize the possibility of engine damage from air leaks.


Swingarm Pivot Lubrication

Clean, inspect and lubricate when servicing suspension linkage pivots. Be sure all of the suspension pivot seals are in good condition. Use Honda Moly 60 paste (U.S.A. only) or molybdenum disulfide paste (containing more than 40% molybdenum disulfide additive).

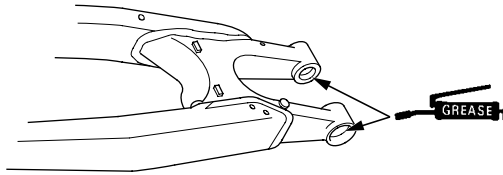

Suspension Linkage Lubrication

Disassemble, clean, inspect and lubricate all pivot bearings after each 7.5 hours of running time in order to maintain proper suspension performance and minimize component wear. Use Honda Moly 60 paste (U.S.A. only) or molybdenum disulfide paste (containing more than 40% molybdenum disulfide additive).

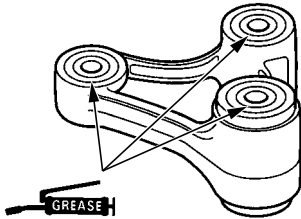


Swingarm

Do not attempt to weld or otherwise repair a damaged swingarm. Welding will weaken the swingarm.

Footpegs

Worn footpeg teeth can be repaired by filing the grooves between the teeth with a triangular-shaped file. Be aware that filing them too sharp will reduce boot sole lifespan. Sharpen only the points of the teeth. Filing the grooves deeper will weaken the footpegs. Be sure the pegs are free to pivot freely and that the pivot pin retaining cotter pins are in good condition.

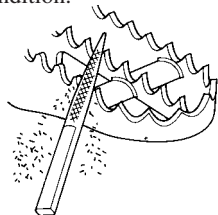


Brake Fluid Replacement

Refer to *Brake Pad Wear* on page 68.

Brake Caliper Inspection: Be sure both the front and rear calipers are able to move freely on the caliper bracket pins. Check pad thickness periodically and replace when minimum thickness is reached. If the brakes fade when they are hot, inspect the pads for glazing or damage, and replace if necessary.

Brake Fluid Replacement: Replace the hydraulic fluid in the brake system every two years. Replace the fluid more frequently if you subject your brakes to severe use. Heavy braking heats the brake fluid and it may deteriorate sooner than expected. Any type of riding, that requires frequent use of the brakes, such as in tight woods, can shorten the service life of brake fluid.

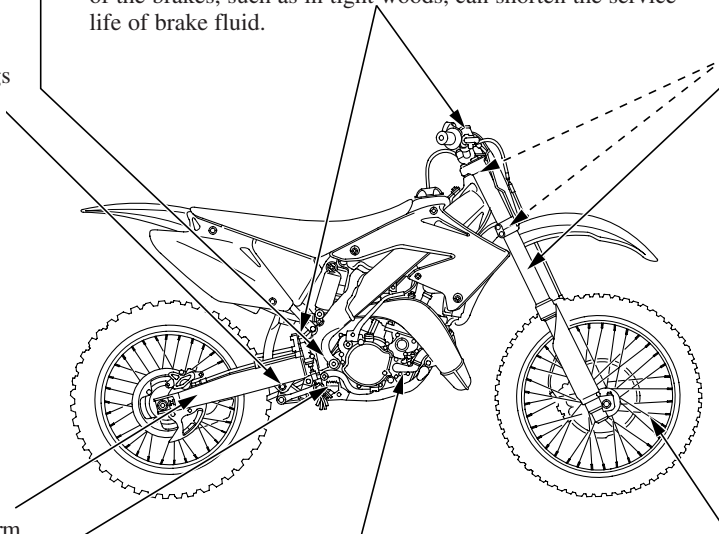


Water Pump Inspection Hole

After every race, check the inspection hole, located just below the water pump cover on the right crankcase cover. Clean away any clogged dirt or sand, if necessary. Look for coolant or oil leakage. Leaking coolant indicates a worn or damaged water seal. Leaking oil indicates a bad transmission oil seal. If replacement is necessary, both seals should be replaced.

Steering Head Bearings

Periodically clean, inspect and regrease the steering head bearings — especially if wet, muddy or extremely dusty courses are encountered often.

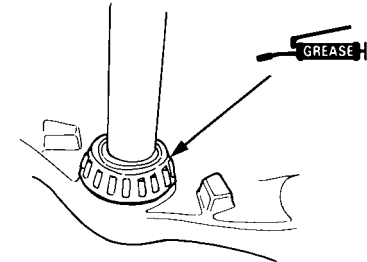

Fork Oil/Performance

Disassemble, clean and inspect the fork and replace the oil regularly. Contamination due to the tiny metal particles produced from the normal action of the fork, as well as normal oil breakdown, will deteriorate the performance of the suspension. Refer to the Honda Service Manual. Use only Pro Honda HP Fork Oil 5W (U.S.A. only) or equivalent which contains special additives to assure maximum performance of your CR's front suspension.

Frame

Because your CR is a high-performance machine, the frame should not be overlooked as part of your overall competition maintenance program. Periodically inspect the frame closely for possible cracking or other damage. It makes good racing sense.

Spokes

Check spoke tension frequently between the first few rides. As the spokes, spoke nuts and rim contact points seat-in, the spokes may need to be retightened. Once past this initial seating-in period, the spokes should hold their tension. Still, be sure your race maintenance program includes checking spoke tension and overall wheel condition on a regular basis (page 69).

Nuts, Bolts, Etc


Application of a thread locking agent to essential fasteners offers added assurance and security. Remove the nuts, clean the threads of both the nuts and bolts, apply Honda Thread Lock or an equivalent and tighten to the specified torque.

Before & After Competition Maintenance

Between Motos & Practice Maintenance

After practice or between motos you have a chance to make additional checks and adjustments.


- Clean accumulated dirt from under the fenders, wheels, suspension components, hand grips, controls and footpegs. A stiff, nylon parts cleaning brush works well.
- Check tire air pressure.
- Check spoke tension and rim lock nut securely.
- Check sprocket bolt and nut securely.

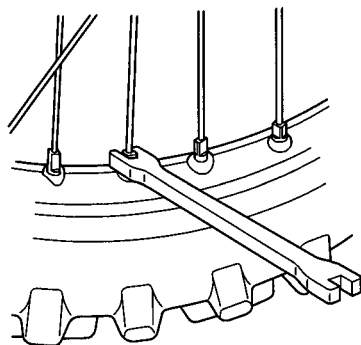

- Clean the sides of the drive chain with a stiff, nylon parts-cleaning brush. Lubricate and adjust the chain as necessary.


Do not perform maintenance while engine is running. Injury to your fingers or hands may result.

- After adjustment, check that the chain adjuster index marks (1) are in the same position on each side. This will ensure that the rear wheel is in proper alignment and allow maximum performance from the rear disc brake. Maintaining proper wheel alignment will also extend brake pad wear.

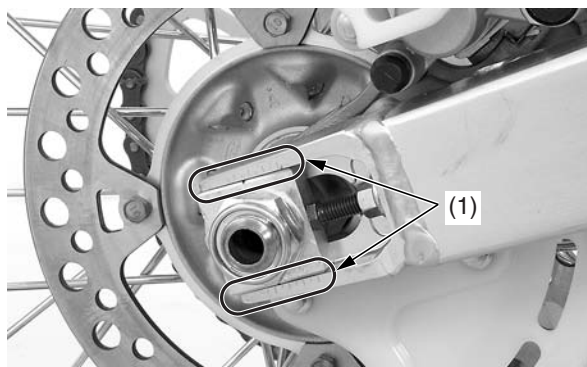

(1) chain adjuster index marks

- Suspend the front wheel above the ground and use the pressure release screws (2) to release the built-up pressure (in excess of normal atmospheric pressure: 0 psi) in the fork tubes. This pressure is caused by normal fork action while riding. (If you are riding at higher altitude, remember that fork pressure of 0 at sea level will increase as elevation increases.)

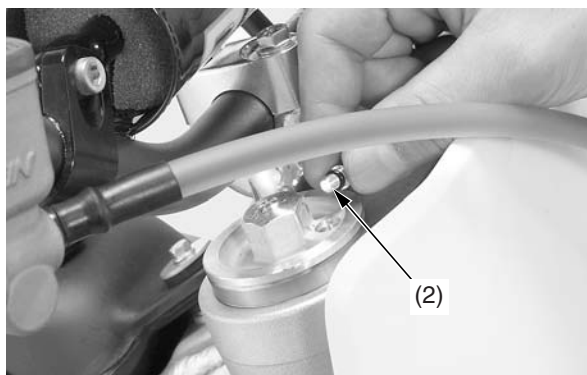


(2) pressure release screw

- Be sure the fuel and oil is mixed well by agitating it thoroughly before pouring pre-mix into the fuel tank.

⚠ WARNING

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

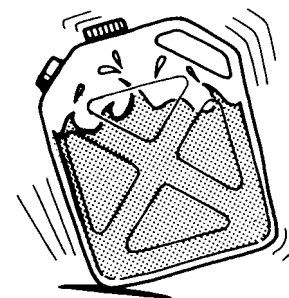

After Competition Maintenance


It is important to the long term performance of your CR to practice a consistent maintenance program. Right after the event is a good time to begin your next maintenance cycle.

After Race Lubrication

Apply a light coating of rust-inhibiting oil to the drive sprocket and any steel portions of the chassis or engine where the paint has worn away. This will prevent rusting of the exposed metal. Apply rust-inhibiting oil more heavily if the event was particularly wet or muddy. Take care to avoid spraying any oil near the disc brakes or the disc rotors.

Remove the drive chain, clean it, and lubricate the chain and sprockets. Be sure the chain is wiped clean and is dry before applying the chain lube.

Take care to prevent catching your fingers between the chain and sprockets.

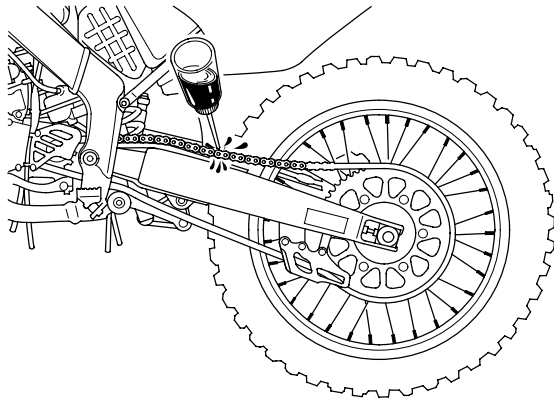

Routine Cleaning

If your CR is only slightly dirty, it is best to clean it by hand with the aid of a stiff bristled nylon brush and some clean rags.


Take care to prevent catching your fingers between the chain and sprockets.

A variety of reasonably priced cleaning brushes are available from variety, drug, food, and hardware stores. Some of these brushes are extremely useful in removing dirt from the many tight contours of the metal pieces of your CR. Avoid using stiff, abrasive brushes on the plastic or rubber parts.

If your CR was exposed to sea air or salt water, rinse it as soon as possible after the event, dry it, and apply a spray lubricant to all metal parts.

If you decide to wash your CR or use cleaners, refer to *Appearance Care* (page 78).


Maintenance Component Locations

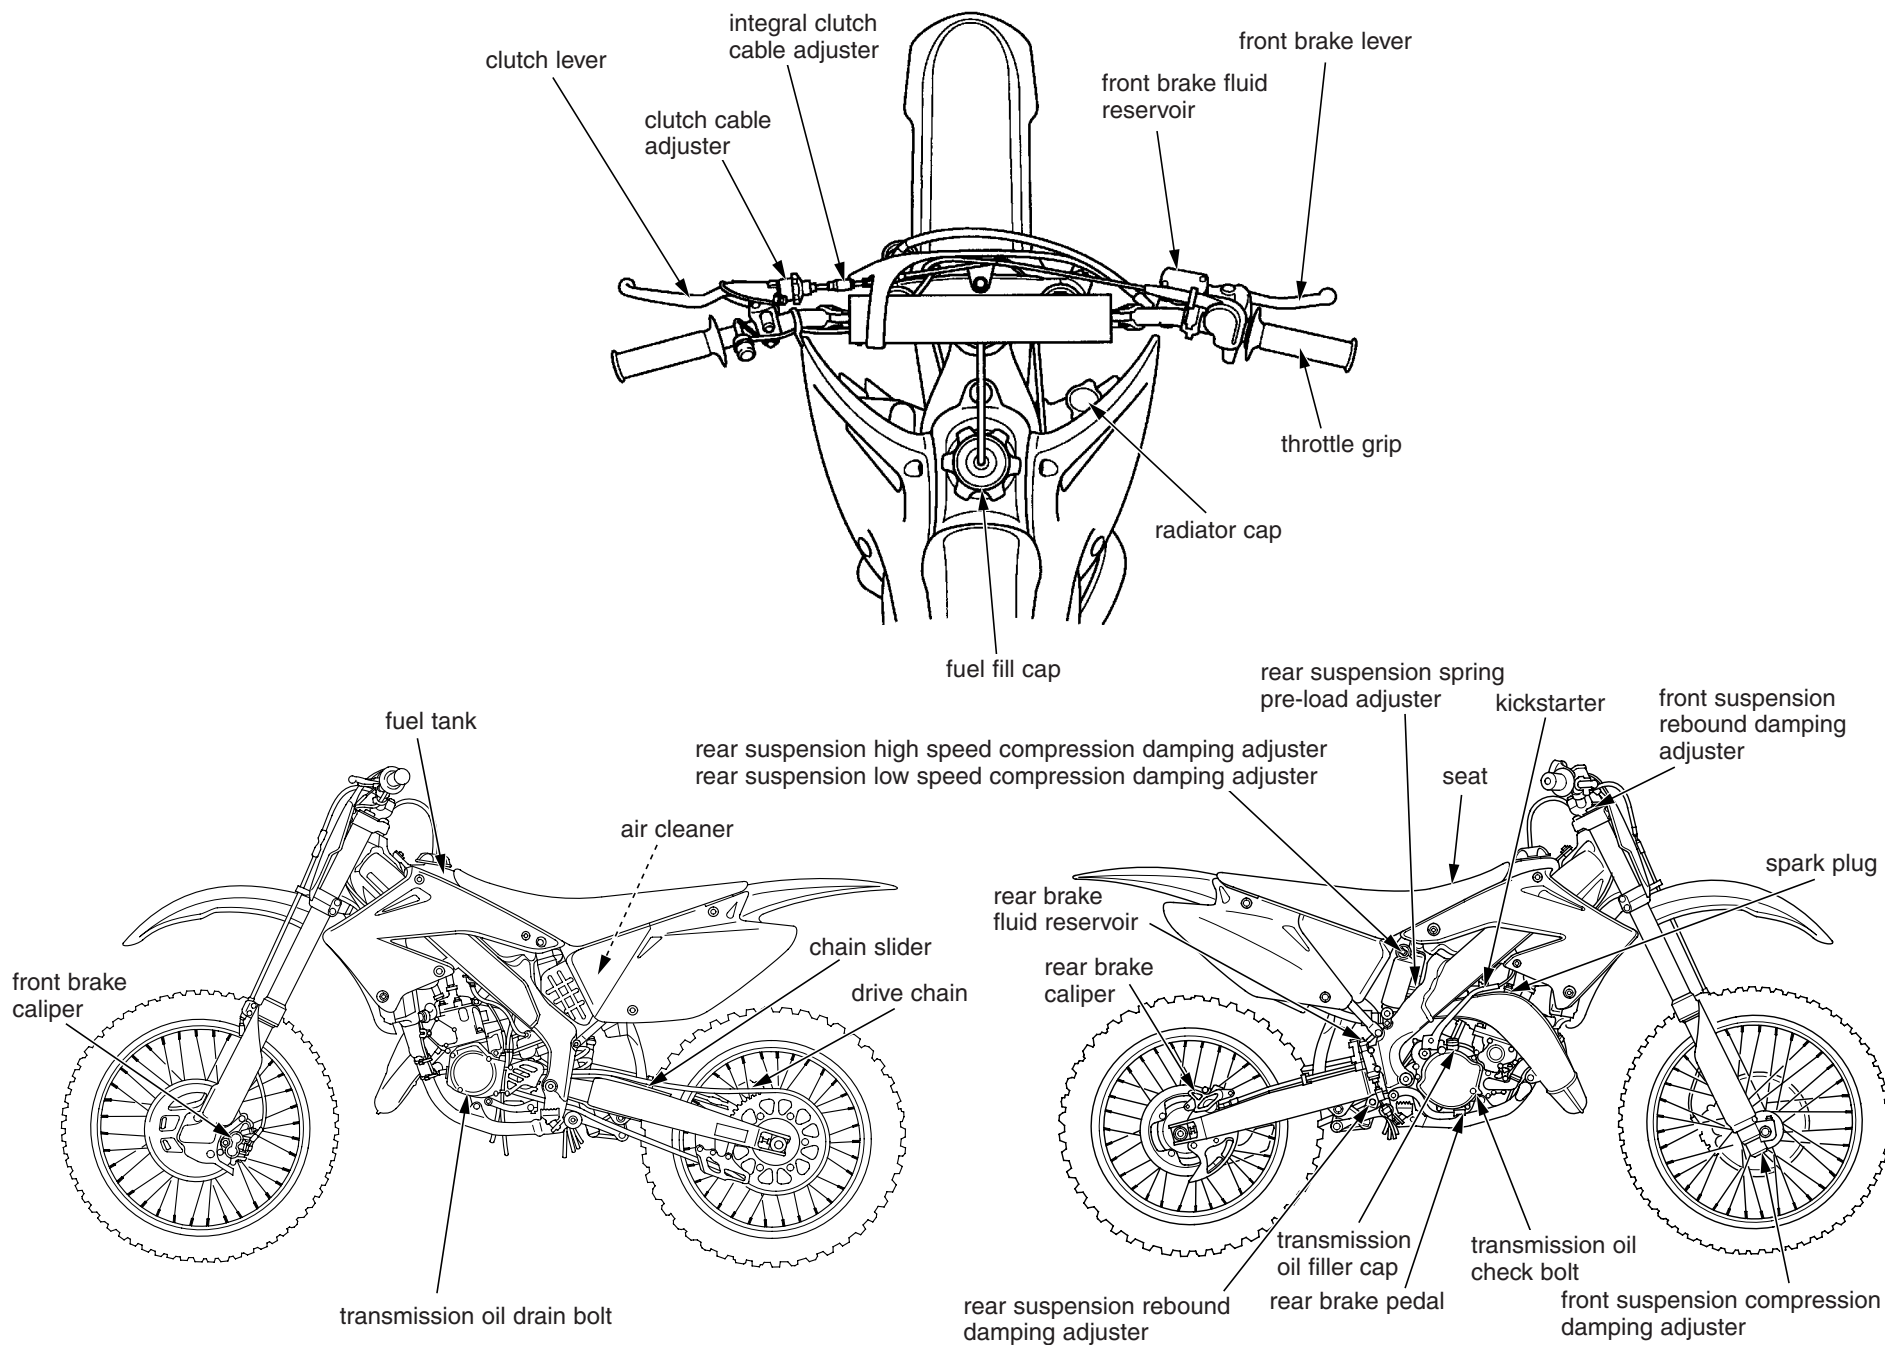

Refer to *Safety Precautions* on page 19.

Removal

1. Remove the seat bolts (1) and collars (2).
2. Slide the seat (3) back.

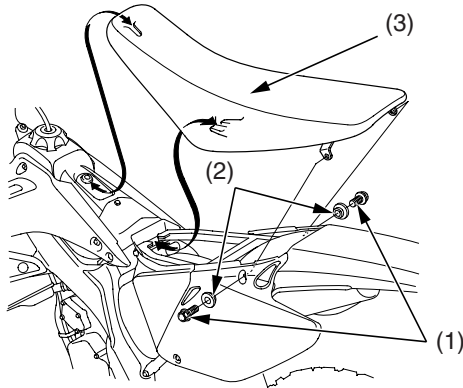


(1) seat bolts
(2) collars

(3) seat

Installation

1. Slide the seat front prong (4) onto the seat bracket (5) and the seat rear prong (6) onto the tabs (7) by pushing down and forward on the seat in each of these areas.
2. Install the collars and tighten the seat bolts to the specified torque:
20 lbf·ft (27 N·m, 2.8 kgf·m)

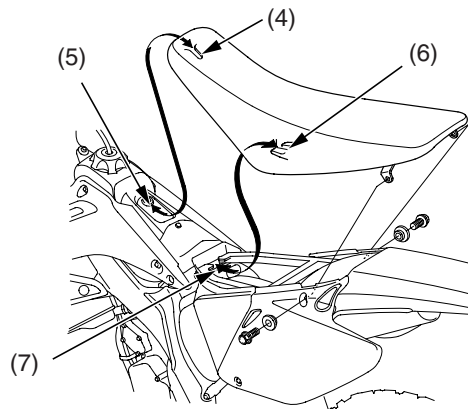


(4) seat front prong
(5) seat bracket
(6) seat rear prong
(7) tabs

Fuel Tank Removal

Refer to *Safety Precautions on page 19.*


Removal

1. Turn the fuel valve (1) OFF.

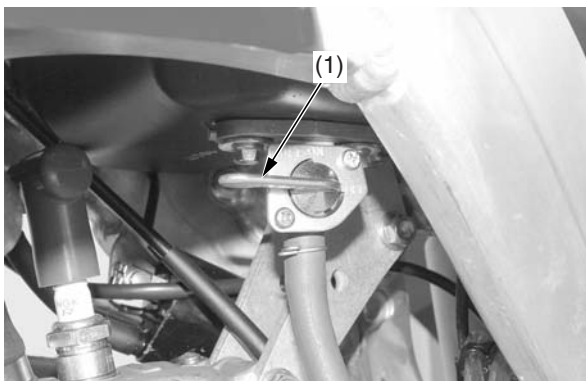


(1) fuel valve

2. Remove the seat (page 29).
3. Remove the shroud A bolts/collars (2).
4. Remove the shroud B bolts/collars (3) and shrouds (4).

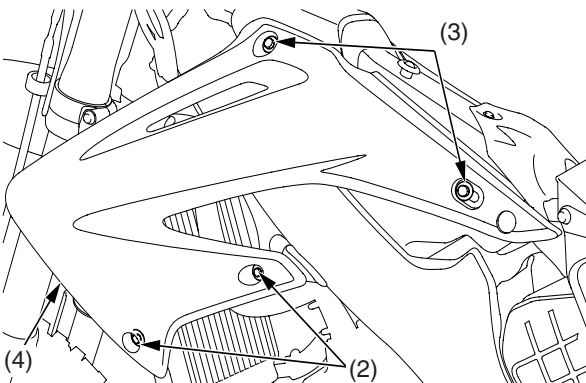

- (2) shroud A bolts/collars
(3) shroud B bolts/collars
(4) shrouds

5. Pull the breather tube (5) out of steering stem nut.
6. Unhook the air cleaner case cover (6).
7. Unhook and remove the fuel tank band (7).
8. Remove the fuel tank bolt (8).

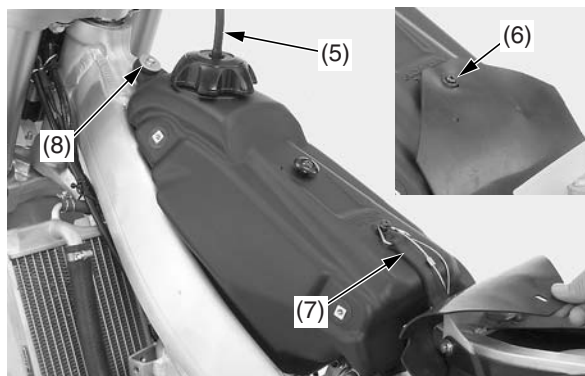


- (5) breather tube
(6) air cleaner case cover
(7) fuel tank band
(8) fuel tank bolt

9. Disconnect the fuel line (9) from the fuel valve (1).
10. Remove the fuel tank.

⚠ WARNING

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.


- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

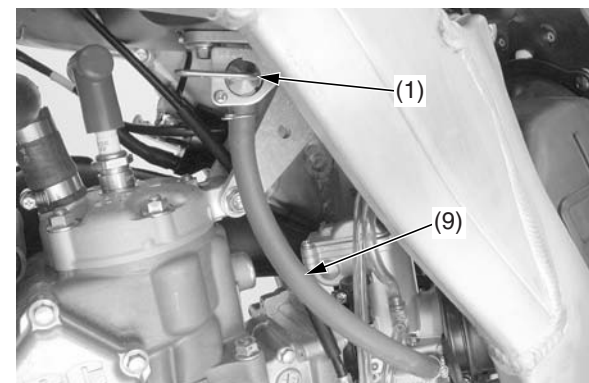

- (1) fuel valve
(9) fuel line


Installation

1. Install the fuel tank on the frame.
2. Connect the fuel line (1) to the fuel valve (2).

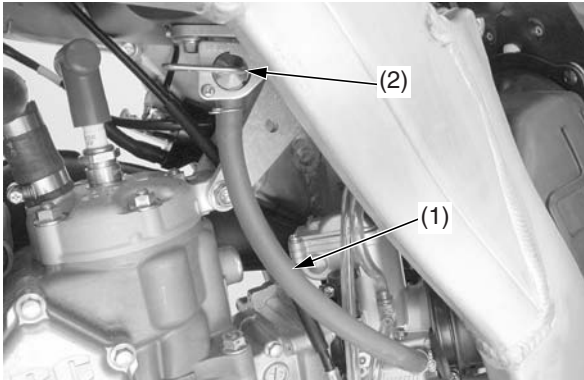


- (1) fuel line
(2) fuel valve

3. Install the fuel tank bolt (3).
4. Hook the fuel tank band (4).
5. Hook the air cleaner case cover (5).
6. Put the breather tube (6) in the steering stem nut.

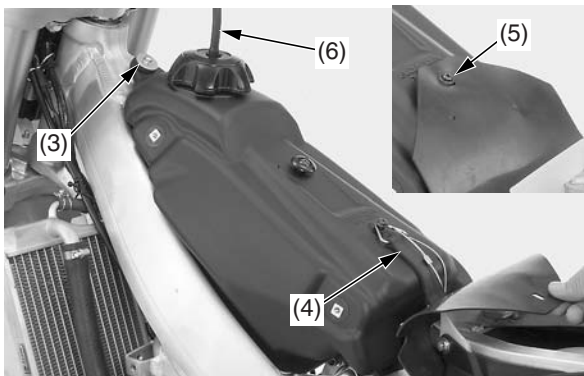

- (3) fuel tank bolt
(4) fuel tank band
(5) air cleaner case cover
(6) breather tube

7. Install the shrouds (7) and shroud B bolts/collars (8).
8. Install the shroud A bolts/collars (9).

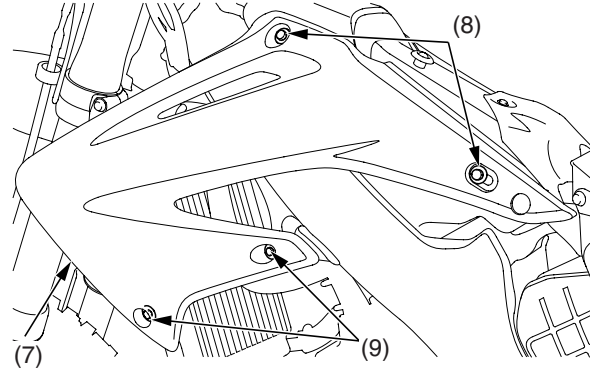

- (7) shrouds
(8) shroud B bolts/collars
(9) shroud A bolts/collars


9. Install the seat (page 29).

Subframe Removal

Refer to *Safety Precautions* on page 19.


Removal

1. Remove the seat (page 29).
2. Remove the right side cover (1) by removing the bolt/collar (2).

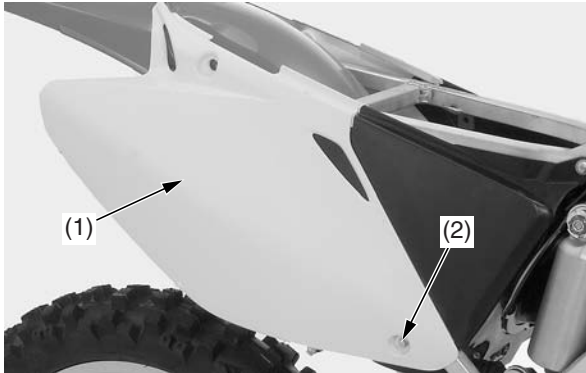


- (1) right side cover
(2) bolt/collar

3. Remove the bolt/washer (3) and silencer (4).

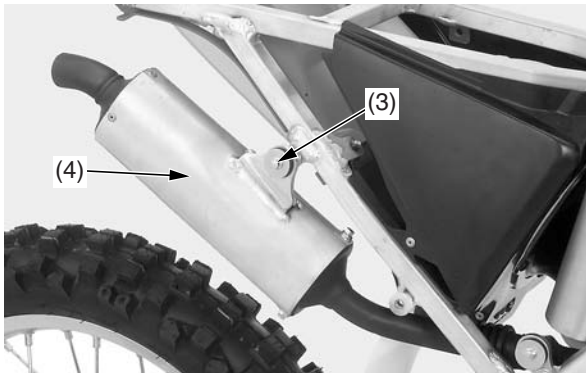


- (3) bolt/washer
(4) silencer

4. Loosen the screw (5) on the air cleaner connecting tube clamp (6).

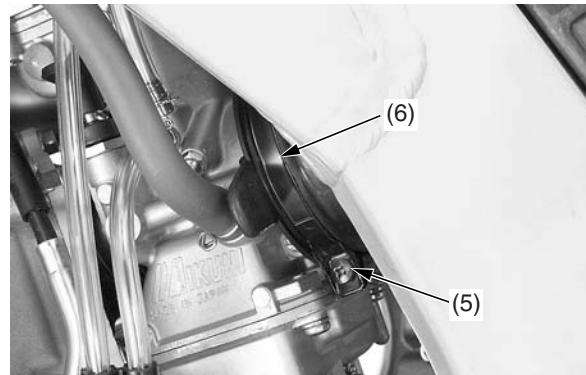

- (5) screw
(6) connecting tube clamp


5. Remove the lower subframe mounting bolts (7) and upper subframe mounting bolt (8).
6. Remove the subframe (9) by pulling it straight backward.

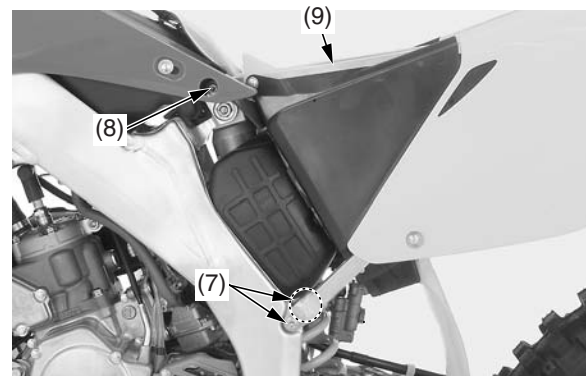

- (7) lower subframe mounting bolts
(8) upper subframe mounting bolt
(9) subframe


Installation

1. Loosely attach the upper and lower ends of the subframe to the mainframe while connecting the air cleaner connecting tube to the carburetor.
2. Tighten the screw (1) on the connecting tube clamp (2).

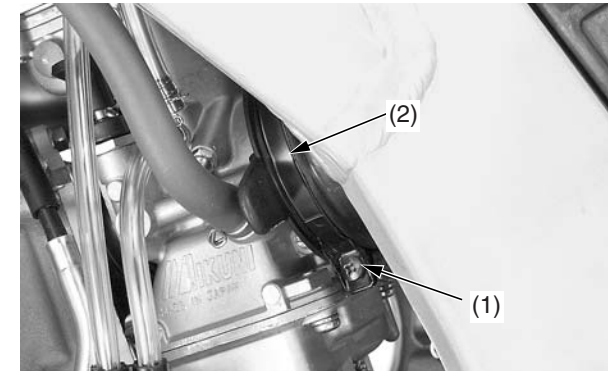


- (1) screw
(2) connecting tube clamp

3. Align the subframe (3) with the rear wheel and install the upper subframe mounting bolt (4) and lower subframe mounting bolts (5).
4. Tighten the upper subframe mounting bolt to the specified torque:
22 lbf·ft (30 N·m, 3.1 kgf·m)
5. Tighten the lower subframe mounting bolts to the specified torque:
22 lbf·ft (30 N·m, 3.1 kgf·m)

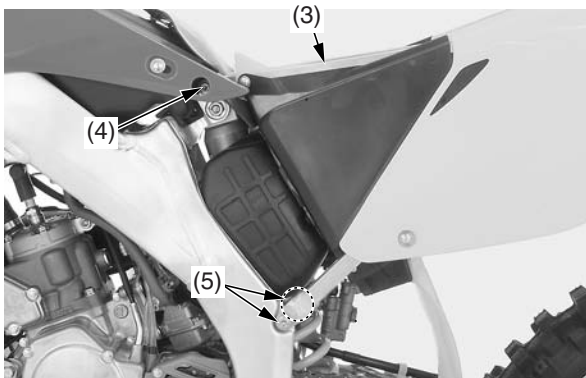


- (3) subframe
(4) upper subframe mounting bolt
(5) lower subframe mounting bolts

6. Connect the silencer (6) to the expansion chamber with the sealing rubber.
7. Install and tighten the bolt/washer (7).

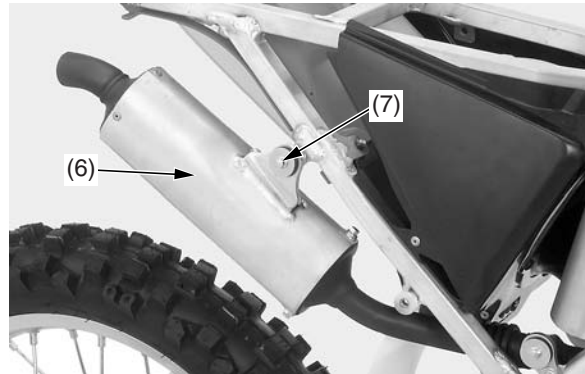

- (6) silencer (7) bolt/washer

8. Install the right side cover (8) and bolt/collar (9).

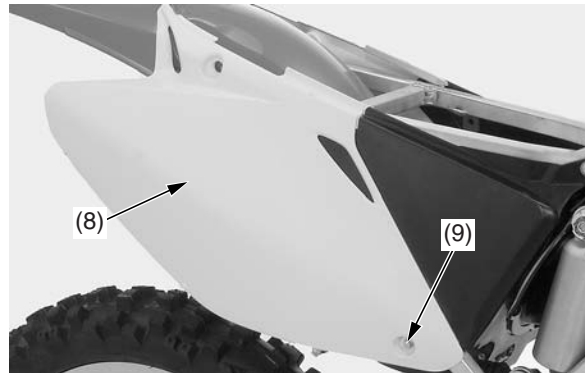

- (8) right side cover (9) bolt/collar

9. Install the seat (page 29).

Fuel System

Refer to *Safety Precautions* on page 19.

Fuel Recommendation

| | |
|--------------------|----------------|
| Type | unleaded |
| Pump Octane Number | 91 (or higher) |

We recommend that you use unleaded fuel because it produces fewer engine deposits and extends the life of exhaust system components.

Your engine is designed to use any gasoline that has a pump octane number of 91 or higher. Gasoline pumps at service stations normally display the pump octane number. For information on the use of oxygenated fuels, see page 128.

Use of lower octane gasoline can cause persistent “pinging” or “spark knock” (a louder rapping noise) which, if severe, can lead to engine damage. (Light pinging experienced while operating under a heavy load, such as climbing a hill, is no cause for concern.)

If pinging or spark knock occurs at a steady engine speed under normal load, change brands of gasoline. If pinging or spark knock persists, consult your Honda dealer.

Never use stale or contaminated gasoline. Avoid getting dirt, dust, or water in the fuel tank.

Premix gasoline and oil in a ratio of 32:1. Prepare the fuel mixture in a clean container, and shake until thoroughly mixed before filling the fuel tank.

USE PRO HONDA HP2 2-STROKE OIL (32:1) OR AN EQUIVALENT.

NOTICE

Too much oil will cause excessive smoking and spark plug fouling. Too little oil will cause engine damage or premature wear.


Vegetable oils separate from gasoline more easily than mineral oils, especially in cold weather. It is advisable to use mineral oil when ambient temperatures below 32°F (0°C) are expected.

If the gasoline-oil mixture is left standing in a container for a long period of time, lubricity will deteriorate. Use the mixture within 24 hours-or the time period recommended by the oil manufacturer.

Once an oil container is opened, the oil must be used within one month, since oxidation may occur.


32:1 FUEL OIL MIXING CHART

| Fuel 32 | | Oil 1 | |
|------------|--------|----------|-----------------|
| Gallons | Liters | Ounces | cm ³ |
| 0.5 | 1.89 | 2.0 | 59 |
| 1.0 | 3.79 | 4.0 | 118 |
| 1.5 | 5.68 | 6.0 | 177 |
| 2.0 | 7.57 | 8.0 | 237 |
| 2.5 | 9.46 | 10.0 | 296 |
| 3.0 | 11.36 | 12.0 | 355 |
| 3.5 | 13.24 | 14.0 | 414 |
| 4.0 | 15.14 | 16.0 | 473 |
| 4.5 | 17.03 | 18.0 | 532 |
| 5.0 | 18.92 | 20.0 | 591 |
| 5.5 | 20.81 | 22.0 | 651 |
| 6.0 | 22.71 | 24.0 | 710 |

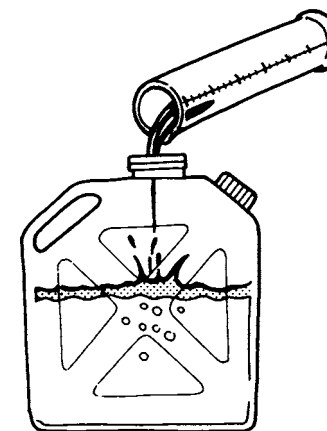

Refueling Procedure

Fuel Tank Capacity:
2.0 US gal (7.7 ℓ)

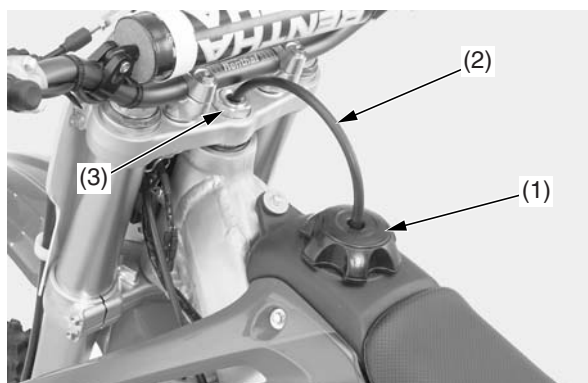

(1) fuel fill cap
(2) breather tube
(3) steering stem nut


1. To open the fuel fill cap (1), pull the breather tube (2) out of the steering stem nut (3). Turn the fuel fill cap counterclockwise and remove it.
2. Add fuel until the level reaches the bottom of the filler neck. Avoid overfilling the tank. There should be no fuel in the filler neck.
3. Close the fuel fill cap and insert the breather tube to the steering stem nut.

⚠ WARNING

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

Fuel Line

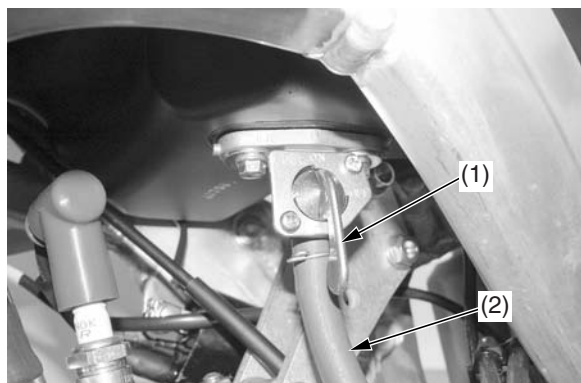

(1) fuel valve
(2) fuel line


1. Check the fuel valve (1) and fuel filter for contamination.
2. Check for leaks.
3. Check the fuel line (2) for cracks, deterioration, damage, or leakage. Replace the fuel line, if necessary.
4. Check for interference between the frame and tank and adjust if necessary.

Fuel Filter

The fuel filter is included in the fuel valve mounted on the bottom left side of the fuel tank. Dirt accumulated in the filter will restrict the flow of the fuel to the carburetor.

To service the fuel filter:

1. Drain the fuel from the fuel tank into an approved gasoline container. Disconnect the fuel line.
2. Remove the fuel valve (1) by removing the bolts (2). Wash the fuel filter (3) in high flash-point cleaning solvent.

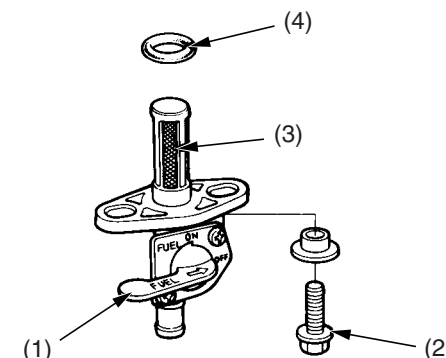

(1) fuel valve
(2) bolt
(3) fuel filter
(4) O-ring

3. Reassemble the fuel valve in the reverse order of removal. Make sure the O-ring (4) is in place. Install the fuel valve in the fuel tank. Refill the fuel tank. Attach the fuel line and turn the fuel valve to ON; check for leaks.

Transmission Oil

Refer to *Safety Precautions* on page 19.


Using the proper oil, and regularly checking, adding, and changing oil will help extend the service life of the transmission and clutch. Even the best oil wears out. Changing oil helps get rid of dirt and deposits. Operating the engine with old or dirty oil can damage your engine. Running the engine with insufficient oil can cause serious damage to the transmission.

Oil Recommendation


| | |
|---|--|
| Type | transmission oil or 4-stroke engine oil |
| API classification (4-stroke engine oil only) | SG or higher except oils labeled as energy conserving on the circular API service label |
| Viscosity (weight) | SAE 10W-40 |
| JASO T903 standard (4-stroke engine oil only) | MA |
| others | without friction modifiers as molybdenum additives |
| suggested oil* | Pro Honda HP Trans oil, Pro Honda GN4 or HP4 (without molybdenum additives) 4-stroke engine oil or an equivalent |

* Suggested 4-stroke engine oils are equal performance to SJ oils that are not labeled as energy conserving on the circular API service label.

- Your CR does not need oil additives. Use the recommended oil.
- Do not use oils with graphite or molybdenum additives. They may adversely affect clutch operation.
- Do not use API SH or higher 4-stroke engine oils displaying a circular API “energy conserving” service label on the container. They may affect lubrication and clutch performance.

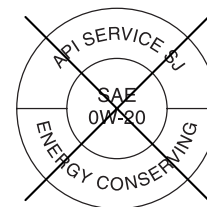


NOT RECOMMENDED

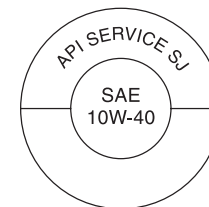

OK

Other viscosities shown in the following chart may be used when the average temperature in your riding area is within the indicated range.

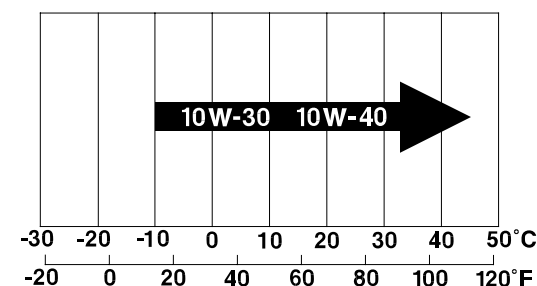


JASO T 903 standard

The JASO T 903 standard is an index for engine oils for 4-stroke motorcycle engines.

There are two classes: MA and MB.


Oil conforming to the standard is labeled on the oil container. For example, the following label shows the MA classification.

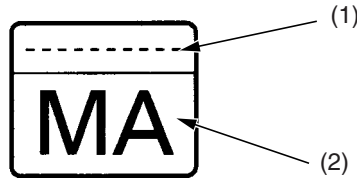

PRODUCT MEETING JASO T 903
COMPANY GUARANTEEING THIS MA PERFORMANCE:

- (1) code number of the sales company of the oil
- (2) oil classification

Checking & Adding Oil

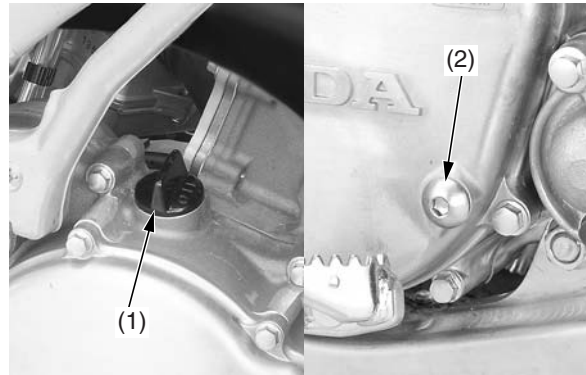

- (1) oil filler cap
- (2) oil check bolt

1. Run the engine for three minutes, then shut it off.
2. Wait three minutes after shutting off the engine to allow the oil to properly distribute itself in the clutch and transmission.
3. Support the CR in an upright position on a level surface.
4. Remove the oil filler cap (1) and oil check bolt (2) from the right crankcase cover. A small amount of oil should flow out of the check bolt hole. Allow any excess oil to flow out of the check bolt hole.
5. If no oil flows out of the check bolt hole, add oil slowly through the oil filler hole until oil starts to flow out of the check bolt hole. Install the oil check bolt and filler cap.
6. Repeat steps 1 - 4.
7. After inspecting the oil level or adding oil, tighten the oil check bolt and filler cap securely and oil check bolt to the specified torque:
7 lbf·ft (10 N·m, 1.0 kgf·m)


Replacing Transmission Oil

1. Run the engine for three minutes, then shut it off.
2. Support the CR in an upright position on a level surface.
3. Remove the oil filler cap from the right crankcase cover.
4. Place an oil drain pan under the engine to catch the oil. Then remove the drain bolt (1).
5. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 118).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

6. After the oil has drained completely, install the drain bolt with a new sealing washer and tighten it to the specified torque:
21 lbf·ft (29 N·m, 3.0 kgf·m)
7. Add the recommended oil:
0.60 US qt (0.57 ℓ) at oil change
8. Check the oil level by following the steps in *Checking & Adding Oil*.

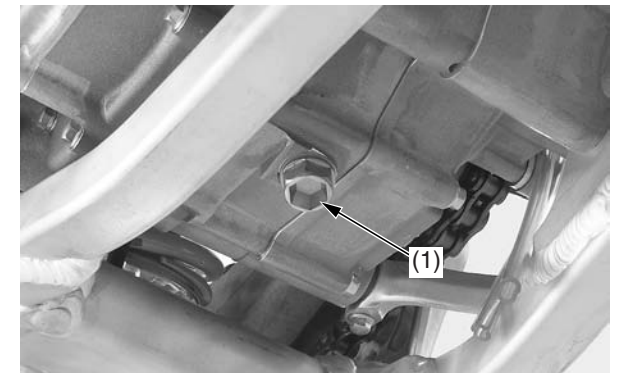

- (1) oil drain bolt

Coolant

Your CR's liquid cooling system dissipates engine heat through the coolant jacket that surrounds the cylinder and cylinder head.

Maintaining the coolant will allow the cooling system to work properly and prevent freezing, overheating, and corrosion.

Coolant Recommendation

Use Pro Honda HP coolant or an equivalent high quality ethylene glycol antifreeze containing corrosion protection inhibitors specifically recommended for use in aluminum engines. Check the antifreeze container label.

Use only distilled water as a part of the coolant solution. Water that is high in mineral content or salt may be harmful to the aluminum engine.

NOTICE

Using coolant with silicate inhibitors may cause premature wear of radiator pump seals or blockage of radiator passages. Using tap water may cause engine damage.

The factory provides a 50/50 solution of antifreeze and water in this motorcycle. This coolant solution is recommended for most operating temperatures and provides good corrosion protection.


Decreasing the concentration of antifreeze to less than 40% will not provide proper corrosion protection.

Increasing the concentration of antifreeze is not recommended because it decreases cooling system performance. Higher concentrations of antifreeze (up to 60%) should only be used to provide additional protection against freezing. Check the cooling system frequently during freezing weather.

Checking & Adding Coolant

Refer to *Safety Precautions* on page 19.

1. With the engine cold, remove the radiator cap (1) and check coolant level. The coolant level is correct when it is at the bottom of the radiator filler neck.

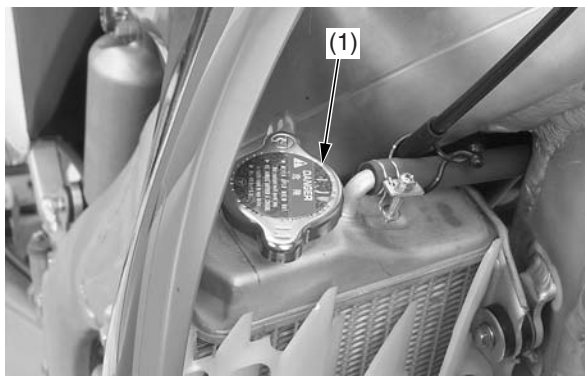

(1) radiator cap

⚠ WARNING

Removing the radiator cap while the engine is hot can allow the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.



2. Add coolant up to the filler neck if the level is low.
Inspect the coolant level before each outing. A coolant loss of 0.7 - 2.0 US oz (20 - 60 cm³) through the over flow tube is normal. If coolant loss is more than this, inspect the cooling system.
Capacity:
1.06 US qt (1.00 ℓ) at disassembly
0.98 US qt (0.93 ℓ) at coolant change
3. Install the radiator cap securely.

NOTICE

If the radiator cap is not installed properly, it will cause excessive coolant loss and may result in overheating and engine damage.

Cooling System Inspection

1. Check the cooling system for leaks (see the Honda Service Manual for troubleshooting of leaks).
2. Check water hoses (1) for cracks, deterioration, and clamp bands for looseness.
3. Check the radiator mount for looseness.
4. Make sure the overflow tube (2) is connected and not clogged.
5. Check the radiator fins for clogging.
6. Check the water leakage check hole (4) below the water pump for leakage. Make sure the hole remains open. If water leaks through the check hole, the water pump seal is damaged. If oil leaks through the check hole, the transmission oil seal is damaged. See the Honda Service Manual or consult your Honda dealer for replacing the water pump seal or the transmission oil seal. Both seals should be replaced at the same time.

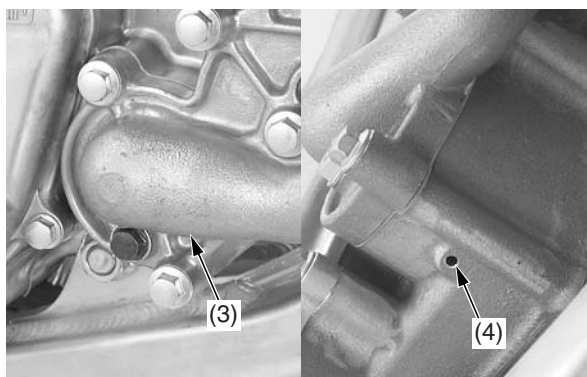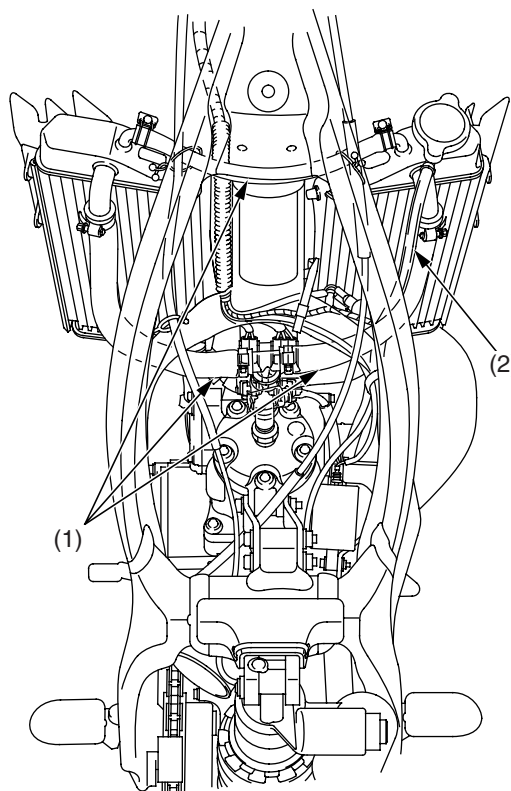

(1) water hoses
(2) overflow tube

(3) water pump cover
(4) water leakage check hole

Coolant Replacement

Refer to *Safety Precautions* on page 19.

Coolant should be replaced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual.

⚠ WARNING

Removing the radiator cap while the engine is hot can allow the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

To properly dispose of drained coolant, refer to *You & the Environment*, page 114.

NOTICE

Improper disposal of drained fluids is harmful to the environment.

Air Cleaner

Refer to *Safety Precautions* on page 19.

The air cleaner uses polyurethane inner and outer pieces which can't be separated.

A dirty air cleaner will reduce engine power.

Proper air cleaner maintenance is very important for off-road vehicles. A dirty, water-soaked, worn-out, or defective air cleaner will allow dirt, dust, mud, and other impurities to pass into the engine.

Service the air cleaner more frequently if you ride in unusually wet or dusty areas. Your Honda dealer can help you determine the correct service interval for your riding conditions.

Your CR's air cleaner has very specific performance requirements. Use a new genuine Honda air cleaner specified for your model or an air cleaner of equal quality.


Proper air cleaner maintenance can prevent premature engine wear or damage, expensive repairs, low engine power, poor gas mileage, and spark plug fouling.

NOTICE

Improper or lack of proper air cleaner maintenance can cause poor performance and premature engine wear.


Cleaning

1. Remove the seat (page 29).
2. Loosen the air cleaner retaining bolt (1).
3. Remove the air cleaner assembly (2).

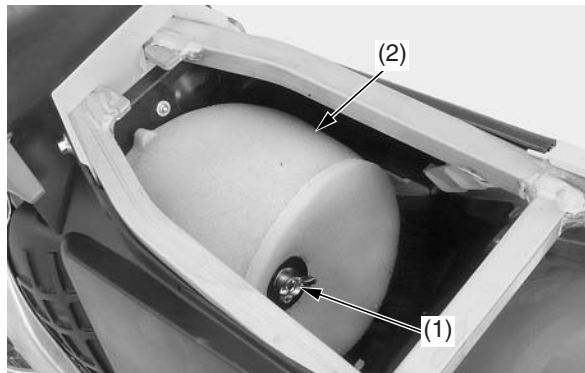

- (1) air cleaner retaining bolt
(2) air cleaner assembly


4. Remove the air cleaner (3) from the air cleaner holder (4).

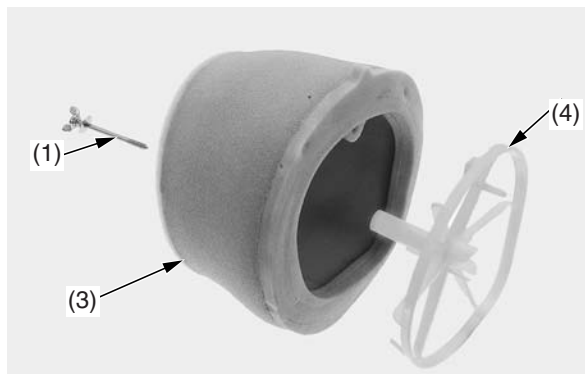

- (1) air cleaner retaining bolt
(3) air cleaner
(4) air cleaner holder

5. Wash the air cleaner in clean non-flammable cleaning solvent. Then wash in hot, soapy water, rinse well, and allow to dry thoroughly. The air cleaner is made in two pieces: inner and outer which can't be separated.
6. Clean the inside of the air cleaner housing.
7. Allow the air cleaner to dry thoroughly. After drying, soak the air cleaner in clean Pro Honda Foam Filter Oil or an equivalent air cleaner oil. Apply air cleaner oil to the entire surface, inner and outer, and rub it with both hands to saturate the air cleaner with oil. Squeeze out excess oil.


8. Apply a thin coat of Honda White Lithium Grease or an equivalent, to the sealing surface.
9. Assemble the air cleaner and holder. Insert the pin (5) to the hole (6), and the air cleaner retaining bolt through the assembly.

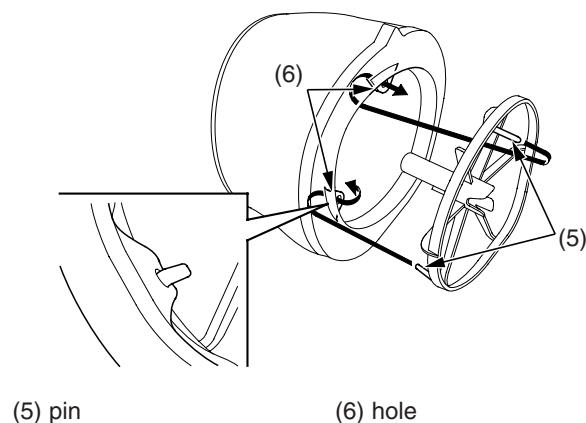

10. Insert the pin in the air cleaner housing hole (7) and install the assembly into the air cleaner housing (8) while aligning the tab (9) on the air cleaner and the reference mark (10) on the air cleaner housing. Tighten the retaining bolt securely. Carefully position the sealing flange of the element to prevent dirt intrusion.

NOTICE

Improper installation of the air cleaner assembly may allow dirt and dust to enter the engine and cause rapid wear of the piston rings and cylinder.

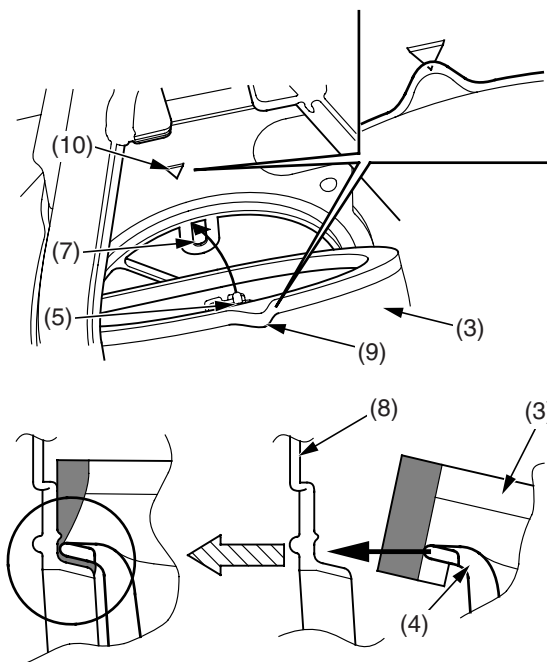

- | | |
|------------------------------|-------------------------|
| (3) air cleaner | (8) air cleaner housing |
| (4) air cleaner holder | (9) tab |
| (5) pin | (10) reference mark |
| (7) air cleaner housing hole | |


11. Reinstall the seat (page 29), making sure it is securely attached.

Throttle

Refer to *Safety Precautions* on page 19.

Throttle Freeplay

RIGHT SIDE

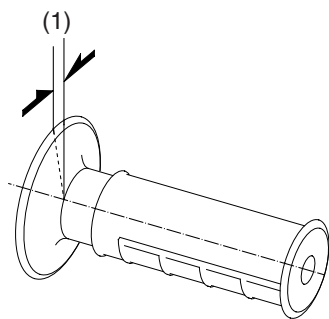

(1) freeplay

Inspection


Check freeplay (1).

Freeplay: 1/8 - 3/16 in (3 - 5 mm)

If necessary, adjust to the specified range.

Upper Adjustment

Minor adjustments are generally made with the upper adjuster.

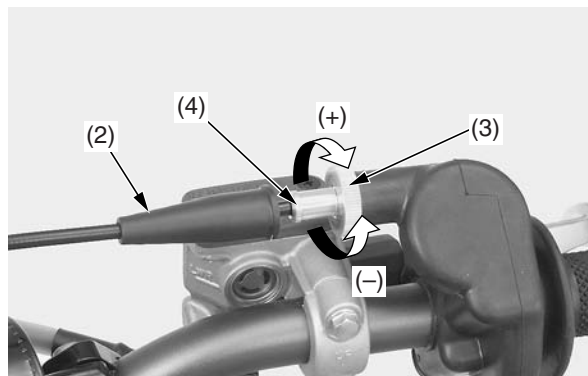


(2) dust cover
(3) lock nut
(4) upper adjuster

(+) increase
(-) decrease

1. Pull the rubber dust cover (2) back.
2. Loosen the upper lock nut (3) on the throttle cable mechanism.
3. Turn the upper adjuster (4).
Turning the adjuster in direction (–) will decrease freeplay and turning it in direction (+) will increase freeplay.
4. Tighten the lock nut. Return the dust cover to its normal position.
5. After adjustment, check for smooth rotation of the throttle grip from fully closed to fully open in all steering positions.
If the adjuster is threaded out near its limit or the correct freeplay cannot be reached, turn the adjuster all the way in and back out one turn. Tighten the lock nut, install the dust cover and make the adjustment with the lower adjuster.

Lower Adjustment

The lower adjuster is used for major freeplay adjustment, such as after replacing the throttle cables or removing the carburetor. It is also used if you cannot get the proper adjustment with the upper adjuster.

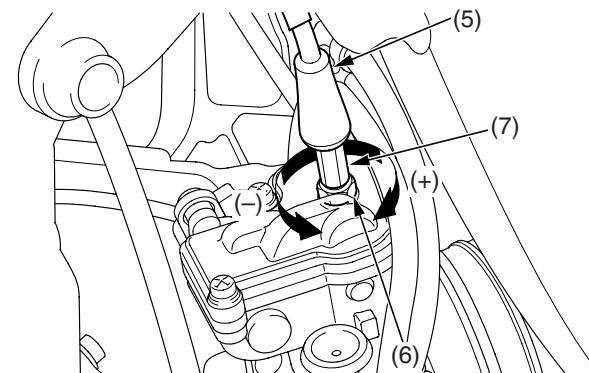


(5) rubber cap
(6) lock nut
(7) adjuster

(+) increase
(-) decrease

1. Pull up the rubber cap (5) on the carburetor cap and loosen the lock nut (6).
2. Turn the adjuster (7) in direction (–) to decrease freeplay, and in direction (+) to increase freeplay.
3. Tighten the lock nut.
4. Reinstall the rubber cap securely after adjustment.
5. Operate the throttle grip to ensure that it functions smoothly and returns completely.

If you can't get the freeplay within the specified range, contact your Honda dealer.

Throttle Inspection

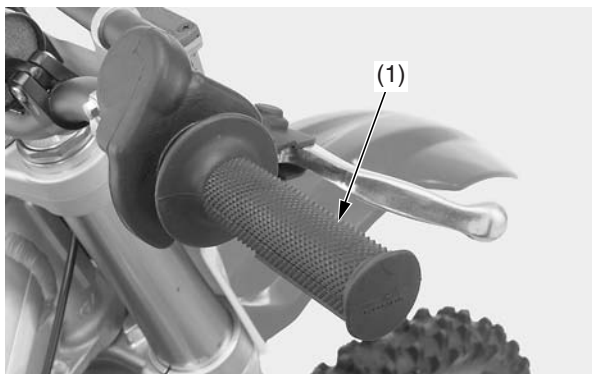

(1) throttle grip

1. Check that the throttle assembly is positioned properly and the securing bolts are tight.
2. Check for smooth rotation of the throttle grip (1) from fully open to fully closed in all steering positions. If there is a problem, see your Honda dealer.
3. Inspect the condition of the throttle cable from the throttle grip down to the carburetor. If the cable is kinked or chafed, have it replaced.
4. Check the cables for tension or stress in all steering positions.
5. Lubricate the cable with a commercially-available cable lubricant to prevent premature rust and corrosion.


Clutch System

Refer to *Safety Precautions* on page 19.

Clutch Lever Adjustment

The distance between the tip of the clutch lever and the grip may be adjusted.

Make sure to adjust the clutch lever freeplay after the clutch lever position adjustment or clutch cable is disconnected.

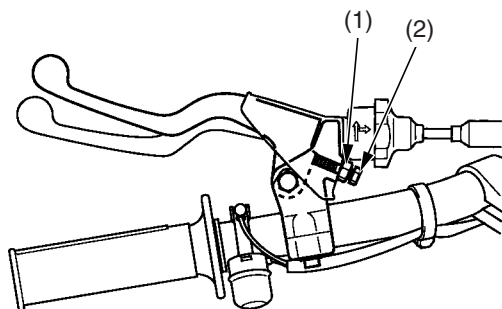


(1) lock nut

(2) adjuster

1. Loosen the lock nut (1).
2. To position the clutch lever farther away from the handgrip, turn the adjuster (2) counterclockwise. To position the clutch lever closer to the handgrip, turn the adjuster clockwise.
3. Tighten the lock nut.

4. Turn the cable end adjuster (3) in direction (+) until it seats lightly and then turn it out 5 turns.


Cable end adjuster:

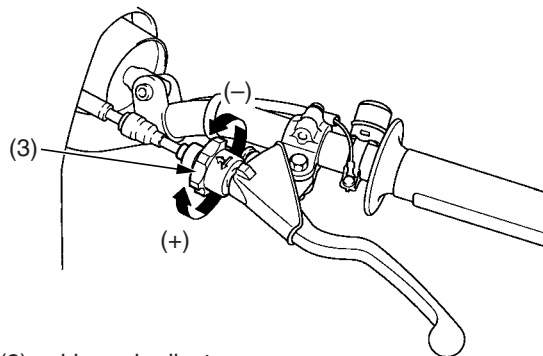

- (3) cable end adjuster
(+) increase freeplay
(-) decrease freeplay

5. Loosen the lock nut (4) and turn the integral cable adjuster (5) to adjust the clutch lever freeplay $3/8 - 3/4$ in (10 – 20 mm) at the tip of lever. Tighten the lock nut.


Integral cable adjuster:

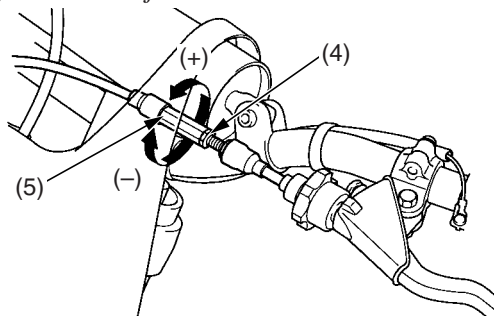

- (4) lock nut
(5) integral cable adjuster
(+) increase freeplay
(-) decrease freeplay

6. Adjust the cable end adjuster for minor adjustment.

Clutch Lever Freeplay

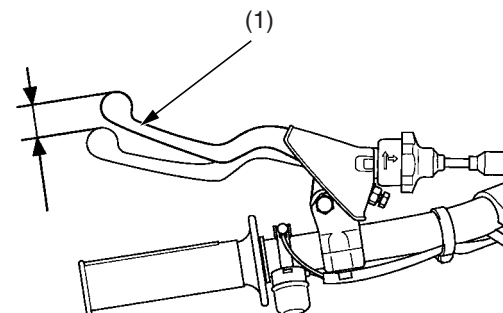

(1) clutch lever

Inspection

Check freeplay:


Freeplay: $3/8 - 3/4$ in (10 – 20 mm)

If necessary, adjust to the specified range. Improper freeplay adjustment can cause premature clutch wear.

Cable End Adjustment

Minor adjustments are generally made with the clutch cable end adjuster.

Cable end adjuster:

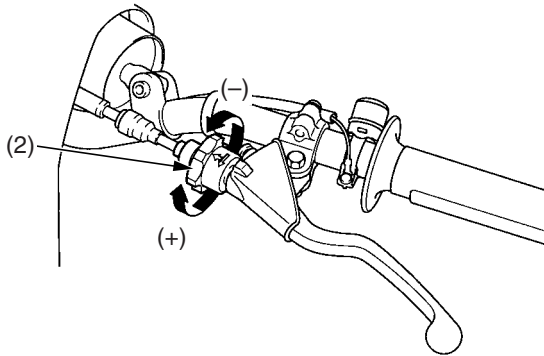

(2) cable end adjuster
(+) increase freeplay
(-) decrease freeplay


Turning the cable end adjuster (2) in direction (+) will increase freeplay and turning it in direction (-) will decrease freeplay.

If the adjuster is threaded out near its limit or the correct freeplay cannot be reached, turn the adjuster all the way in and back out one turn and make the adjustment with the integral cable adjuster.

Integral Cable Adjustment

The integral cable adjuster is used if the cable end adjuster is threaded out near its limit — or the correct freeplay cannot be obtained.

Integral cable adjuster:

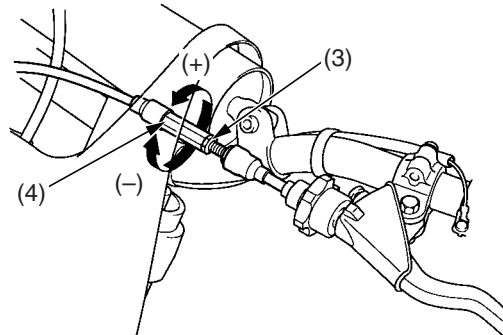

(3) lock nut
(4) integral cable adjuster
(+) increase freeplay
(-) decrease freeplay

1. Turn the cable end adjuster in direction (+) until it seats lightly and then turn it out 5 turns.
2. Loosen the lock nut (3).
3. Turn the integral cable adjuster (4) to obtain the specified freeplay $3/8 - 3/4$ in (10 – 20 mm).
4. Tighten the lock nut. Check the adjustment.
5. Start the engine, pull the clutch lever in, and shift into gear. Make sure the engine does not stall and the motorcycle does not creep. Gradually release the clutch lever and open the throttle. Your CR should move smoothly and accelerate gradually.

If you can't get proper adjustment, or the clutch does not work properly, the cable may be kinked or worn, or the clutch discs may be worn. See your Honda dealer or refer to the official Honda Service Manual (page 134).

Other Inspections & Lubrication

- Check that the clutch lever assembly is positioned properly and the securing bolts are tight.
- Check the clutch cable for kinks or signs of wear. If necessary, have it replaced.
- Lubricate the clutch cable with a commercially-available cable lubricant to prevent premature wear and corrosion.


Clutch Operation

1. Check for smooth clutch lever operation. If necessary, lubricate the clutch lever pivot or clutch cable.
2. Check the clutch cable for deterioration, kinks, or damage.

Clutch System

Clutch Cover/Disc/Plate Removal

1. Drain the transmission oil (page 37).
2. Remove the rear brake pedal (1) by removing its pivot bolt (2).

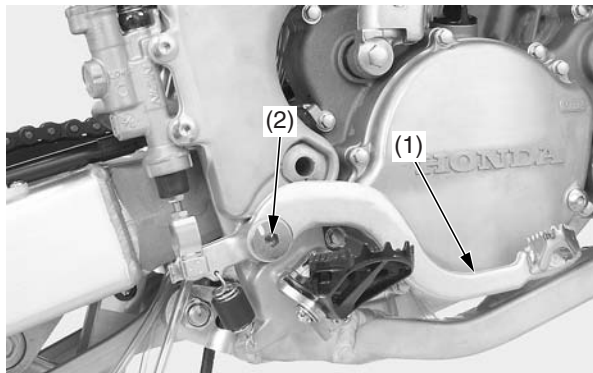

(1) rear brake pedal (2) pivot bolt


3. Remove the five clutch cover bolts (3) and clutch cover (4).



(3) clutch cover bolts (4) clutch cover

4. Remove the five clutch spring bolts (5) and clutch springs.
Loosen the bolts in a crisscross pattern in 2 or 3 progressive steps.

5. Remove the clutch pressure plate (6).

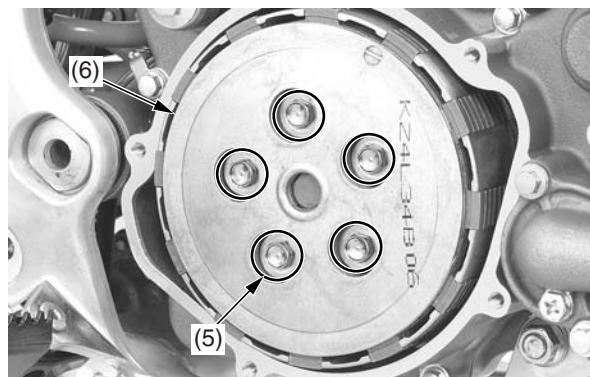


(5) clutch spring bolts
(6) clutch pressure plate

6. Remove the clutch lifter (7) and clutch lifter rod (8).

7. Remove the eight clutch discs and seven clutch plates (9).

Turn the lifter bearing plate of the clutch lifter with your finger. The bearing plate should turn smoothly and quietly. Discard the clutch lifter if the bearing plate does not turn smoothly.

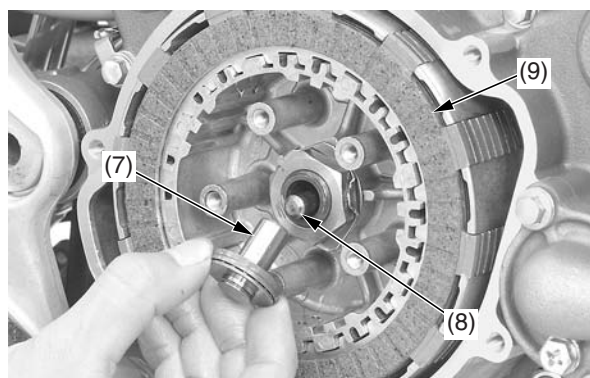


(7) clutch lifter (8) clutch lifter rod
(9) clutch discs and plates

Clutch Disc Inspection


Replace the clutch discs (1) if they show signs of scoring or discoloration. Measure the thickness of each clutch disc. Service Limit: 0.112 in (2.85 mm)

Replace the clutch discs and clutch plates as an assembly.

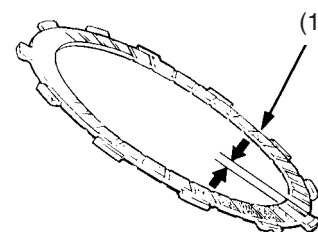

(1) clutch disc

Clutch Spring Inspection

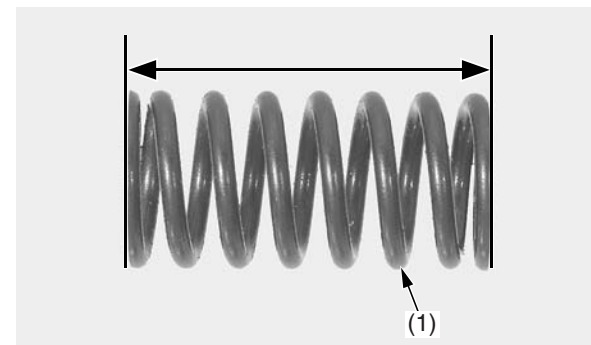


(1) clutch spring

Measure the free length of each spring. Service Limit: 1.39 in (35.2 mm)

Replace the clutch springs as a set if any one of them is beyond the service limit or if the clutch plates have been burnt/heat discolored.


Clutch Disc/Plate/Cover Installation

1. Coat the clutch plates (1) and discs (2) with transmission oil.
2. Install the eight clutch discs and seven clutch plates alternately, starting with a clutch disc.

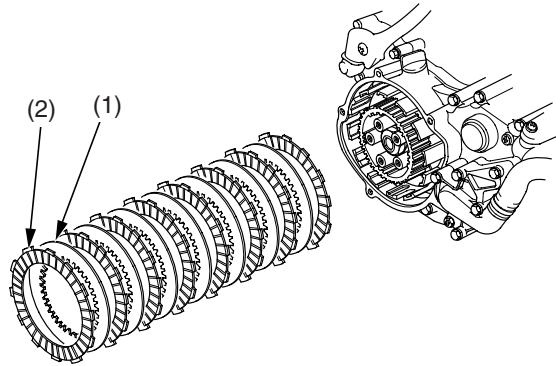


(1) clutch plates (2) clutch discs

3. Apply grease to the clutch lifter rod (3).
4. Insert the clutch lifter rod into the mainshaft.
5. Install the clutch lifter (4) onto the rod.

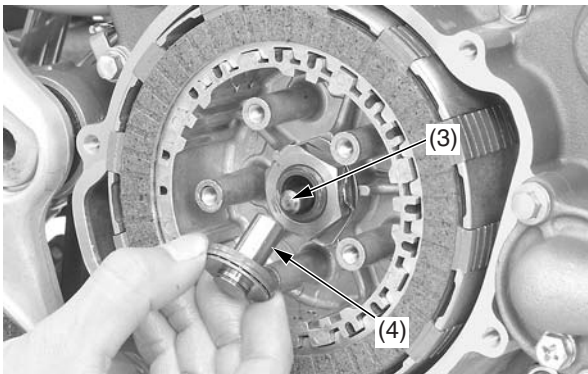


(3) clutch lifter rod (4) clutch lifter

6. Install the clutch pressure plate (5).
7. Install the five clutch springs and bolts (6).
8. Tighten the bolts in a crisscross pattern in 2 or 3 steps to the specified torque:
7 lbf-ft (10 N-m, 1.0 kgf-m)

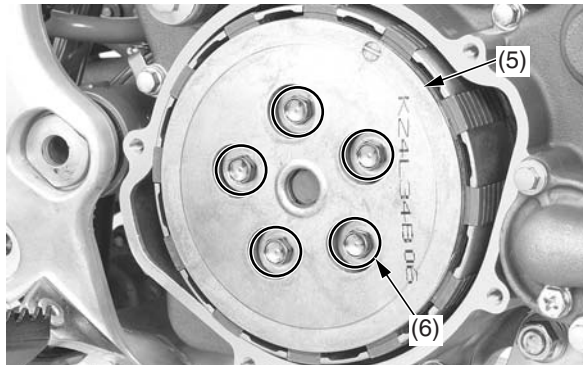


(5) clutch pressure plate (6) clutch spring bolts

9. Install a new O-ring (7) in the groove of the clutch cover (8).
10. Install the cover by tightening the five cover bolts to the specified torque:
7 lbf-ft (10 N-m, 1.0 kgf-m)

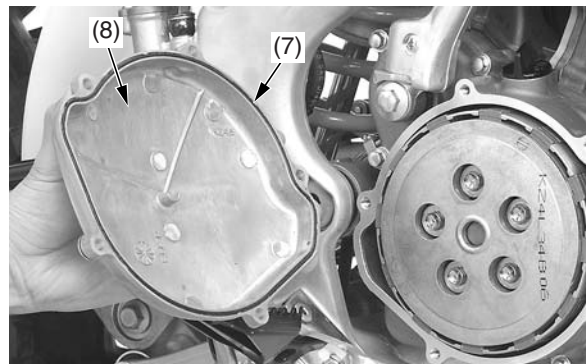

(7) O-ring (8) clutch cover

11. Lubricate the rear brake pedal pivot (9) and pivot bolt (10) with Honda Lithium Grease or an equivalent and install the pivot bolt. Tighten the bolt to the specified torque:
27 lbf-ft (36 N-m, 3.7 kgf-m)
Connect the brake pedal return spring (11) if it was removed.

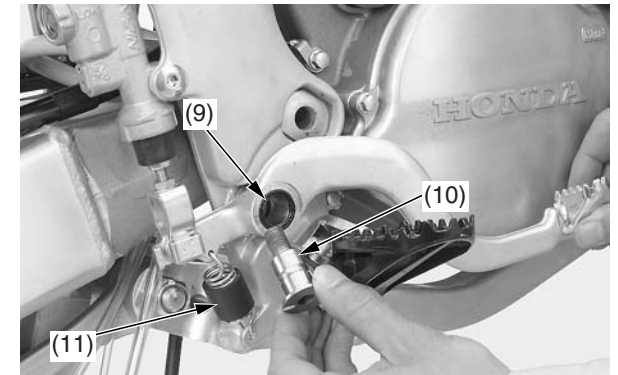

(9) brake pedal pivot (10) pivot bolt (11) return spring

12. Add the transmission oil (page 37).

Spark Plug

Refer to *Safety Precautions* on page 19.

Spark Plug Recommendation

The recommended standard spark plug is satisfactory for most racing conditions.


| | |
|----------|-------------------------------------|
| Standard | BR9EG (NGK) or W27ESR-V (DENSO) |
| Optional | BR9EV (NGK) or W27ESR-ZU (DENSO) |

Use only the recommended type of spark plugs in the recommended heat range.

NOTICE

Using a spark plug with an improper heat range or incorrect reach can cause engine damage. Using a non-resistor spark plug may cause ignition problems.


1. Measure spark plug gap (1) with a feeler gauge, and adjust by carefully bending the side electrode (2).
The recommended spark plug gap is:
0.020 - 0.024 in (0.5 - 0.6 mm)
2. Check the electrode for wear or deposits, the gasket (3) for damage, and the insulator for cracks.

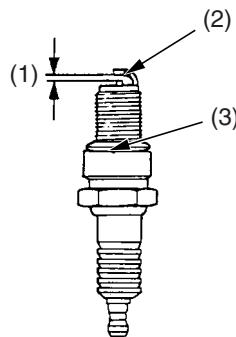

- (1) plug gap
(2) side electrode
(3) sealing gasket

3. To obtain accurate spark plug readings, accelerate up to speed on a straightaway. Push the engine stop button and disengage the clutch by pulling the lever in.
If you're using a new plug, ride for at least ten minutes before taking a plug reading; a brand-new plug will not color initially.
4. Coast to a stop, then remove and inspect the spark plug. The porcelain insulator around the center electrode should appear tan or medium gray.
If the electrodes appear burnt, or the insulator is white or light gray (lean) or the electrodes and insulator are black or fouled (rich), there is a problem elsewhere (page 106). Check the fuel/oil mixture, carburetor and fuel system, and ignition timing.

5. Tighten the spark plug (4):
 - If the old plug is good:
1/8 turn after it seats.
 - If installing a new plug, tighten it twice to prevent loosening:
 - a) First, tighten the plug:
NGK: 3/4 turn after it seats.
DENSO: 1/2 turn after it seats.
 - b) Then loosen the plug.
 - c) Next, tighten the plug again:
1/8 turn after it seats.

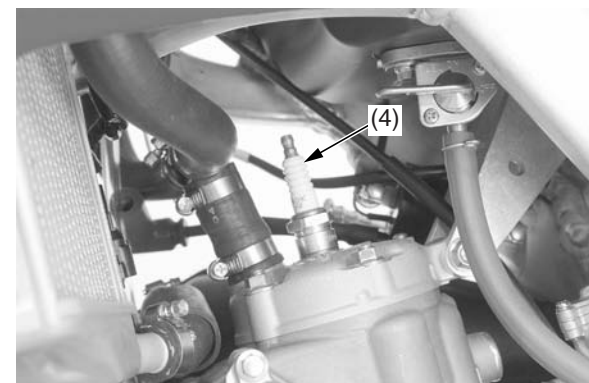

(4) spark plug

Refer to *Safety Precautions* on page 19.

Cylinder Head Removal


Clean the area above the engine before disassembly to prevent dirt falling into the engine.

1. Drain the radiator coolant (page 39).
2. Turn the fuel valve OFF.
3. Remove the seat and fuel tank (page 29, 30).
4. Loosen the water hose clamp and remove the water hose (1) from the cylinder head.
5. Disconnect the spark plug cap (2) and remove the spark plug.




(1) water hose (2) spark plug cap

6. Remove the upper engine hanger plate bolts and nuts (3), then remove the clamp (4) and hanger plates (5).

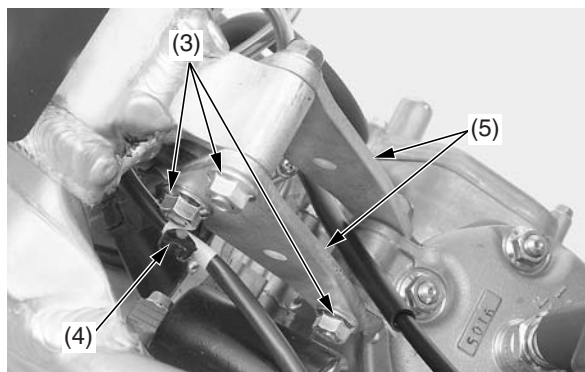


(3) hanger plate bolts and nuts (5) hanger plates
(4) clamp

7. Remove the five cylinder head nuts (6) using the technique described below, and remove the cylinder head (7).
To avoid warping the cylinder head, use a crisscross pattern to loosen each nut about 1/4, then remove the nuts.

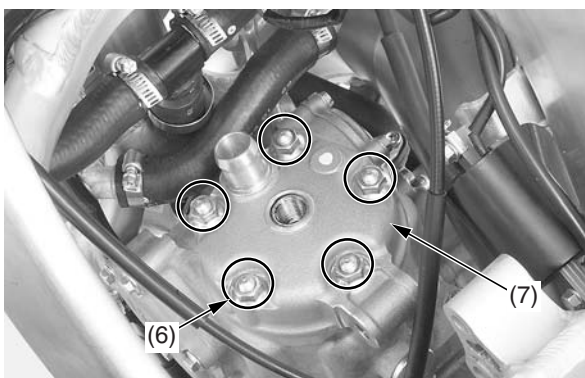

(6) cylinder head nuts (7) cylinder head

8. Remove the cylinder head gasket (8) and dowel pins (9).

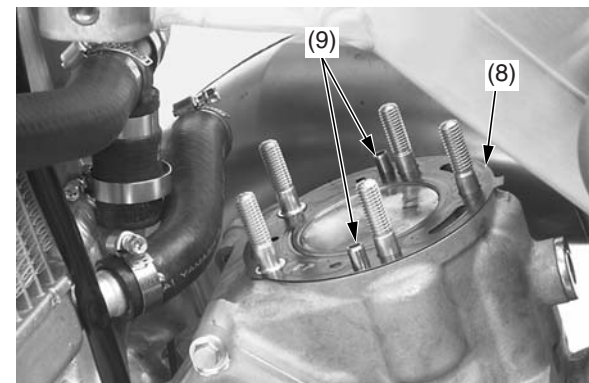


(8) gasket (9) dowel pins

Cylinder System

Cylinder Removal

1. Remove the expansion chamber (page 75).
2. Remove the bolts (1), exhaust pipe joint (2) and gasket.

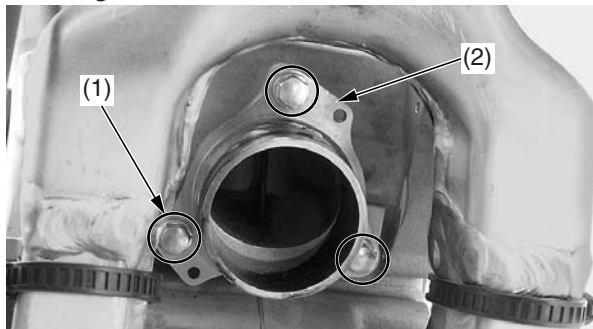


(1) bolts (2) exhaust pipe joint

3. Remove the bolts (3), screw (4), right RC cover (5), gasket and grommet (6).
4. Remove the B-clip (7) and setting collar (8), then remove the valve rod (9) from the RC valve arm.


NOTICE

Be careful not to drop the B-clip and collar into the right crankcase.

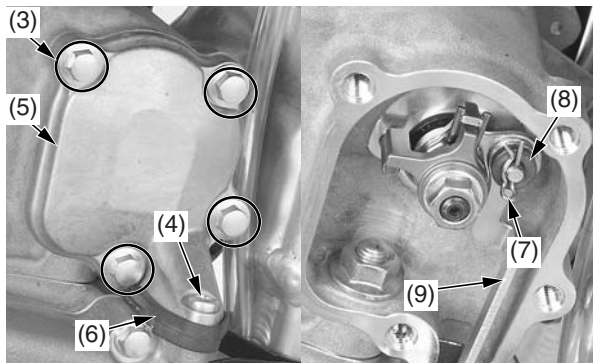


(3) bolts (4) screw (5) right RC cover (6) grommet (7) B-clip (8) setting collar (9) valve rod

5. Remove the bolts (10) and clamp (11).
6. Remove the left RC cover (12) and gasket.

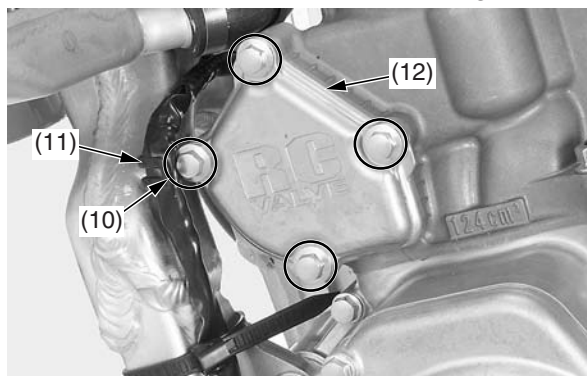


(10) bolts (11) clamp (12) left RC cover

7. Loosen the radiator hose clamp screw (13) and disconnect the radiator hose (14).
8. Remove the radiator shrouds (15) on both sides.
9. Loosen the upper mounting bolts (16) on both sides.
10. Remove the lower mounting bolts (17), then swing the radiator grills (18) forward on both sides.

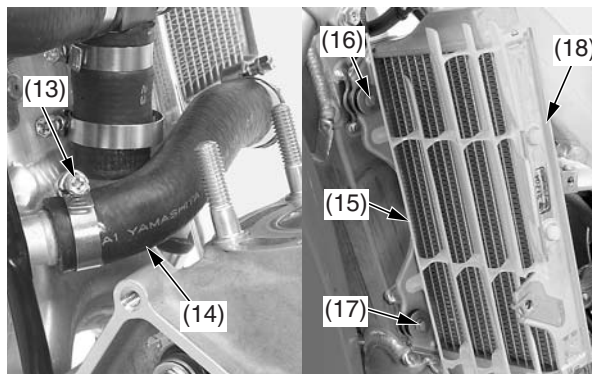


(13) screw (14) radiator hose (15) radiator shroud (16) upper mounting bolt (17) lower mounting bolt (18) radiator grill

11. Remove the cylinder (19) by removing the four flange nuts (20).

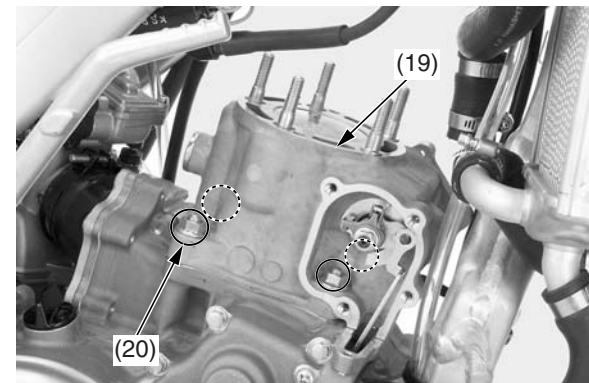

(19) cylinder (20) flange nuts

12. Remove the gasket (21) and dowel pins (22).

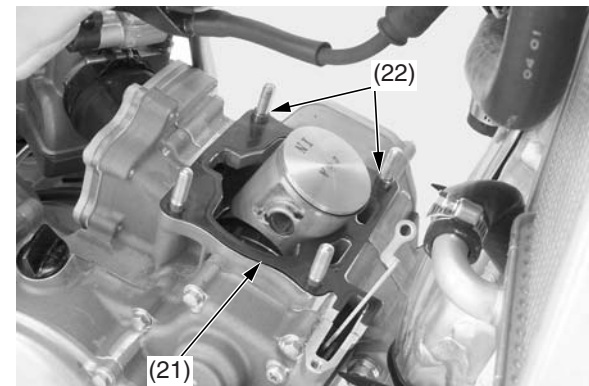


(21) gasket (22) dowel pins

Piston Removal

1. Place the shop towel in the crankcase.
2. Remove the piston pin clips (1) using a pair of needle-nose pliers. Press the piston pin (2) out of the piston (3), and remove the piston.
3. Remove the connecting rod small end bearing (4).

Under racing conditions, the piston and ring should be replaced after 7.5 hours of running. Replace the piston pin and connecting rod small end bearing after 22.5 hours of running.

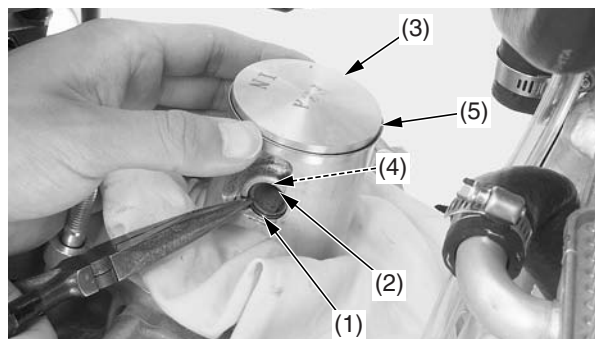

- (1) piston pin clip
(2) piston pin
(3) piston
(4) connecting rod small end bearing
(5) piston ring


4. Spread each piston ring (4) and remove by lifting it up at a point just opposite the gap.

NOTICE

The piston ring may be damaged if the ends are spread too far.


Cylinder Head/Cylinder Decarbonizing

1. Remove the carbon deposits from the cylinder head (1) and piston dome. Take care to avoid scratching the cylinder head piston dome, or the head gasket surface.

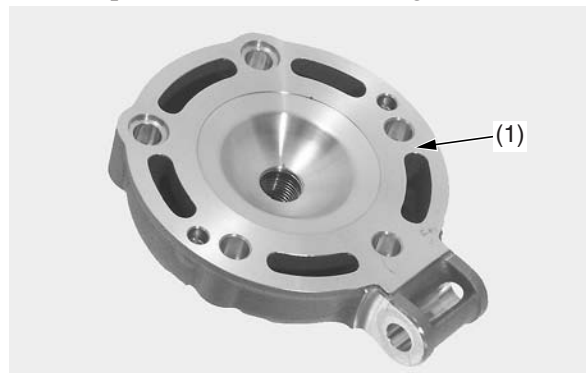

(1) cylinder head

2. Clean carbon deposits from the exhaust port (2) area.

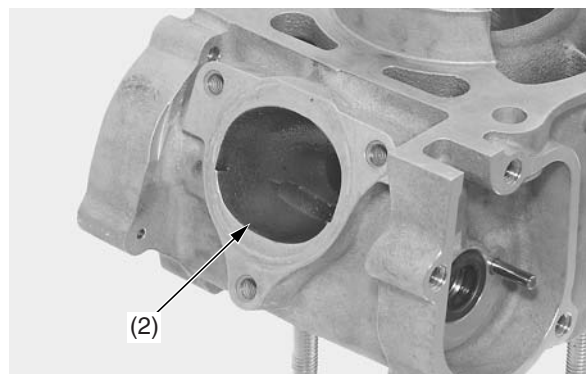

(2) exhaust port


Cylinder/Piston/Piston Pin/Piston Ring Inspection

We recommend you consult the Service Manual or your Honda dealer for correct Service Limit measurements.

Cylinder System

Connecting Rod Inspection

1. Temporarily remove the shop towel.
2. Install the small end bearing (1) and piston pin (2) in the connecting rod small end and check for excessive play while holding the connecting rod.
If it feels loose, replace the piston pin and small end bearing.

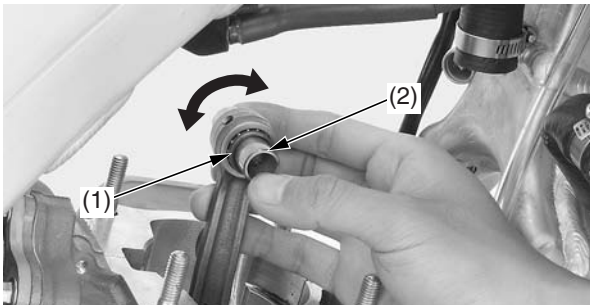


(1) small end bearing (2) piston pin

3. Place the shop towel back in the crankcase.

Cylinder Head Inspection

Check the cylinder head (1) for warpage in diagonal directions with a straight edge (2) and a feeler gauge (3).


Service Limit: 0.002 in (0.05 mm)

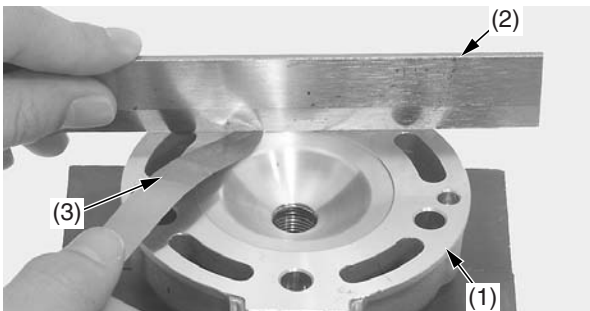

(1) cylinder head (3) feeler gauge
(2) straight edge

Piston Installation


1. Clean the piston ring groove.
2. Lubricate the piston ring and piston ring groove with clean 2-stroke oil.
3. Install the piston ring on the piston with the marks facing up.
Locate the piston ring end gap on the pin in the ring groove.
4. Lubricate the small end bearing and piston pin (1) with clean 2-stroke oil.
5. Install the connecting rod small end bearing, piston and piston pin.
Install the piston with the "IN" mark (2) facing the intake side.
If the "IN" mark is not found on the piston, install the piston with the hole (3) facing the intake side.
6. Install new piston pin clips (4) (Never reuse old clips.)
Take care so that the clips do not fall into the crankcase.
Do not align the piston pin clip end gap with the piston cut-out.

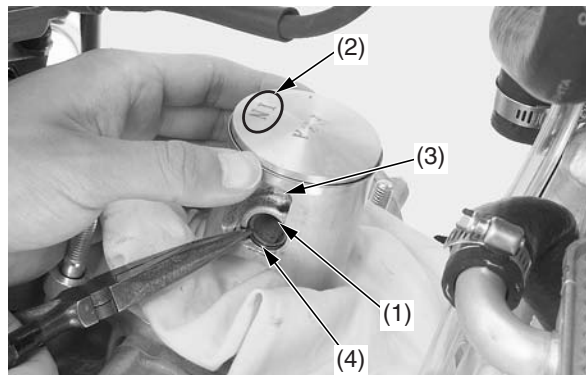

(1) piston pin (3) hole
(2) "IN" mark (4) piston pin clip

Cylinder Installation

1. Clean off any gasket material from the gasket surface of the crankcase, being careful not to let any material fall into the crankcase.
Be careful not to remove any metal from the gasket surface.
2. Remove the shop towel. Do not let any gasket debris fall into the crankcase.
3. Place the new cylinder base gasket (1) and dowel pins (2) on the crankcase.

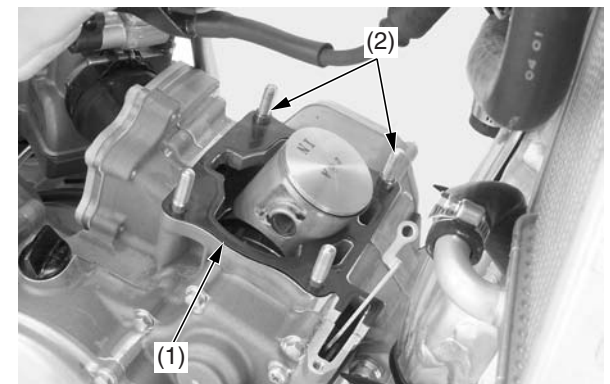


(1) cylinder base gasket (2) dowel pin

4. Lubricate the piston and ring with 2-stroke oil. Align the ring end gap with the piston ring pin (3) in the ring land and slip the cylinder (4) over the piston while compressing the piston ring.

NOTICE


Do not rotate the cylinder, since this may cause the piston ring to snag a cylinder port and break.

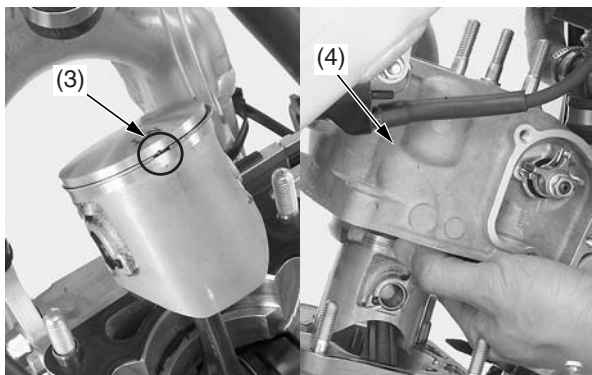

(3) piston ring pin (4) cylinder


Before tightening the cylinder nuts, make sure that there is no clearance between the cylinder and crankcase mating surface.

5. Install the four flange nuts (5) and tighten to the specified torque in a crisscross pattern in 2 or 3 steps:
20 lbf·ft (27 N·m, 2.8 kgf·m)
Be careful not to overtighten the mounting nuts. This is the most common cause for leaks here.

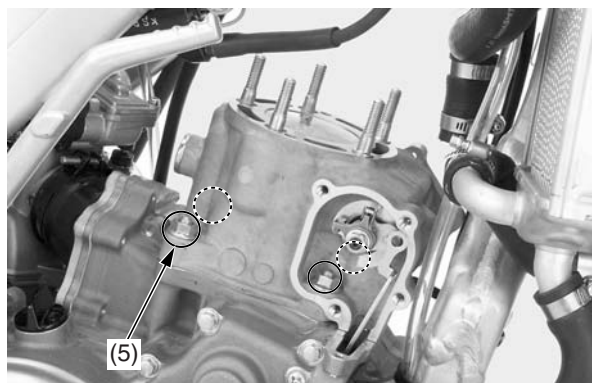

(5) flange nuts


6. Install the RC valve rod (6), setting collar (7) and B-clip (8).
7. Install a new gasket (9) onto the right RC valve cover (10).
8. Install the grommet (11) onto the brim of the right crankcase cover.

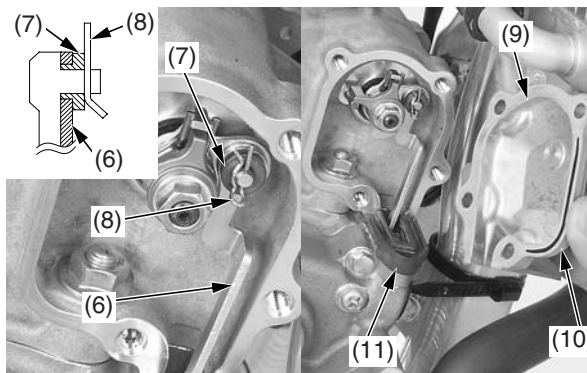

(6) RC valve rod (7) setting collar (8) B-clip (9) gasket (10) right RC valve cover (11) grommet


9. Install the right RC valve cover (10), tighten the bolts (12) and screw (13) to the specified torque.

Right RC valve cover bolt:
9 lbf·ft (12 N·m, 1.2 kgf·m)
Right RC valve cover screw:
1.5 lbf·ft (2 N·m, 0.2 kgf·m)

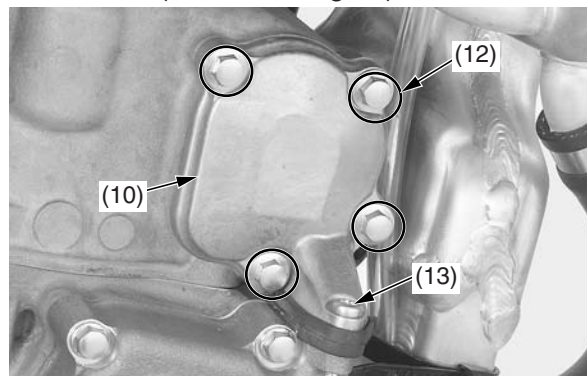


(10) right RC valve cover (12) bolts (13) screw

10. Return the radiator grills (14) to the original positions on both sides.
11. Tighten the radiator mounting bolts (15), then install the radiator shrouds (16) on both sides.
12. Connect the radiator hose (17) and tighten hose clamp screw (18).

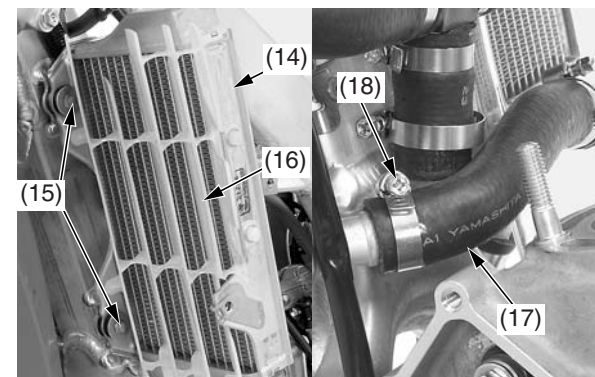

(14) radiator grill (15) radiator mounting bolts (16) radiator shroud (17) radiator hose (18) screw

13. Install a new gasket (19) onto the left RC valve cover (20).
14. Install the left RC valve cover and clamp (21), tighten the bolts (22) to the specified torque:
9 lbf·ft (12 N·m, 1.2 kgf·m)

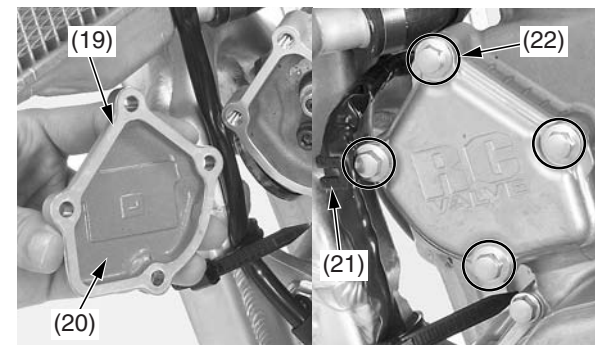


(19) gasket (20) left RC valve cover (21) clamp (22) bolts

(cont'd)

Cylinder System


15. Install a new gasket (23) as shown.
16. Install the exhaust pipe joint (24) with the flat facing (25) down.
17. Install and tighten the bolts (26) to the specified torque:
6.6 lbf·ft (9 N·m, 0.9 kgf·m)
18. Install the expansion chamber and springs (page 75).

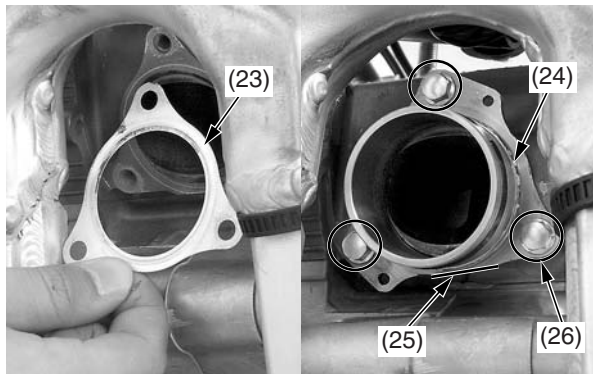

(23) gasket
(24) exhaust pipe joint
(25) flat face
(26) bolts


Cylinder Head Installation

1. Clean the cylinder head mating surface and install the dowel pins (1).
2. Install the new cylinder head gasket (2) with its "UP" mark (3) facing up and locating tab (4) facing rearward.

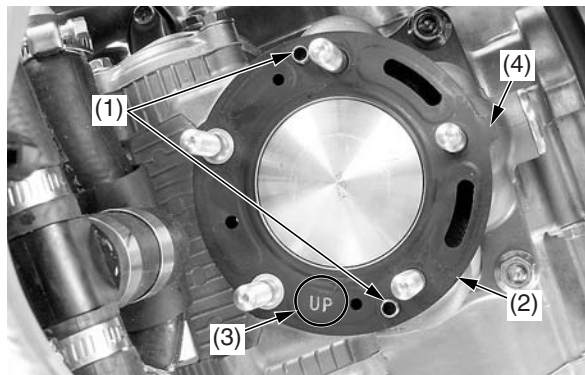


(1) dowel pins
(2) cylinder head gasket
(3) "UP" mark
(4) tab

3. Install the cylinder head (5) and tighten the five cylinder head nuts (6) to the specified torque in a crisscross pattern in 2 or 3 steps:
20 lbf·ft (27 N·m, 2.8 kgf·m)

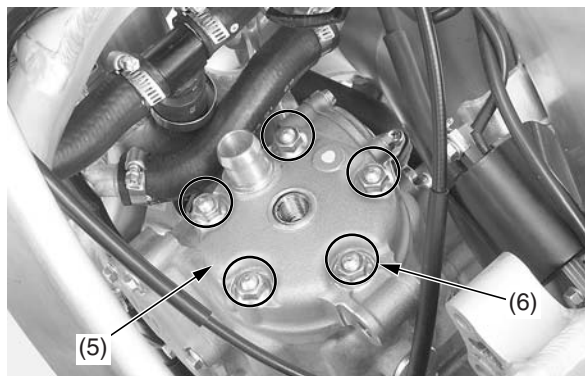

(5) cylinder head
(6) cylinder head nuts

4. Install the clamp (7) hanger plates (8) and tighten the nuts (9) to the specified torque:
25 lbf·ft (34 N·m, 3.5 kgf·m)
5. Connect the water hose (10) to the cylinder head.
6. Install the spark plug and spark plug cap (11).

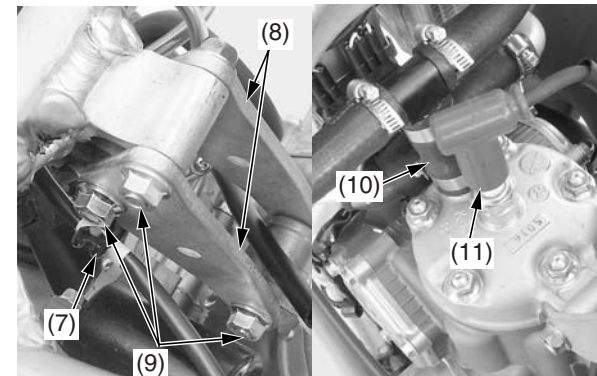

(7) clamp
(8) hanger plates
(9) nuts
(10) water hose
(11) spark plug cap


7. Pour the recommended coolant mixture into the radiator up to the correct level (page 38).
8. Install the following:
– fuel tank and seat (page 29, 30)
9. Start the engine and check for the following:
– compression leaks
– abnormal engine noise
– secondary air leaks
– coolant leaks

Refer to *Safety Precautions* on page 19.

The exhaust valves open and close according to the engine speed to ensure sufficient torque throughout the entire engine rpm range. The valves should be fully closed at low rpm and fully open at high rpm.

The exhaust valve system is a precision assembly. Before beginning inspection/decarbonizing, please study the following text and illustrations carefully.


Before attempting complete disassembly, we recommend you consult the Honda Service Manual or your Honda dealer. Mismatching of parts on reassembly can measurably affect fully engine performance.

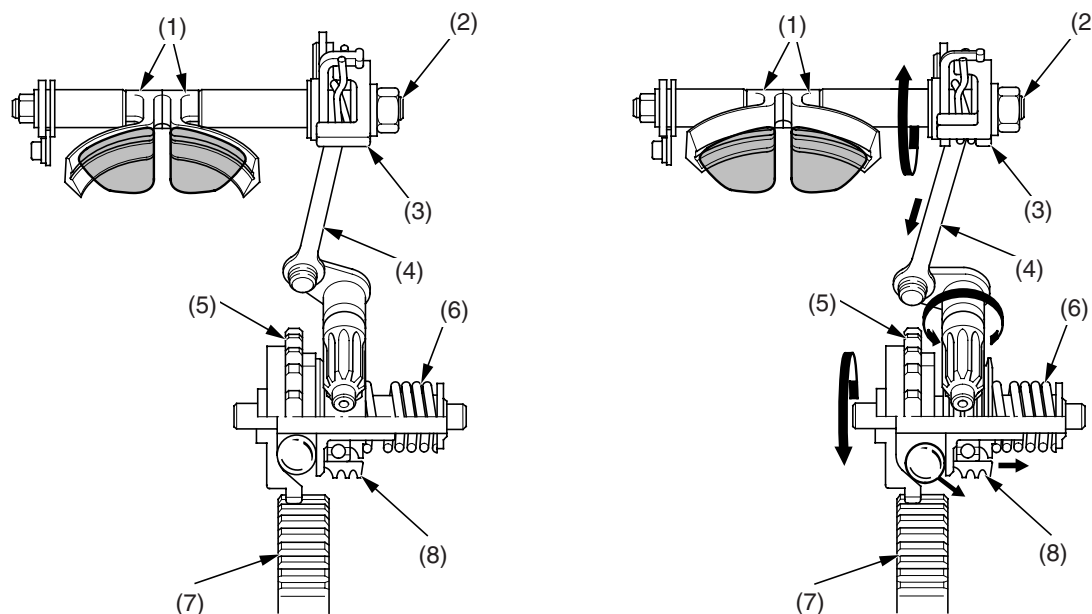

(1) RC valves (2) valve shaft (3) valve stopper (4) valve rod (5) governor gear (6) governor spring
(7) primary drive gear (8) governor rack gear

Operating Inspection

1. Remove the B-clip (1) and setting collar, (2) then remove the tie rod (3) from the valve shaft arm.
2. Check that the exhaust valve (4) turns smoothly. If the exhaust valve turns unsmoothly, remove the exhaust valve and decarbonize the RC valves and valve shaft (page 56).

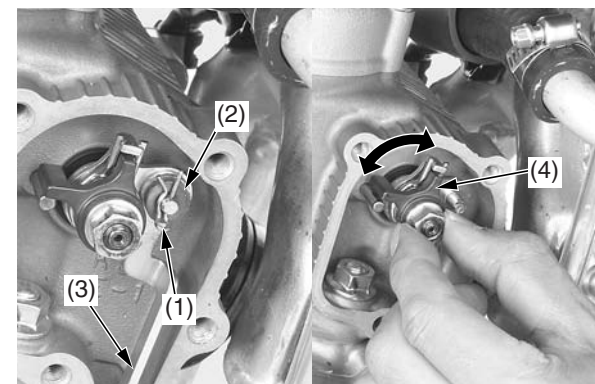


(1) B-clip
(2) collar

(3) tie rod
(4) exhaust valve

RC Valve


Exhaust valve Removal

1. Remove the cylinder (page 50).
2. Remove the socket bolt (1) and stopper plate (2).
3. Remove the nut (3) and washer (4) from the valve shaft assembly.

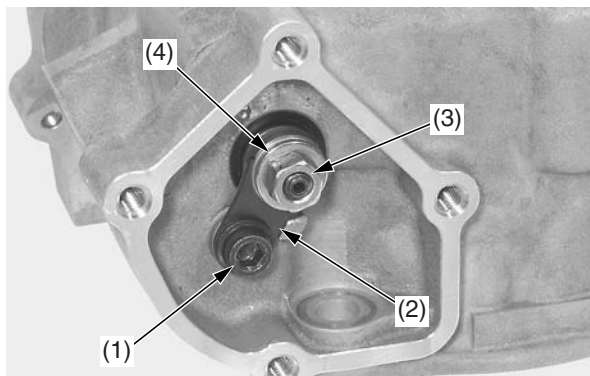

- (1) socket bolt
(2) stopper plate
(3) nut
(4) washer

4. Remove the valve shaft assembly (5), collar (6) and RC valves (7) from cylinder.

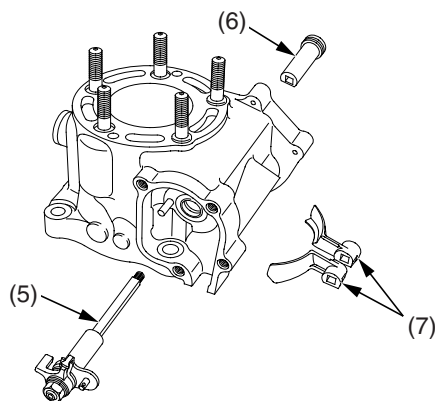


- (5) valve shaft assembly
(6) collar
(7) RC valves

Exhaust Valve Decarbonizing


1. Remove the carbon deposits from the valve shaft assembly (1) and RC valves (2).

Decarbonize the valve shaft assembly and RC valves each race.

2. Inspect the RC valve, valve shaft assembly for wear or damage.

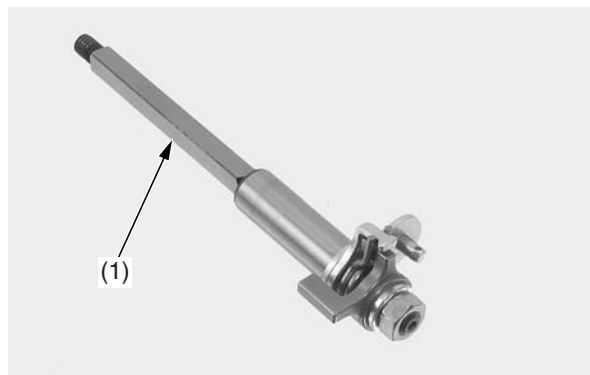

- (1) valve shaft assembly

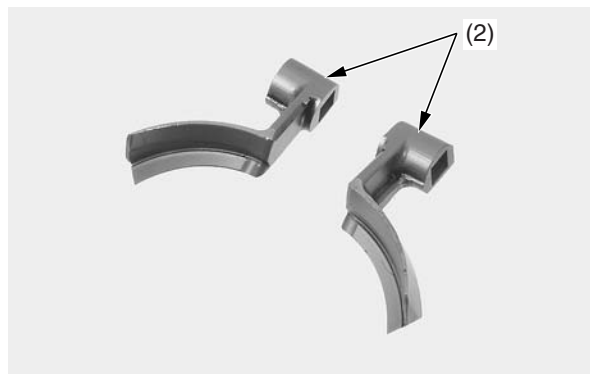


- (2) RC valves

Valve Shaft Oil Seal Inspection

Check the valve shaft oil seals (1) for wear or damage.


Replace the oil seals, if necessary.

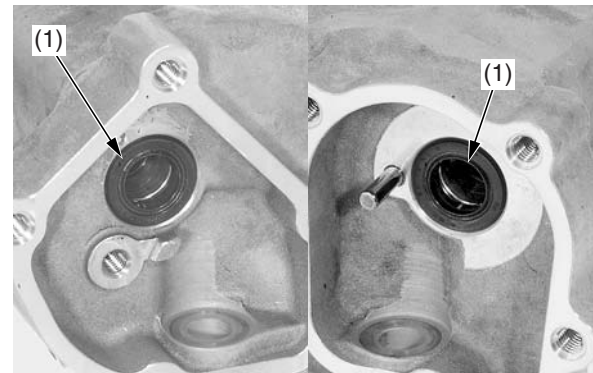

- (1) valve shaft oil seals


Exhaust Valve Installation

1. Install the RC valves (1) into the slot on the cylinder.
2. Position the RC valves fully open.
3. Install the valve shaft assembly (2) with its position.
4. Install the collar (3).

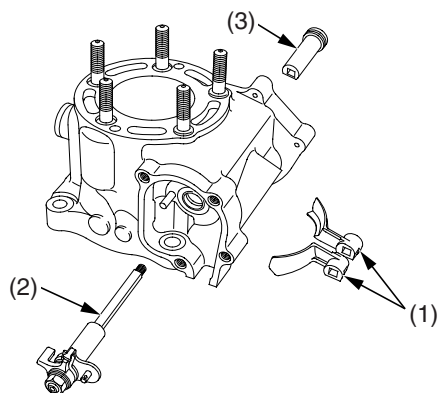


- (1) RC valves
(2) valve shaft assembly
(3) collar

5. Make sure that the cut-outs of the valve shaft (4) and collar (5) are aligned.

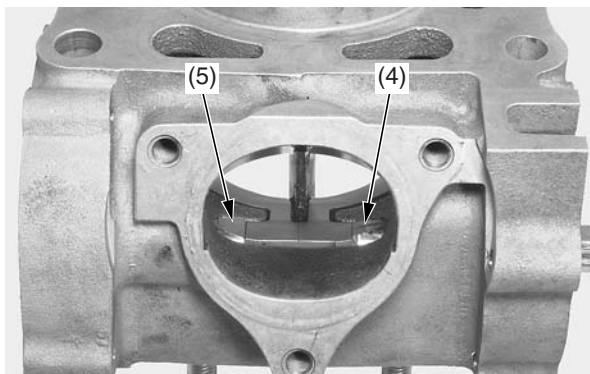

- (4) cut-out of the valve shaft
(5) cut-out of the collar

6. Install the washer (6) and nut (7), then tighten the nut to the specified torque:
6.6 lbf·ft (9 N·m, 0.9 kgf·m)
7. Install the stopper plate (8) and tighten the socket bolt (9) to the specified torque:
7 lbf·ft (10 N·m, 1.0 kgf·m)

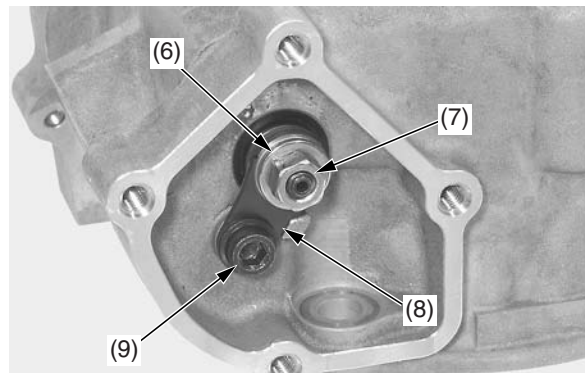

- (6) washer
(7) nut
(8) stopper plate
(9) socket bolt


8. Install the cylinder (page 52).

Reed Valve

Refer to Safety Precautions on page 19.


Reed Valve Removal

1. Remove the carburetor (page 104).
2. Remove the insulator (1) and reed valve (2) from the cylinder by removing the six carburetor insulator mounting bolts (3).
3. Remove the gasket.

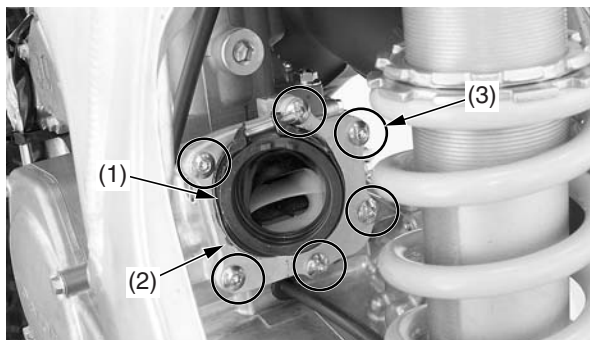

(1) insulator
(2) reed valve
(3) carburetor insulator mounting bolts


4. Remove the reed valve inner (4) from the reed valve assembly (5).

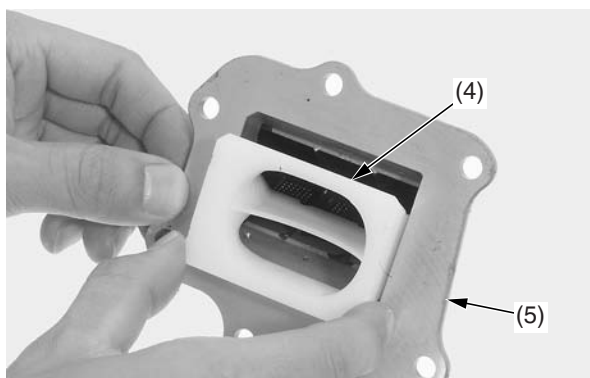

(4) reed valve inner
(5) reed valve assembly

Reed Valve Inspection


1. Check the reed valves (1) for damage or fatigue and replace them if necessary.
2. Replace the reed valves with new ones if the seats are cracked or damaged.

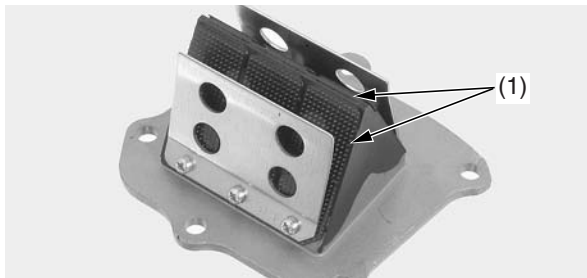

(1) reed valves


Reed Valve Disassembly/Assembly

1. Remove the reed valve mounting screws (1), stopper (2), sub-reed valve (3), and reed valve (4).
2. Align the cut-outs (5) between the reed valves and stoppers, then install them onto the cage.

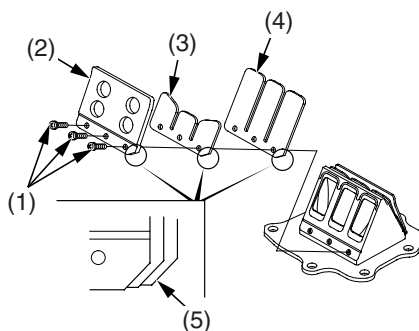

(1) reed valve mounting screws
(2) stopper
(3) sub-reed valve
(4) reed valve
(5) cut-out

3. Apply a locking agent to the reed valve mounting screw threads.
4. Install and tighten the mounting screws to the specified torque:
0.7 lbf·ft (1 N·m, 0.1 kgf·m)
5. Make sure that the clearance between the reed valve and cage (6) is less than the 0.008 in (0.2 mm).

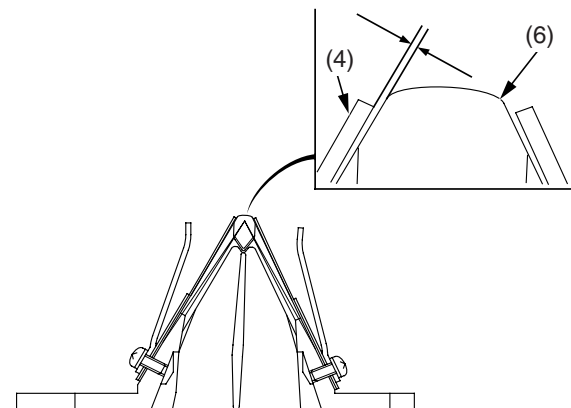


(4) reed valve

(6) cage

Reed Valve Installation


1. Install the reed valve inner (1) into the reed valve assembly (2) while aligning the cut-outs (3).

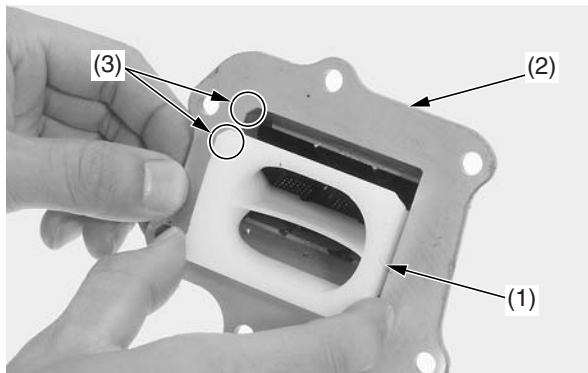

- (1) reed valve inner
(2) reed valve assembly
(3) cut-outs

2. Install the new gasket to the crankcase.
3. Install the reed valve assembly and insulator (4) to the crankcase.
4. Install the six carburetor insulator mounting bolts (5) and tighten to the specified torque in a crisscross pattern:
7 lbf·ft (10 N·m, 1.0 kgf·m)

After installation, check for secondary air leaks around the reed cage and insulator.

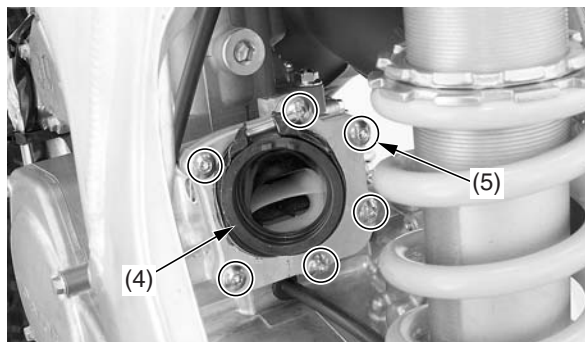

- (4) insulator
(5) carburetor insulator mounting bolts

5. Install the carburetor (page 104).

Suspension

Refer to *Safety Precautions* on page 19.


Loose, worn, or damaged suspension components may adversely affect the handling and stability of your CR. If any suspension components appear worn or damaged, see your Honda dealer for further inspection. Your dealer is qualified to determine whether or not replacement parts or repairs are needed.

Front Suspension Inspection

- When your CR is new, break it in for approximately one hour to ensure that the suspension has worked in (page 15).
- After break-in, test run your CR with the front suspension at the standard setting before attempting any adjustments.
- For optimum fork performance, we recommend that you disassemble and clean the fork after riding your CR for 3 hours. See page 85 for fork disassembly.
- Replace the fork oil every 3 races or 7.5 hours of running. See page 62 for oil level adjustment after changing the fork oil.
- Use Pro Honda HP Fork Oil 5W or an equivalent which contains special additives to assure maximum performance of your CR's front suspension.
- Periodically check and clean all front suspension parts to assure top performance. Check the dust seals for dust, dirt, and foreign materials. Check the oil for any contamination.

- Refer to *Suspension adjustment Guidelines* (page 100). Make all rebound and compression damping adjustments in one-click increments. (Adjusting two or more clicks at a time may cause you to pass over the best adjustment.) Test ride after each adjustment.
- If you become confused about adjustment settings, return to the standard position and start over.
- If the fork is still too stiff/soft after adjusting compression damping, determine which portion of the travel is still too stiff/soft. This is an important step that will help you solve suspension problems.


1. Make sure that the fork protectors (1) and dust seals (2) are clean and not packed with mud and dirt.
2. Check for signs of oil leakage. Damaged or leaking fork seals should be replaced before your CR is ridden.

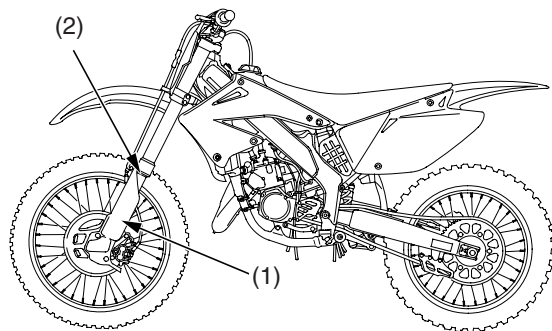

(1) fork protector


(2) dust seal

3. Inspect the wear rings (3) for wear or damage. Replace the wear ring if it is 0.06 in (1.5 mm) or flat with the outer tube (4). Install the wear ring with its end gap facing rearward.

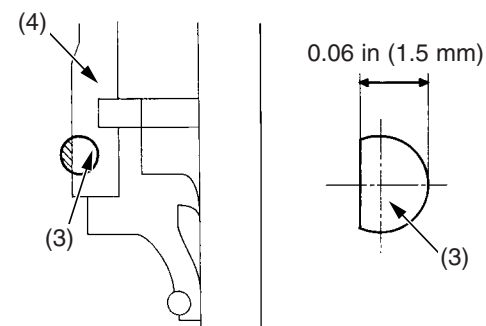


(3) wear ring

(4) outer tube

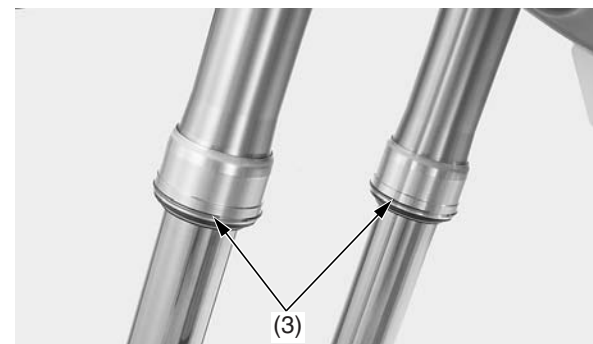

(3) wear rings

4. Make a quick check of fork operation by locking the front brake and pushing down on the handlebar several times.

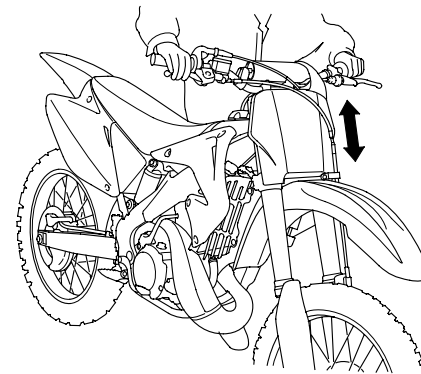

Rear Suspension Inspection


The swingarm is controlled by one hydraulic shock absorber with an aluminum reservoir for oil and nitrogen gas pressure. The gas pressure in the reservoir is contained within a rubber bladder.

The shock absorber's spring preload and damping adjustments (compression and rebound) should be adjusted for the rider's weight and track conditions (page 96).


Do not attempt to disassemble, service, or dispose of the damper; see your Honda dealer. The instructions found in this owner's manual are limited to adjustments of the shock assembly only.

- When your CR is new, break it in for approximately one hour with the standard suspension settings before attempting to adjust the rear suspension.
- Make all compression and rebound damping adjustments in the specified increment or turns described in pages 93. (Adjusting two or more increments or turns at a time may cause you to pass over the best adjustment.) Test ride after each adjustment.
- If the rear suspension is too stiff/soft, adjust it by turning all the compression and rebound adjusters according to the procedures described in page 93. After adjusting the adjusters simultaneously, suspension may be fine-tuned by turning one of the compression and rebound damping adjusters in one click increments.
- If you have a problem finding an acceptable adjustment, return to the standard position and begin again.

1. Bounce the rear of the motorcycle up and down and check for smooth suspension action.

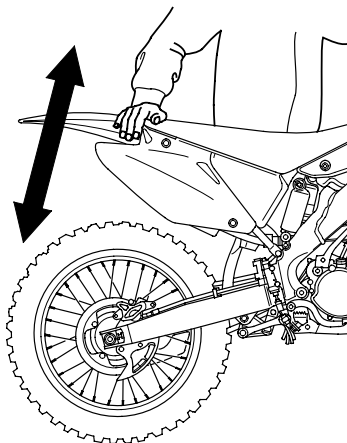

2. Remove the subframe (page 32).
3. Check for a broken or collapsed spring.
4. Check the shock for a bent shaft or oil leaks.

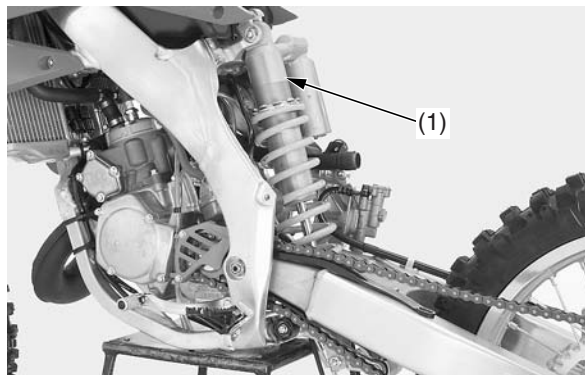

(1) rear shock absorber

5. Push the rear wheel sideways to check for worn or loose swingarm bearings. There should be no movement. If there is, have the bearings replaced by your Honda dealer.


Suspension

Recommended Fork Oil

| | |
|--------------------|-------------------------------------|
| viscosity (weight) | 5 W |
| suggested oil | Pro Honda HP Fork Oil or equivalent |


Fork Oil Change

1. Remove the fork cap, spring seat and fork spring as described in *Front Suspension Oil Level Adjustment* (page 84 - 91).
2. Remove the distance collar (1), lock nut (2), spring guide (3) and O-ring (4).

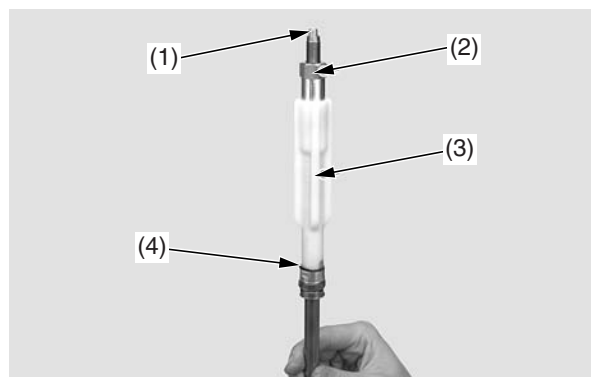


- (1) distance collar
(2) lock nut
(3) spring guide
(4) O-ring

3. Remove the partition plate (6) from the inside of fork tube.
4. Pour out the fork oil by pumping the fork tube and damper rod (5) 8 - 10 times with the rod end down as shown.

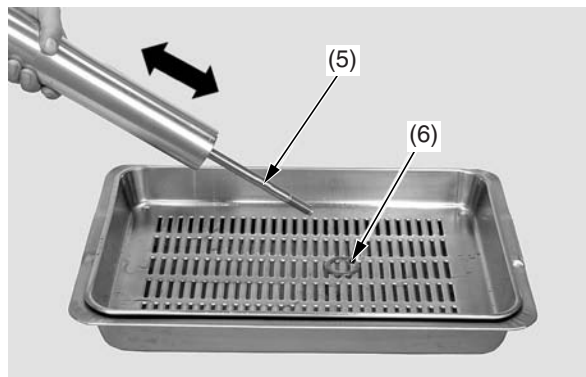

- (5) damper rod
(6) partition plate


5. Wipe off any excess oil from the spring guide (3). Install the spring guide and new O-ring (4) as shown.
6. Loosely install the lock nut (2) onto the damper rod.
7. Install the distance collar (1) into the damper rod.

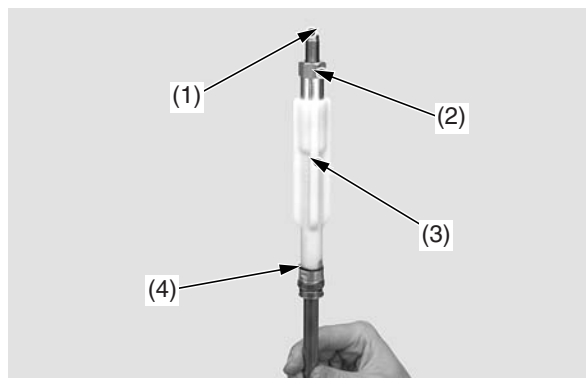


- (1) distance collar
(2) lock nut
(3) spring guide
(4) O-ring

8. Pour half of the recommended fork oil into the fork slider and fork tube.

Before pouring the fork oil, make sure that the partition plate is removed.

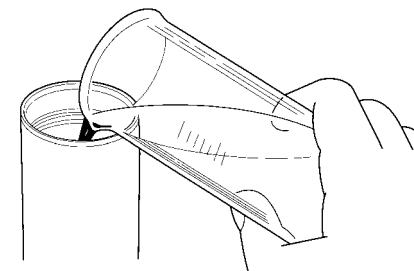


9. Raise the fork tube (7) and cover the top of the tube with your hand. Compress the fork tube fully, then release your hand. Use your other hand to secure the fork tube. Repeat this procedure 3 times.

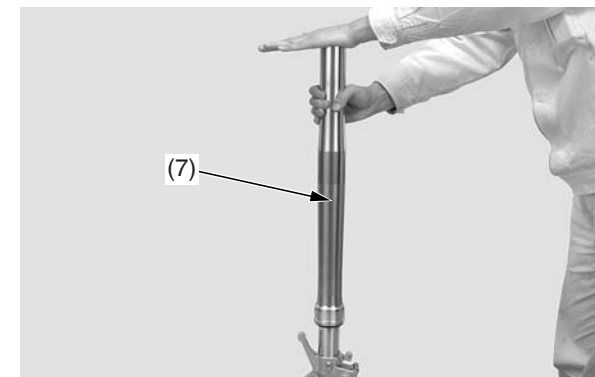

- (7) fork tube


10. Pour the remaining fork oil into the damper rod (5) until a little oil flows out of the top of the rod. Pump the piston rod slowly 8 - 10 times through a stroke of 10 in (25 cm). Gently slide the fork tube (7) down onto the lower end of the slider pipe (8). Wait about 5 minutes.

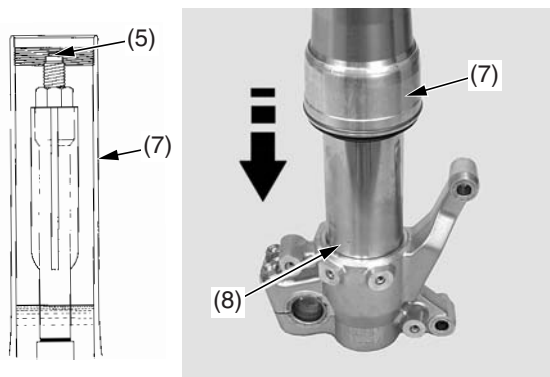

(5) damper rod
(7) fork tube


(8) lower end of the slider
pipe

11. With the fork tube held upright, measure the oil level (9) from the top of the tube.

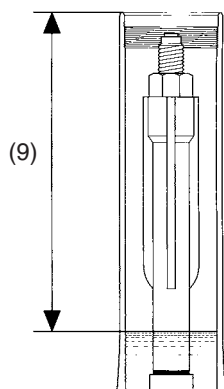

(9) oil level


12. Adjust the oil level by adding or removing the oil with an after market syringe (10).

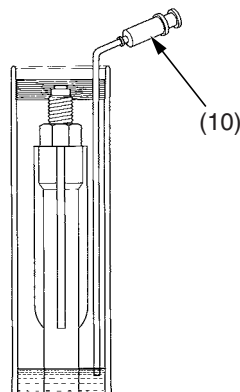

(10) syringe


Fork Oil Level

Standard (0.44 kgf/mm) Fork Spring



| | | |
|-------------------------------|--|--|
| Standard oil level [capacity] | 2.8 in 71 mm [15.6 US oz] [462 cm ³] | |
| Maximum oil level [capacity] | 1.5 in 37 mm [16.9 US oz] [499 cm ³] | Slightly stiffer as it nears full compression. |
| Minimum oil level [capacity] | 4.4 in 113 mm [14.2 US oz] [420 cm ³] | Slightly softer as it nears full compression. |

Optional Softer (0.42 kgf/mm) Fork Spring




| | | |
|-------------------------------|--|--|
| Standard oil level [capacity] | 2.6 in 67 mm [15.8 US oz] [466 cm ³] | |
| Maximum oil level [capacity] | 1.3 in 33 mm [17.1 US oz] [505 cm ³] | Slightly stiffer as it nears full compression. |
| Minimum oil level [capacity] | 4.3 in 108 mm [14.4 US oz] [425 cm ³] | Slightly softer as it nears full compression. |

(cont'd)

Suspension


Optional Stiffer (0.46 kgf/mm) Fork Spring



| | | |
|----------------------------------|---|--|
| Standard oil level [capacity] | 3.0 in 75 mm [15.5 US oz] [458 cm³] | |
| Maximum oil level [capacity] | 1.6 in 41 mm [16.7 US oz] [493 cm³] | Slightly stiffer as it nears full compression. |
| Minimum oil level [capacity] | 4.6 in 117 mm [14.1 US oz] [416 cm³] | Slightly softer as it nears full compression. |


- Be sure to check the oil level. Some oil will be left in the fork tube when the oil is drained and causes the oil level to be raised slightly.
- Be sure the oil level is the same in both fork legs.
- Always use the after market syringe while adjusting the oil level.
If it isn't used, air may get into the fork.
- If a syringe is not available, first set the oil level somewhat lower than the normal, then add small amounts of oil until the correct level is obtained, measuring the level each time oil is added.

13. Remove the lock nut and spring guide together.
Install the partition plate (6).

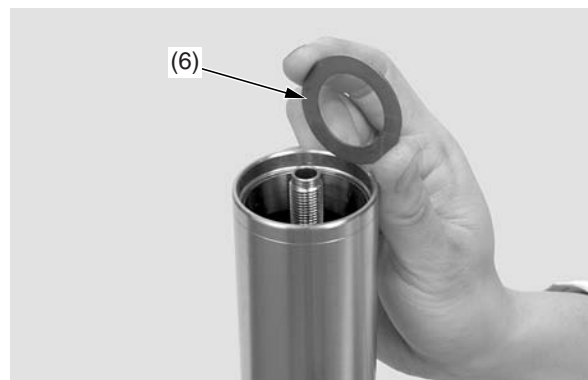

(6) partition plate

14. Install the spring guide (3) as shown.
Loosely install the lock nut (2).

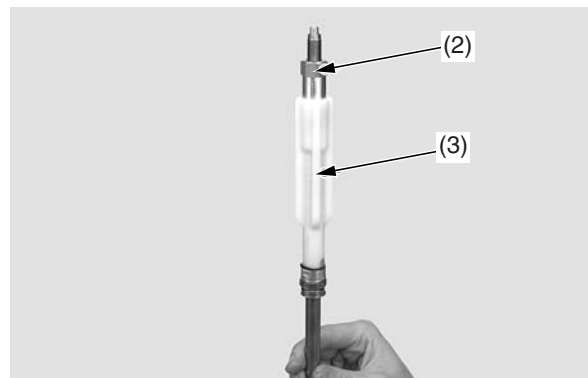

(2) lock nut

(3) spring guide

15. Install the fork spring, spring seat and fork cap as described in *Front Suspension Oil Level Adjustment* (page 84-91).


Refer to *Safety Precautions* on page 19.

Both the front and rear brakes are the hydraulic disc type. As the brake pads wear, the brake fluid level will drop. A leak in the system will also cause the level to drop.

Frequently inspect the system to ensure there are no fluid leaks. Periodically inspect the brake fluid level and the brake pads for wear.

If the front brake lever or rear brake pedal freeplay does not feel within the normal range while riding, check the brake pads. If they are not worn beyond the recommended limit (page 68), there is probably air in the brake system. Refer to the Honda Service Manual or see your Honda dealer to have the air bled from the system.

Front Brake Lever Adjustment

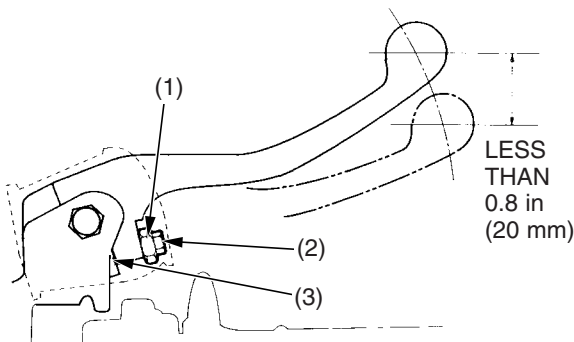


- (1) lock nut
(2) adjuster
(3) piston

1. Loosen the lock nut (1).
2. To position the brake lever farther away from the handgrip, turn the adjuster (2) clockwise. To position the brake lever closer to the handgrip, turn the adjuster counterclockwise.
3. Tighten the lock nut.
4. Apply the brake, release it, then spin the wheel and check that it rotates freely. Repeat this procedure several times.
5. Check freeplay by pulling in slowly on the front brake lever until the brake starts to engage.
Freeplay: **Less than 0.8 in (20 mm)**
6. Apply grease to the contacting faces of the adjuster and piston (3).

Brake Pedal Height

The brake pedal height should be approximately level with the right footpeg.

1. Loosen the lock nut (1) and turn the adjusting bolt (2) in direction (+) to raise the pedal (3) or in direction (–) to lower it.
2. Tighten the lock nut at the desired pedal height.

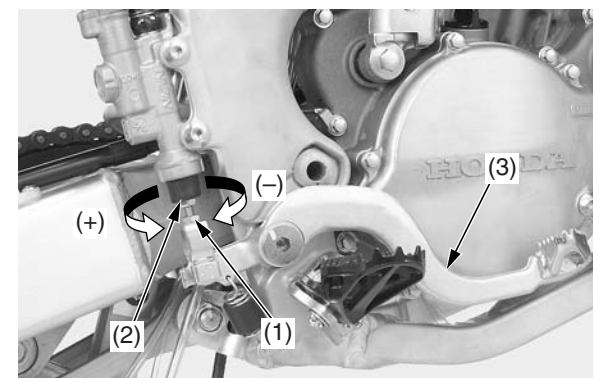


- (1) lock nut
(2) adjusting bolt
(3) rear brake pedal
(+) raise the pedal height
(–) lower the pedal height

Brakes

Fluid Level Inspection

Front Brake Fluid Level Check

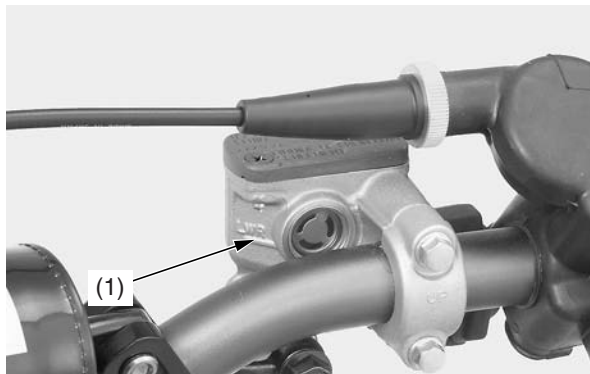

(1) LOWER level mark


With the motorcycle in an upright position, check the fluid level.

It should be above the LOWER level mark (1). If the level is at or below the LOWER level mark, check the brake pads for wear (page 68).

Worn brake pads should be replaced. If the pads are not worn, have your brake system inspected for leaks.

If the brake lever freeplay exceeds 0.8 in (20 mm), there is probably air in the brake system and it must be bled. Refer to the Honda Service Manual or see your Honda dealer for brake bleeding.

Rear Brake Fluid Level Check

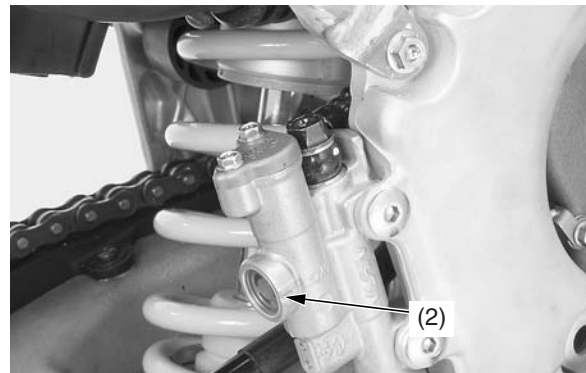

(2) LOWER level mark

With the motorcycle in an upright position, check the fluid level.

It should be above the LOWER (2) level mark. If the level is at or below the LOWER level mark, check the brake pads for wear (page 68).


Worn brake pads should be replaced. If the pads are not worn, have your brake system inspected for leaks.

If the brake pedal freeplay exceeds 0.9 in (23 mm), there is probably air in the brake system and it must be bled. Refer to the Honda Service Manual or see your Honda dealer for brake bleeding.

Adding Front Brake Fluid

The recommended brake fluid is Honda DOT 4 brake fluid from a sealed container, or an equivalent.

When adding brake fluid be sure the reservoir is horizontal before the cap is removed or brake fluid may spill out.

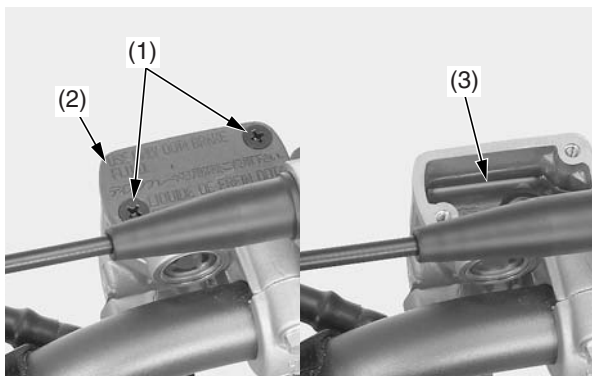


(1) screws
(2) reservoir cap
(3) upper level mark

1. Remove the screws (1), reservoir cap (2) and diaphragm.
2. Fill the reservoir with DOT 4 brake fluid to the upper level mark (3). Do not overfill.
3. Reinstall the diaphragm and reservoir cap.
4. Tighten the screws to the specified torque:
0.7 lbf·ft (1 N·m, 0.1 kgf·m)

Adding Rear Brake Fluid

The recommended brake fluid is Honda DOT 4 brake fluid from a sealed container, or an equivalent.

When adding brake fluid be sure the reservoir is horizontal before the cap is removed or brake fluid may spill out.

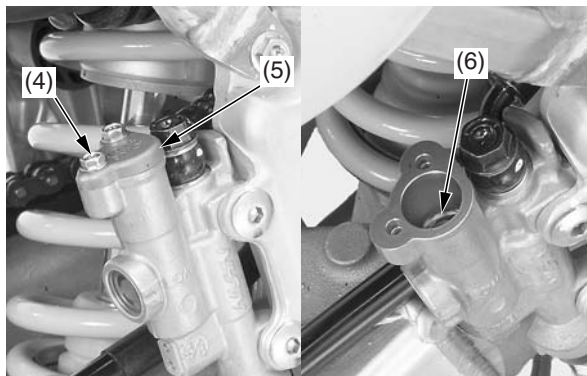

(4) bolts
(5) reservoir cap
(6) upper level mark

1. Remove the bolts (4) reservoir cap (5) and diaphragm.
2. Fill the reservoir with DOT 4 brake fluid to the upper level mark (6). Do not overfill.
3. Reinstall the diaphragm and reservoir cap.
4. Tighten the bolts to the specified torque:
0.7 lbf·ft (1 N·m, 0.1 kgf·m)

Other Inspection

- Make sure there are no fluid leaks.
- Check for deterioration or cracks in the hoses and fittings.




Brakes

Brake Pad Wear

Brake pad wear depends on the severity of usage and track conditions. (Generally, the pads will wear faster on wet and dirty tracks) Inspect the pads at each regular maintenance interval (page 21).

Front Brake Pads

Inspect the pads (1) through the front wheel to determine the pad wear. If either pad is worn anywhere to a thickness of 0.04 in (1 mm), both pads must be replaced.

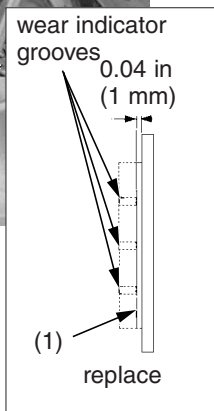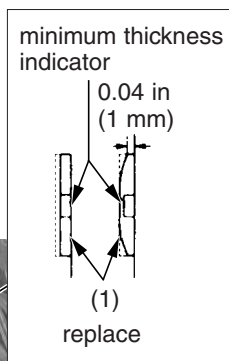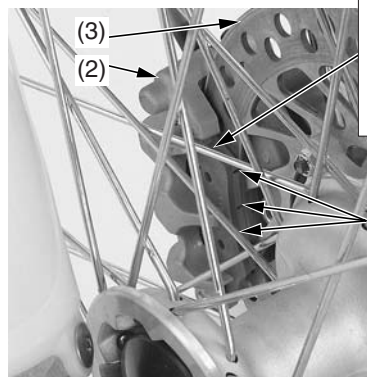


(1) brake pads
(2) front brake caliper

(3) brake disc

Rear Brake Pads

Inspect the pads (4) from the rear side of the caliper to determine the pad wear. If either pad is worn anywhere to a thickness of 0.04 in (1 mm), both pads must be replaced.

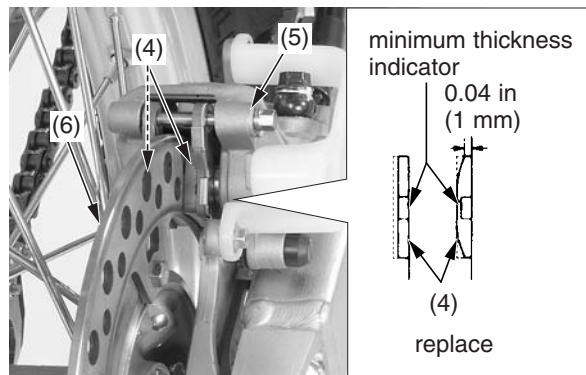

(4) brake pads
(5) rear brake caliper

(6) brake disc

Other Inspections

Check that the front lever and rear pedal assemblies are positioned properly and the securing bolts are tight.


Make sure there are no fluid leaks. Check for deterioration or cracks in the hoses and fittings.

Refer to *Safety Precautions* on page 19.

Maintenance of spoke tension and wheel trueness (roundness) is critical to safe motorcycle operation. During the first 100 miles (150 km), spokes will loosen more rapidly due to the initial seating of the parts. Excessively loose spokes may result in instability at high speeds and the possible loss of control. It's also important that the rim locks are secure to prevent tire slippage.

It is not necessary to remove the wheels to perform the recommended service in the Maintenance Schedule. However, information for wheel removal is provided for emergency situations.

Wheel Rims & Spokes

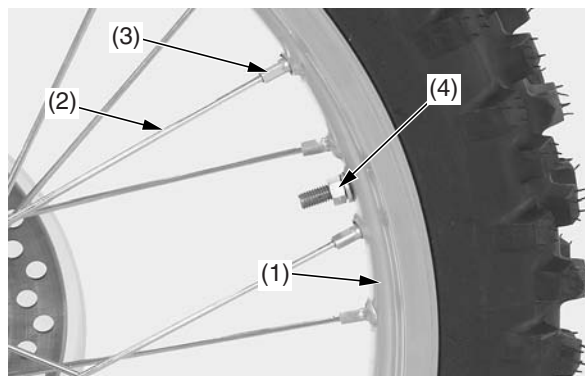

- (1) wheel rim
- (2) spoke
- (3) spoke nipple
- (4) rim lock nut

1. Inspect the wheel rims (1) and spokes (2) for damage.
2. Tighten any loose spoke nipples (3) and rim lock nuts (4) to the specified torque:
Front spoke nipple:
2.7 lbf·ft (3.68 N·m, 0.4 kgf·m)
Rear spoke nipple:
2.7 lbf·ft (3.7 N·m, 0.4 kgf·m)
Rim lock nuts: 9 lbf·ft (12 N·m, 1.2 kgf·m)
3. Check wheel rim runout. If runout is noticeable, see the Honda Service Manual for inspection instructions.

Axles & Wheel Bearings

See the Honda Service Manual for inspection information:

1. Check the axle for runout.
2. Check the condition of the wheel bearings.

Tires & Tubes

Refer to *Safety Precautions* on page 19.

To safely operate your CR, the tires must be the proper type (off-road) and size, in good condition with adequate tread, and correctly inflated.

⚠ WARNING

Using tires that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tire inflation and maintenance.

The following pages give detailed information on how and when to check your air pressure, how to inspect your tires for wear and damage, and our recommendations on tire repair and replacement.

Air Pressure

Properly inflated tires provide the best combination of handling, tread life, and riding comfort. Generally, underinflated tires wear unevenly, adversely affect handling, and are more likely to fail from being overheated. Underinflated tires can also cause wheel damage on hard terrain. Overinflated tires make your motorcycle ride harshly, are more prone to damage from surface hazards, and wear unevenly.

Make sure the valve stem caps are secure. If necessary, install a new cap.

Always check air pressure when your tires are “cold.” If you check air pressure when your tires are “warm” — even if your CR has only been ridden for a few miles — the readings will be higher. If you let air out of warm tires to match the recommended cold pressures, the tires will be underinflated.


The correct “cold” tire pressures are:

| | |
|-------|--|
| Front | 15 psi (100 kPa, 1.0 kgf/cm ²) |
| Rear | 15 psi (100 kPa, 1.0 kgf/cm ²) |

If you decide to adjust tire pressures for a particular riding condition, make changes a little at a time.

Inspection

Take time to inspect your tires and wheels before you ride.

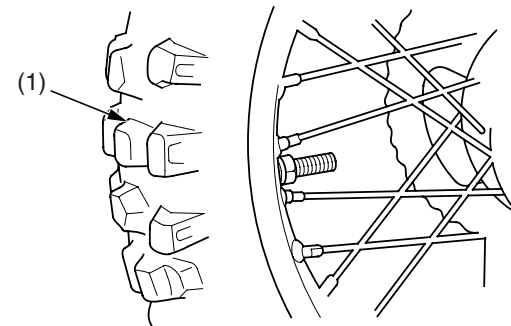

(1) tire tread depth

- Inspect carefully for bumps or bulges in the side of the tire or the tread. Replace any tire that has a bump or bulge.
- Look closely for cuts, slits, or cracks in the tires. Replace a tire if you can see fabric or cord.
- Check for rocks or other objects embedded in the tire or tread. Remove any objects.
- Measure tread depth (1). Replace the tire before depth at the center reaches 0.12 in (3 mm), or any time you notice a reduction in traction.
- Check the position of both valve stems. A tilted valve stem indicates the tube is slipping inside the tire or the tire is slipping on the rim.

Tube Replacement

If a tube is punctured or damaged, you should replace it as soon as possible. A repaired tube may not have the same reliability as a new one, and it may fail while you are riding.

Use a replacement tube equivalent to the original.

Tire Replacement

The tires that came on your CR were designed to provide a good combination of handling, braking, durability, and comfort across a broad range of riding conditions.

| | |
|-------|----------------|
| Front | 80/100-21 51M |
| Rear | 100/90-19 57M |
| Type | bias-ply, tube |

- Use a replacement tire equivalent to the original.
- Replace the tube any time you replace a tire. The old tube will probably be stretched and, if installed in a new tire, could fail.

Drive Chain

Refer to *Safety Precautions* on page 19.

The service life of the chain depends on proper lubrication and adjustment. Poor maintenance can cause premature wear or damage to the drive chain or sprockets.


When the motorcycle is ridden on unusually dusty or muddy tracks, more frequent maintenance will be necessary.

Before servicing your drive chain, turn the engine OFF, raise the rear wheel off the ground by placing the optional workstand or equivalent support under the engine and check that your transmission is in neutral.

It is not necessary to remove or replace the drive chain to perform the recommended service in the Maintenance Schedule.

Inspection

1. Turn the engine off, raise the rear wheel off the ground by placing the optional workstand or equivalent support under the engine and shift the transmission into neutral.
2. Check slack (1) in the upper drive chain run midway between the sprockets (2)(3). Drive chain slack should allow the following vertical movement by hand:
1 - 1 3/8 in (25 - 35 mm)

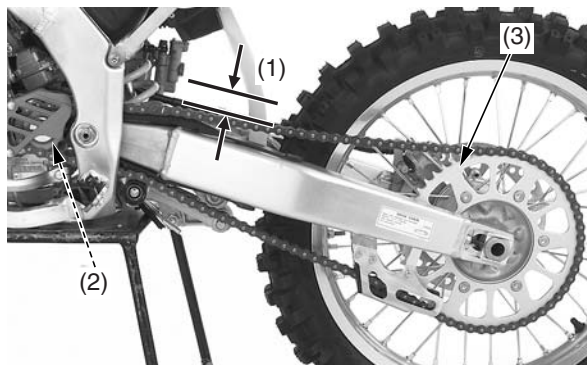

(1) drive chain slack
(2) drive sprocket

(3) driven sprocket

3. Check drive chain slack at several points along the chain. The slack should remain constant. If it isn't, some links may be kinked and binding. Lubricating the chain will often eliminate binding and kinking.


NOTICE

Excessive chain slack may allow the drive chain to damage the engine cases.

4. Inspect the drive chain for:
 - damaged rollers
 - loose pins
 - dry or rusted links
 - kinked or binding links
 - excessive wear


Replace the drive chain (page 74) if it has damaged rollers, loose pins, or kinks that cannot be freed. Lubricate the drive chain (page 73) if it appears dry or shows signs of rust. Lubricate any kinked or binding links and work them free. Adjust chain slack if needed.

5. Check the chain slider (4) for wear. If the wear is 3/16 in (5 mm) or more, replace it.

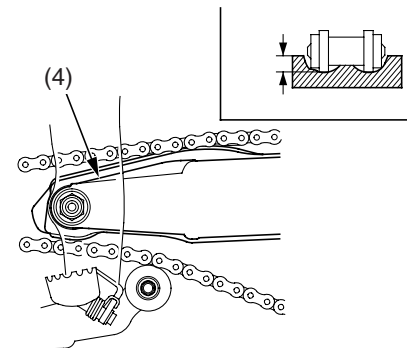

(4) chain slider

6. Check the chain guide slider (5) for wear. Replace the chain guide slider if it is worn to the bottom of the wear limit groove (6).

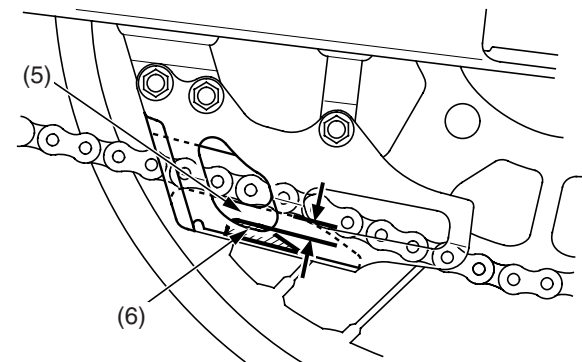

(5) chain guide slider


(6) wear limit groove

7. Check the upper drive chain roller (7) and lower drive chain roller (8) for wear or damage.

Replace if necessary.

Upper roller: 1.5 in (39 mm)

Lower roller: 1.2 in (31 mm)

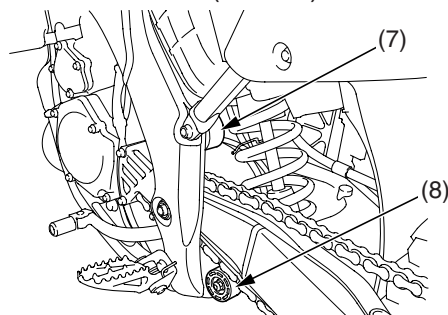


(7) upper drive chain roller (8) lower drive chain roller

If the upper drive chain roller was removed, install the drive chain roller with its “→” mark (9) side facing out.

Install the lower drive chain roller.

Upper and lower rollers:

9 lbf·ft (12 N·m, 1.2 kgf·m)

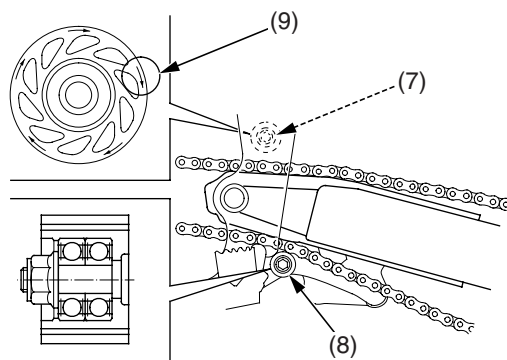


(7) upper drive chain roller (9) “→” mark
(8) lower drive chain roller

8. Check the driven sprocket nut torque values after each race.

24 lbf·ft (32 N·m, 3.3 kgf·m)

Adjustment

1. Loosen the rear axle nut (1).
2. Loosen both the lock nuts (2) and turn the adjusting bolts (3) counterclockwise to decrease slack or clockwise to increase slack. Align the index marks (4) of the axle plates (5) with the same reference marks (6) on both sides of the swingarm.

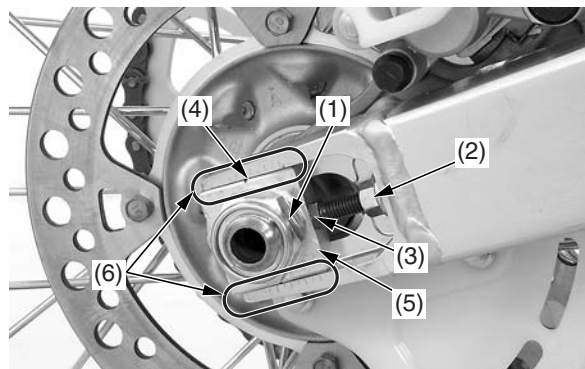


(1) rear axle nut (4) index mark
(2) lock nut (5) axle plate
(3) adjusting bolt (6) reference marks

3. Tighten the rear axle nut to the specified torque:
94 lbf·ft (128 N·m, 13.1 kgf·m)
4. Recheck chain slack and adjust as necessary.
5. Loosen the adjusting bolt counterclockwise lightly until it touches the axle plate. Then, while holding the adjusting bolt with a wrench, tighten the lock nut to the specified torque:
20 lbf·ft (27 N·m, 2.8 kgf·m)

Lubrication

Commercially prepared drive chain lubricants may be purchased at most motorcycle shops and should be used in preference to motor oil. Pro Honda Chain Lube or an equivalent, or SAE 80 or 90 gear oil is recommended.

Saturate each chain joint so that the lubricant penetrates the space between adjacent surfaces of the link plates and rollers.

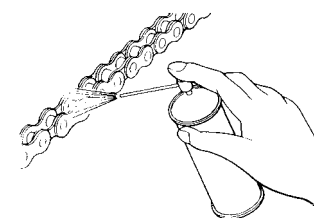


Drive Chain

Removal, Cleaning & Replacement

For maximum service life, the drive chain should be cleaned, lubricated, and adjusted before each outing.

1. Remove the master link retaining clip (1) with pliers. Do not bend or twist the clip. Remove the master link (2). Remove the drive chain.

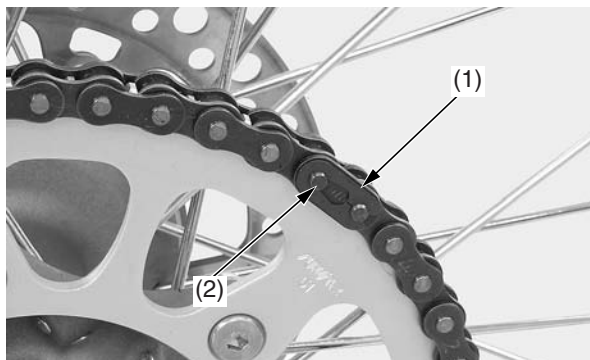


(1) retaining clip

(2) master link

2. Clean the drive chain in high flash-point solvent and allow it to dry.
3. Inspect the drive chain for possible wear or damage. Replace the drive chain if it has damaged rollers, loose fitting links, or otherwise appears unserviceable.
Replacement chain:
DID 520DMA2

4. Inspect the sprocket teeth for wear or damage. We recommend replacing the sprocket whenever a new chain is installed. Both chain and sprockets must be in good condition, or the new replacement chain or sprocket(s) will wear rapidly. Excessively worn sprocket teeth have a hooked, worn appearance. Replace any sprocket which is damaged or excessively worn.

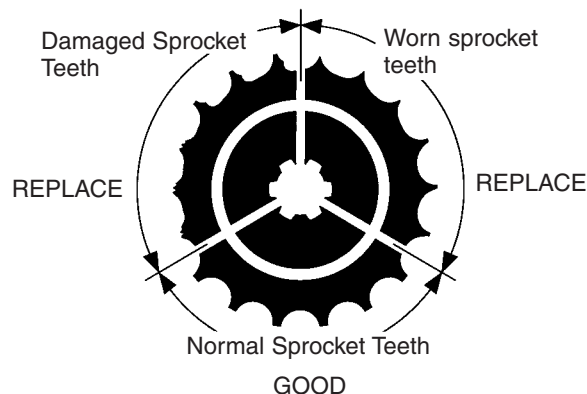


NOTICE

Use of a new chain with worn sprockets will cause rapid chain wear.

5. Measure a section of the drive chain to determine whether the chain is worn beyond its service limit. Put the transmission in gear, and then turn the rear wheel forward until the lower section of the chain is pulled taut. With the chain held taut and any kinked joints straightened, measure the distance between a span of 17 pins, from pin center to pin center. If the measurement exceeds the service limit, replace the chain. After the chain is measured, shift the transmission into neutral again before proceeding with inspection and service.

Replacement chain:
DID 520MA2

Service limit: 10.20 in (259.0 mm)

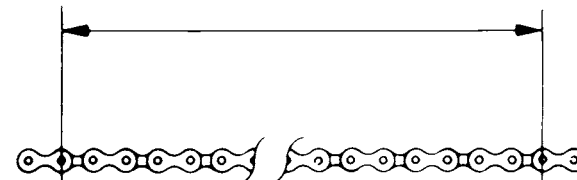

MEASURE A SPAN OF 17 PINS (16 PITCHES)

6. Lubricate the drive chain.
7. Pass the chain over the sprockets and join the ends of the chain with the master link. For ease of assembly, hold the chain ends against adjacent rear sprocket teeth while inserting the master link. Install the master link retaining clip so that the closed end of the clip will face the direction of forward wheel rotation.
8. Recheck chain slack and adjust as necessary.

More About: Drive Chain

- The master link is the most critical element of drive chain security. Master links are reusable, as long as they remain in excellent condition. We recommend installing a new master link retaining clip when the drive chain is reassembled.
- You may find it easier to install a new chain by connecting it to the old chain with a master link and pulling the old chain to position the new chain on the sprockets.


Refer to *Safety Precautions* on page 19.

Expansion Chamber Inspection

1. Check the expansion chamber springs, and replace them if they are damaged or stretched.
2. Check the flange bolts for tightness.
3. Check the expansion chamber for cracks or deformation.
A damaged chamber may decrease engine performance.

Expansion Chamber Removal

1. Remove the expansion chamber by removing the expansion chamber springs (1) and mounting bolts (2).
2. Remove carbon deposits from the head pipe of the expansion chamber.

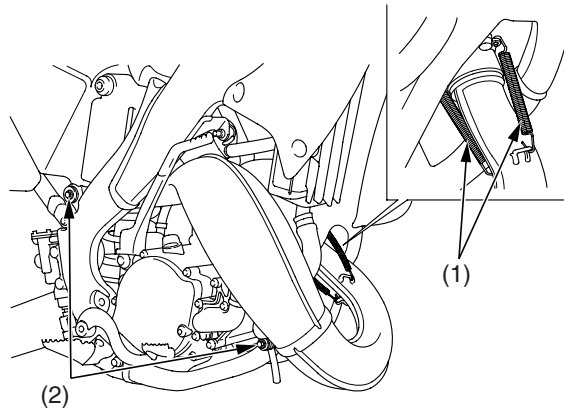

(1) springs

(2) bolts

Expansion Chamber Installation

Install the expansion chamber in the reverse order of removal.

- Tighten the front and rear mounting bolts to the specified torque:
Front: 9 lbf·ft (12 N·m, 1.2 kgf·m)
Rear: 7 lbf·ft (10 N·m, 1.0 kgf·m)

Additional Maintenance Procedures


Refer to *Safety Precautions* on page 19.

Steering Head Bearing Inspection

1. With your CR on a box or workstand (front wheel elevated), turn the handlebar to the right and left to check for roughness in the steering head bearings.
2. Stand in front of your CR, grab the fork (at the axle), look at the steering head, and push the fork in and out (toward the engine) to check for play in the steering head bearings. If any roughness or play is felt, but you do not see any movement in the steering head, the fork bushings may be worn. Refer to the Honda Service Manual for replacement or adjustment procedures, or see your Honda dealer.

Handlebar Inspection

1. Remove the handlebar pad.
2. Check the handlebar (1) for bends or cracks.
3. Check that the handlebar has not moved from its proper position (by inspecting the punch mark).
4. Tighten the front bolt first.
5. Check the torque of the upper holder (2) bolts: 16 lbs·ft (22 N·m, 2.2 kgf·m)

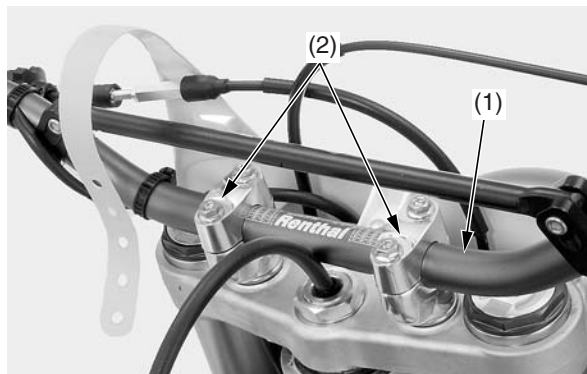

(1) handlebar

(2) handlebar upper holders

Control Cables


Periodically, disconnect the throttle, clutch and hot start cables at their upper ends. Thoroughly lubricate the cable pivot points with a commercially-available cable lubricant. Be certain that the throttle cables have no kinks or other damage.

Nuts, Bolts, Fasteners

Check and tighten nuts, bolts, and fasteners before every outing.


| | Item | Torque | | | Remarks |
|---|---------------------------|--------|-----|-------|---------|
| | | lbf-ft | N-m | kgf-m | |
| | ENGINE | | | | |
| 1 | Cylinder head nut | 20 | 27 | 2.8 | |
| 2 | Cylinder mounting nut | 20 | 27 | 2.8 | |
| 3 | Carburetor insulator bolt | 7 | 10 | 1.0 | |
| 4 | Clutch cover bolt | 7 | 10 | 1.0 | |
| 5 | Water pump cover bolt | 9 | 12 | 1.2 | |
| 6 | Right RC cover bolt | 9 | 12 | 1.2 | |
| 7 | Right RC cover screw | 1.5 | 2 | 0.2 | |
| 8 | Alternator cover bolt | 7 | 10 | 1.0 | |
| 9 | Left RC cover bolt | 9 | 12 | 1.2 | |

RIGHT SIDE

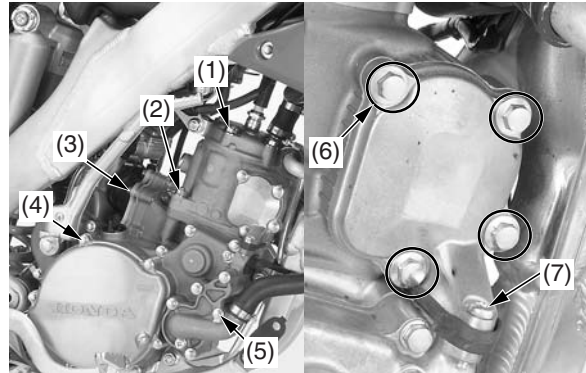

- (1) cylinder head nut
- (2) cylinder mounting nut
- (3) carburetor insulator bolt
- (4) clutch cover bolt
- (5) water pump cover bolt
- (6) right RC cover bolt
- (7) right RC cover screw

LEFT SIDE

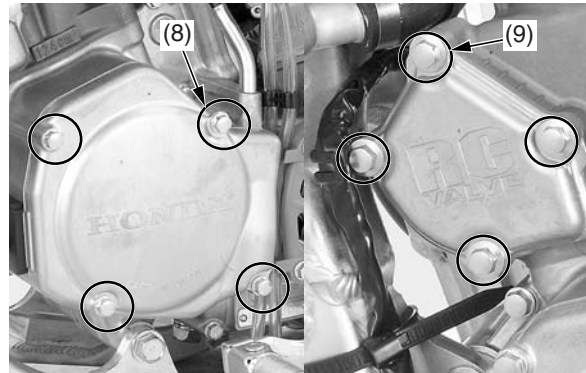

- (8) alternator cover bolt
- (9) left RC cover bolt

Appearance Care

Refer to *Safety Precautions* on page 19.

Frequent cleaning and polishing will keep your Honda looking newer longer. Frequent cleaning also identifies you as an owner who values his motorcycle. A clean CR is also easier to inspect and service.


While you're cleaning, be sure to look for damage, wear, and gasoline or oil leaks.

General Recommendations

- To clean your CR you may use:
 - water
 - a mild, neutral detergent and water
 - a mild spray and wipe cleaner/polisher
 - a mild spray and rinse cleaner/degreaser and water
- Avoid products that contain harsh detergents or chemical solvents that could damage the metal, paint, and plastic on your CR or discolor the seat and decals.
- If your CR is still warm from recent operation, give the engine and exhaust system time to cool off.
- We recommend the use of a garden hose to wash your CR. High pressure washers (like those at coin-operated car washes) can damage certain parts of your CR. The force of water under extreme pressure can penetrate the dust seals of the suspension pivot points and steering head bearings-driving dirt inside and needed lubrication out.

If you use a high pressure washer, avoid spraying the following areas:

- wheel hubs
- expansion chamber outlet
- area under seat
- engine stop button
- brake master cylinders
- under fuel tank
- drive chain
- carburetor
- steering head bearings
- suspension pivot points

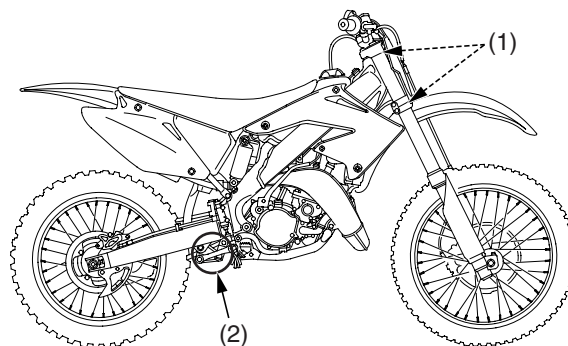

- (1) steering head bearings
(2) suspension pivot points

NOTICE

High pressure water (or air) can damage certain parts of your CR.

You may use Pro Honda Hondabrite, a multi-surface cleaner/degreaser, to remove both dirt and petroleum-based grime from paint, alloy, plastic, and rubber surfaces. Wet any heavy deposits with water first. Then spray on the Hondabrite and rinse with a garden hose at full pressure. Stubborn deposits may require a quick wipe with a sponge.

Washing Your Motorcycle with a Mild Detergent

1. Rinse your CR thoroughly with cool water to remove loose dirt.
2. Fill a bucket with cool water. Mix in a mild, neutral detergent, such as dish washing liquid or a product made especially for washing motorcycles or automobiles.
3. Wash your CR with a sponge or a soft towel. As you wash, check for heavy grime. If necessary, use a mild cleaner/degreaser to remove the grime.

Do not use steel wool to clean the frame as it could damage or discolor the frame surface. A muffler stain remover should only be used for removing stains on the non-coated aluminum frame.


4. After washing, rinse your CR thoroughly with plenty of clean water to remove any residue.
5. Dry your CR with a chamois or a soft towel.
6. Lubricate the drive chain to prevent rusting.
7. Start the engine and let it idle for several minutes. The engine heat will help dry moist areas.
8. As a precaution, ride at a slow speed and apply the brakes several times. This will help dry the brakes and restore normal braking performance.

Condensation Control

Changes in temperature combined with humidity allow moisture to form in some confined areas on your CR. The most affected area is the alternator/ignition cavity in the left side of the crankcases.

Each time you wash your CR you should remove the alternator cover (1), wipe out any visible moisture, and allow the cavity to air dry for at least a couple of hours before installing the cover. Replace the gasket with a new one if it is not in good condition before installing the cover.

Some condensation can form within the transmission cavity as well. This is natural and just one more reason you should change the transmission oil often.

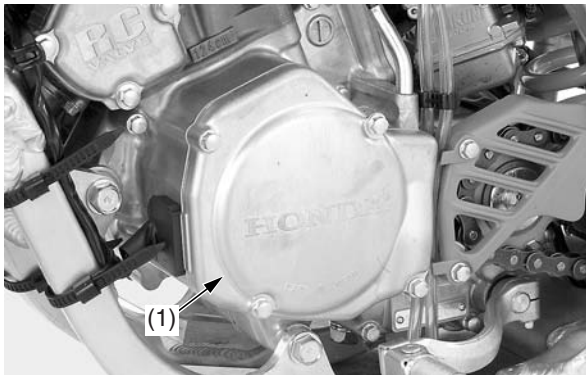

(1) alternator cover

After Cleaning Lubrication

There are some things you should do just after washing your CR to help prevent rust and corrosion.

Once your CR is clean and dry, you should protect any bare steel from rusting by applying a light coating of a rust-inhibitor. Lubricate the drive chain and drive sprocket after removing and thoroughly cleaning in solvent. Be sure the chain is wiped clean and is dry before applying the chain lube.

Follow the suggestions given in the pages of this manual for lubricating items such as the brake and clutch lever pivot points and footpeg pivot pins.

Aluminum Frame Maintenance

Aluminum corrodes when it comes in contact with dust, mud and road salt.

To remove stains, use Scotch Brite Hand Pad #7447 (maroon) or an equivalent. Wet the pad and polish the surface using strokes parallel to the length of the frame.

Clean the frame using a wet sponge and a mild detergent, then rinse well with clean water. Dry the frame with a soft clean cloth, using strokes parallel to the length of the frame.

NOTICE

Do not use steel wool to clean the frame as it could damage or discolor the frame surface. Muffler stain remover (Scotch Brite Hand Pad #7447-maroon) is for removing stains on the non-coated aluminum frame only.

This section tells you how to fine tune your CR for maximum competition performance.

Initial suspension adjustments should be performed after a minimum of two hours of easy break-in time.

Optional front and rear suspension springs are available in both firmer and softer than standard rates, in order to tailor your CR specifically for your weight, riding style and course conditions.

Follow the instructions given in the rear suspension sag setting section of *Rear Suspension Adjustments* to determine if your combined rider and sprung machine weight (rider fully dressed for competition and machine coolant, oil and fuel levels ready for competition) requires an optional firmer or softer rear spring. The need for either optional rear spring may need to be balanced by installing the optional fork springs of a similar rate.

| | |
|--|-----|
| Front Suspension Adjustments | 82 |
| Rear Suspension Adjustments | 92 |
| Suspension Adjustments for Track Conditions .. | 96 |
| Suspension Adjustments Guidelines | 97 |
| Carburetor Adjustments & Tuning Tips | 100 |
| Chassis Adjustments | 107 |
| Gearing | 108 |
| Tire Selection for Track Conditions | 109 |
| Personal Fit Adjustments | 110 |

Front Suspension Adjustments

The front suspension can be adjusted for the rider's weight and riding conditions by using one or more of the following methods:

- **Oil volume** — The effects of higher or lower fork oil level are only felt during the final 3.9 in (100 mm) of fork travel.
- **Compression damping** — Turning the compression damping screw adjusts how quickly the fork compresses.
- **Rebound damping** — Turning the rebound damping screw adjusts how quickly the fork extends.
- **Fork springs** — Optional springs are available in softer and stiffer types than the standard rate. (page 127)


Front Suspension Air Pressure

Air is an unstable gas which builds up pressure as it is worked (such as in a fork). Air pressure acts as a progressive spring and affects the entire range of fork travel. This means the fork action on your CR will get stiffer during a race. For this reason, release built-up air pressure in the fork legs between motos. Be sure the fork is fully extended with the front tire off the ground when you release the pressure.

The standard air pressure is 0 psi (0 kPa, 0 kgf/cm²). You may relieve accumulated air pressure in the fork legs by using the pressure release screws. The front wheel should be off the ground before you release the pressure.

The air pressure should be adjusted according to the altitude and outside temperature.

1. Place an optional workstand under the engine, so that the front wheel is off the ground. Do not adjust air pressure with the front wheel on the ground as this will give false pressure readings.
2. Remove the pressure release screws (1).
3. Check that the O-ring (2) is in good condition.
4. Install the pressure release screws to the specified torque:
0.9 lbf·ft (1.2 N·m, 0.1 kgf·m)

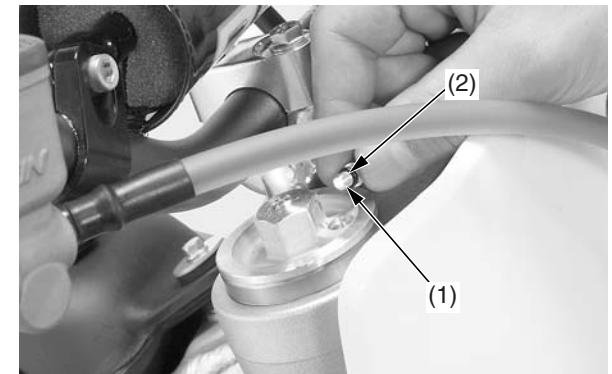

(1) pressure release screw

(2) O-ring


Front Suspension Damping

Compression Damping

Compression damping affects how quickly the fork compresses.

The compression damping adjuster has 20 positions or more. Turning the adjuster screw one full turn advances the adjuster 4 positions.

Always start with the full hard position when adjusting damping.

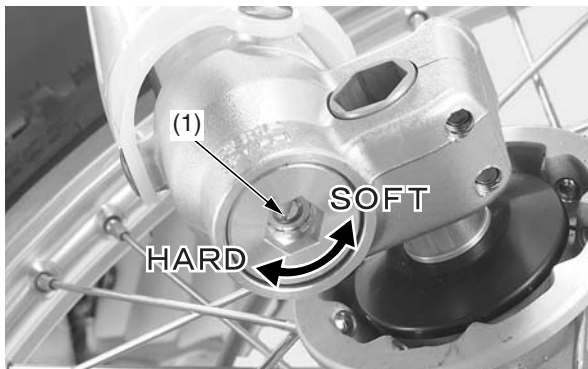

(1) compression damping adjuster

To adjust to the standard position:


1. Remove the rubber plug.
2. Turn the compression damping adjuster (1) clockwise until it will no longer turn (lightly seats). This is the full hard position.
3. Turn the adjuster counterclockwise 6 clicks. This is the standard position.
4. Make sure that both fork legs are adjusted to the same position.

Rebound Damping

Rebound damping effects how quickly the fork rebounds.

The rebound damping adjuster has 18 positions or more. Turning the adjuster screw one full turn clockwise advances the adjuster 4 positions.

Always start with the full hard position when adjusting damping.

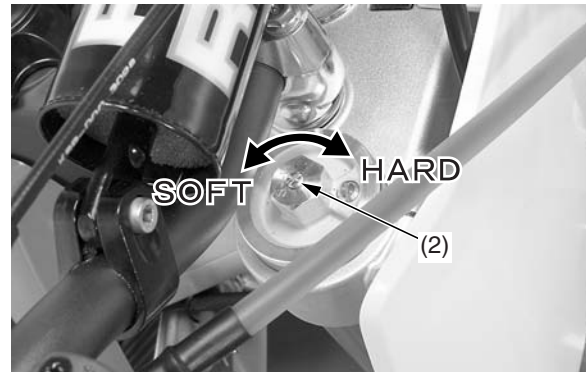

(2) rebound damping adjuster

To adjust to the standard position:

1. Turn the rebound damping adjuster (2) clockwise until it will no longer turn (lightly seats). This is the full hard position.
2. Turn the adjuster counterclockwise 15 clicks. This is the standard position.
3. Make sure both fork legs are adjusted to the same position.


Fork Springs

The fork springs in CR's are about right for riders weighing between 150 and 160 lbs (less riding gear). So if you're a heavier rider, you have to go up on the oil level or get a stiffer spring. Do not use less oil than the minimum specified for each spring or there will be a loss of rebound damping control near full extension. If the fork is too hard on big bumps, turn the damping adjuster counterclockwise 1-turn and lower the oil level in increments of 5 cm³ (0.2 oz) in both fork legs until the desired performance is obtained. Do not, however, lower the oil level below the minimum oil level.

Minimum oil level:

| | |
|------------------|------------------|
| Standard Spring: | 4.45 in (113 mm) |
| Softer Spring: | 4.25 in (108 mm) |
| Stiffer Spring: | 4.61 in (117 mm) |

When adjusting oil levels, bear in mind that the air in the fork will increase in pressure while riding; therefore, the higher the oil level, the higher the eventual pressure of any air in the fork.

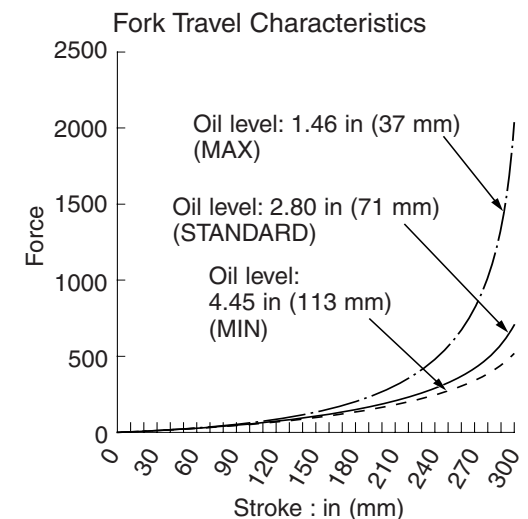

Front Suspension Adjustments

Front Suspension Oil Level Adjustment

- If your CR is brand-new, put enough part-throttle break-in time (about one hour) on it to ensure that the suspension has worked in.
 - For optimum performance, and extended fork life, the fork should be completely disassembled and cleaned after the first three hours of riding. See the Service Manual or your Honda dealer for this service.
1. Place your CR on the optional workstand or equivalent support with the front wheel off the ground.
 2. Remove the number plate bolt (1) and number plate(2).




- (1) number plate bolt
(2) number plate

3. Remove the handlebar pad.
Remove the washers/handlebar holder nuts (3), mounting rubbers and handlebar (4).

NOTICE

Keep the master cylinder upright to prevent air from entering system.

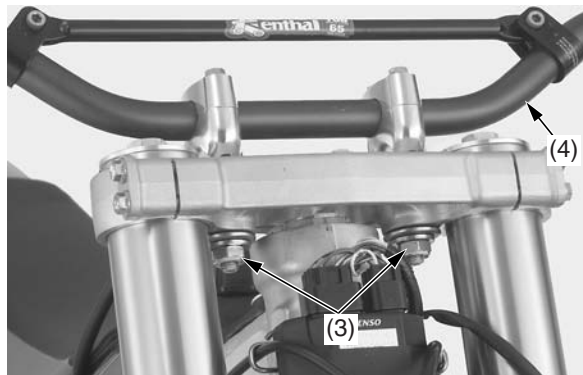


- (3) washers/handlebar holder nuts
(4) handlebar

4. Loosen the upper pinch bolts (5) (before loosening the fork caps to avoid damaging the fork caps).
5. Loosen the fork caps (6), but do not remove them yet.

NOTICE


Using an adjustable wrench to loosen the fork caps may damage them.

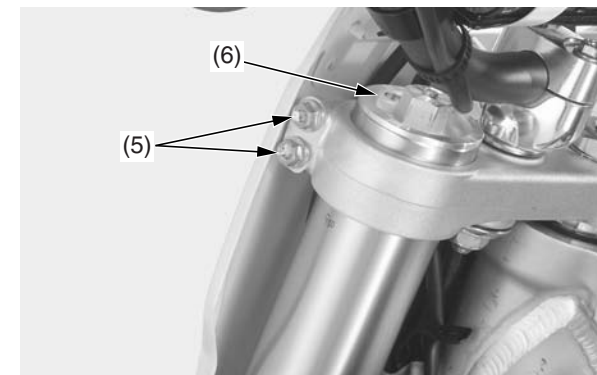

- (5) upper pinch bolts (6) fork cap


Front Suspension Adjustments

6. Remove the disc cover (7) by removing the two bolts (8).

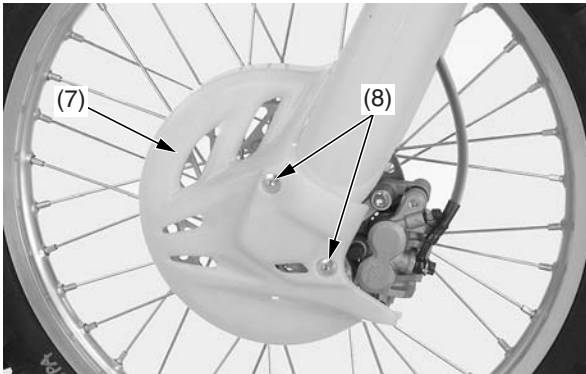

(7) disc cover (8) bolts

7. Remove the axle nut (9) and loosen the axle pinch bolts (10) on both forks.
8. Pull the front axle shaft (11) out of the wheel hub and remove the front wheel.

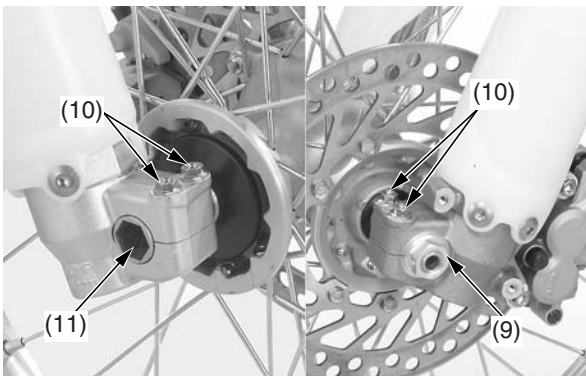


(9) axle nut (10) axle pinch bolts (11) front axle shaft

9. Remove the fork protector bolts (12), brake hose clamp bolts (13) and fork protectors (14).
10. Remove the brake caliper bolts (15) and brake caliper (16).


NOTICE

Do not support the brake caliper by the brake hose. Do not operate the brake lever after the front wheel is removed. To do so will cause difficulty in fitting the brake disc between the brake pads.

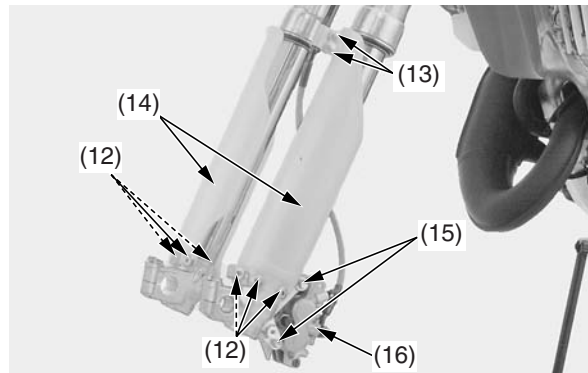

(12) fork protector bolts (13) brake hose clamp bolts (14) fork protectors (15) brake caliper bolts (16) brake caliper

11. Loosen the fork leg lower pinch bolts (17), then pull the fork legs down and out.

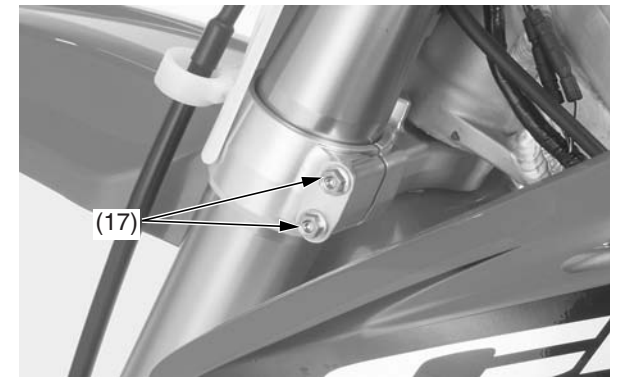


(17) lower pinch bolts

12. Clean the fork assembly, especially the sliding surface of the slider pipe (18) and dust seal (19).

NOTICE


The outer tube can drop on the slider and damage the fork dust seal and guide bushing when the fork damper is removed. To avoid damage hold both the outer tube and slider when removing the fork damper.

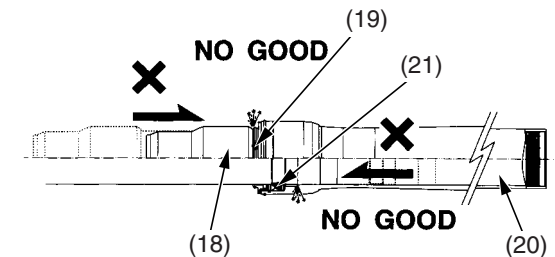

(18) slider pipe (19) dust seal (20) fork tube (21) guide bushing


Front Suspension Adjustments

13. Record the rebound damping adjuster position and turn the adjuster screw (22) counterclockwise until it stops.
14. Hold the fork tube (20), then remove the fork cap (6), from the fork tube. Gently slide the fork tube down onto the lower end of the slider pipe (23).

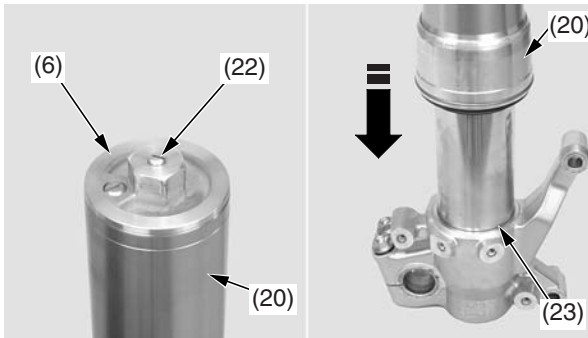


(6) fork cap
(20) fork tube
(22) adjuster screw
(23) slider pipe, lower end

15. Remove the fork cap (6) from the damper rod (24) by holding the lock nut (25).
16. Remove the spring seat (26) and fork spring (27).

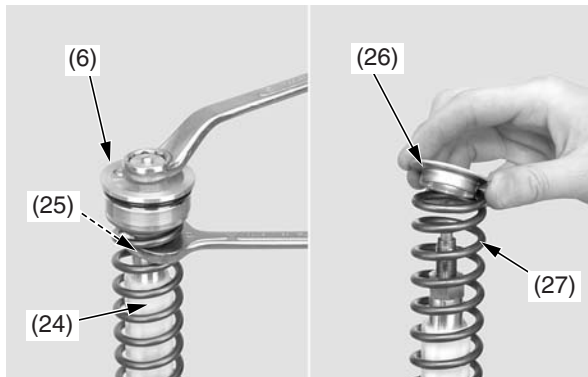


(6) fork cap
(24) damper rod
(25) lock nut
(26) spring seat
(27) fork spring

17. Pour the recommended fork oil into the fork tube (20) until a little oil flows out of the top of the damper rod. Leave the damper rod for about one minute.
18. With the fork held upright, measure the oil level (28) from the top of the fork tube to the fork oil.

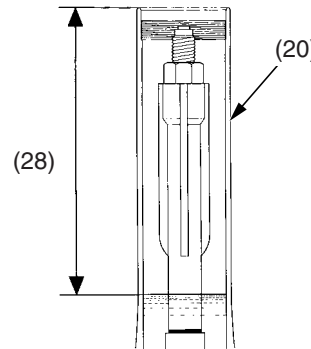

(20) fork tube
(28) oil level

19. Adjust the oil level by adding or removing oil with an aftermarket syringe (29).

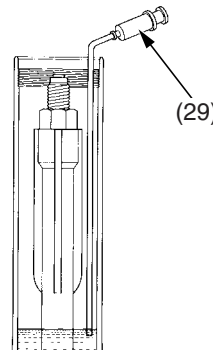


(29) syringe

Front Suspension Adjustments


Fork Oil Level

Standard (0.44 kgf/mm) Fork Spring




| | | |
|--------------------|------------------|--|
| Standard oil level | 2.8 in 71 mm | |
| Maximum oil level | 1.5 in 37 mm | Slightly stiffer as it nears full compression. |
| Minimum oil level | 4.4 in 113 mm | Slightly softer as it nears full compression. |

Optional Softer (0.42 kgf/mm) Fork Spring



| | | |
|--------------------|------------------|--|
| Standard oil level | 2.6 in 67 mm | |
| Maximum oil level | 1.3 in 33 mm | Slightly stiffer as it nears full compression. |
| Minimum oil level | 4.3 in 108 mm | Slightly softer as it nears full compression. |


Optional Stiffer (0.46 kgf/mm) Fork Spring



| | | |
|--------------------|------------------|--|
| Standard oil level | 3.0 in 75 mm | |
| Maximum oil level | 1.6 in 41 mm | Slightly stiffer as it nears full compression. |
| Minimum oil level | 4.6 in 117 mm | Slightly softer as it nears full compression. |

- Be sure the oil level is the same in both fork legs.
- Always use the after market syringe while adjusting the oil level.
If it isn't used, air may get into the fork.
- If a syringe is not available, first set the oil level somewhat lower than the normal level, then add small amounts of oil until the correct level is obtained, measuring the level each time oil is added.

- Inspect both ends of the fork spring. If you find any roughness or burred edge on the end of either spring, smooth the roughness with a file and some emery cloth.
- Clean the spring and spring seat thoroughly with a high flash point solvent to remove all metal particles and dirt.
- Dry the spring and spring seat with air pressure rather than a shop towel. Using a shop towel allows lint to stick to the springs. Lint or any particles that stick in the damping passages can cause inconsistent damping.
- Check that the O-ring (30) on the fork cap is in good condition. Apply the recommended fork oil to the O-ring.

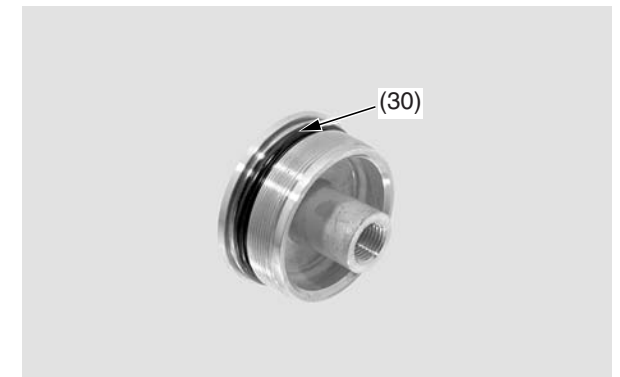


(30) O-ring

(cont'd)


Front Suspension Adjustments

24. Loosen the lock nut (25) slightly.
25. Attach a two-foot length of mechanic's wire (31) to the threaded portion on the lock nut. Wrap the wire securely around the threads.
26. Install the fork spring (27) as follows:
 - With the fork spring held upright on its marked end, feed the mechanic's wire up through the spring.
 - Angle the fork spring and slowly slide it down into the fork using a gentle rocking motion.

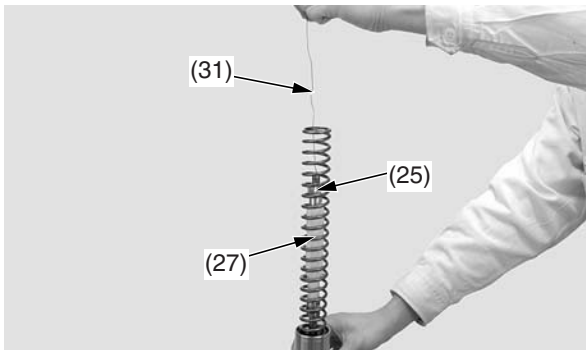


(25) lock nut
(27) fork spring
(31) mechanic's wire

27. Pull the mechanic's wire up and hold the damper rod (24). Remove the mechanic's wire from the damper rod. Screw the lock nut (25) by hand until stops.

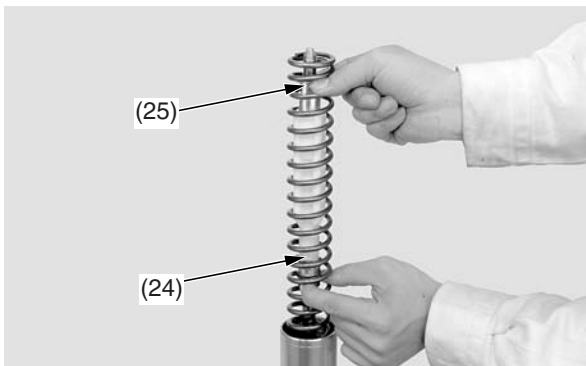


(24) damper rod
(25) lock nut

28. Place the spring seat (26) on the fork spring (27) with its flat side facing up.

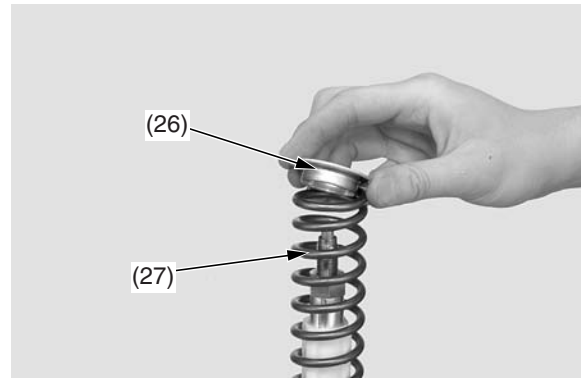

(26) spring seat
(27) fork spring

29. Screw the fork cap (6) on the damper rod.
30. Hold the lock nut (25) and tighten the fork cap to the specified torque:
21 lbf·ft (28 N·m, 2.9 kgf·m)

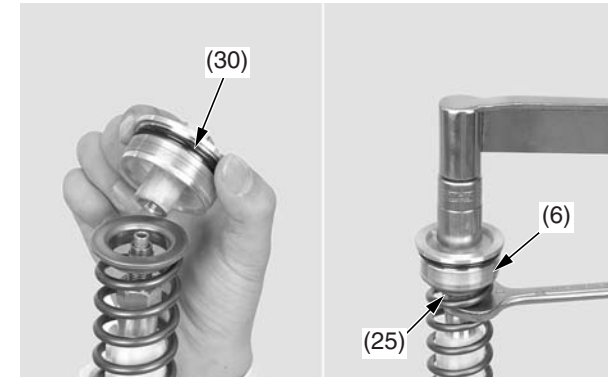

(6) fork cap
(25) lock nut

(30) O-ring

31. Temporarily thread the fork cap into the fork tube.
32. Insert both fork legs into the fork clamps.


Front Suspension Adjustments

33. Align the groove in the fork tube (20) with the top surface of the upper fork clamps (32).
If installing the optional 20 inch wheel, align the top of the fork tube (not the top of the fork cap) with the top surface of the upper fork clamp.
34. Temporarily tighten the fork lower pinch bolts (17) and then tighten the fork cap (6) to the specified torque:
22 lbf·ft (30 N·m, 3.1 kgf·m)
35. For ease of releasing air pressure after the forks are installed, loosen the lower pinch bolts and position the fork outer tubes so that the pressure release screws are in front of the rebound damping adjusters.
36. Tighten the fork lower pinch bolts to the specified torque:
15 lbf·ft (20 N·m, 2.0 kgf·m)
37. Tighten the fork upper pinch bolts (5) to the specified torque:
16 lbf·ft (22 N·m, 2.2 kgf·m)

Tighten the bolts alternately in 2 or 3 steps.


NOTICE

Over-tightening the pinch bolts can deform the fork tubes. Deformed fork tubes must be replaced.

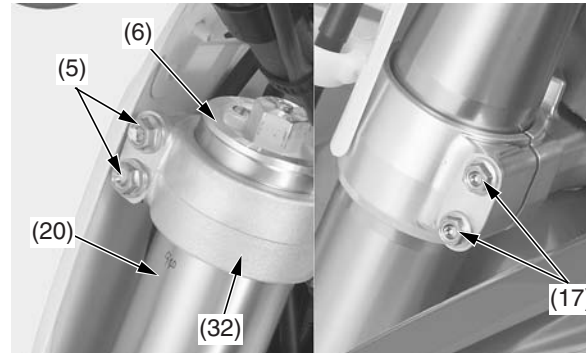


(5) upper pinch bolts (20) fork tube
(6) fork cap (32) upper fork clamp
(17) lower pinch bolts

38. Position the wear ring (33) with its end gap facing rearward.

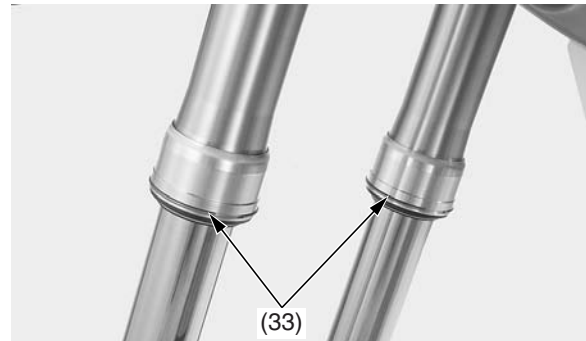

(33) wear ring


39. Clean the threads of the fork protector bolts (12) and axle holder thoroughly. Apply locking agent to the bolt threads. Install the fork protectors (14), fork protector bolts and brake hose clamp bolts (13). Tighten the fork protector bolts to the specified torque:
5.2 lbf·ft (7 N·m, 0.7 kgf·m)

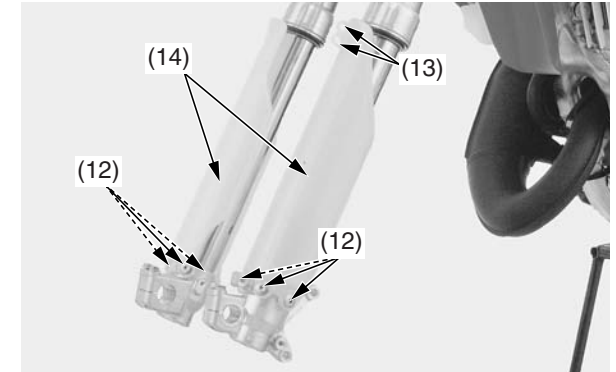

(12) fork protector bolts (14) fork protectors
(13) brake hose clamp bolts

Front Suspension Adjustments


40. Clean the surfaces where the front axle shaft and axle clamps contact each other.
41. Install the left and right side collars into the wheel hub.
42. Insert the front axle shaft through the wheel hub from the right side. Make sure the axle shaft is seated firmly onto the left fork leg clamp inner surface.
43. Tighten the axle nut (9) to the specified torque:
65 lbf·ft (88 N·m, 9.0 kgf·m)

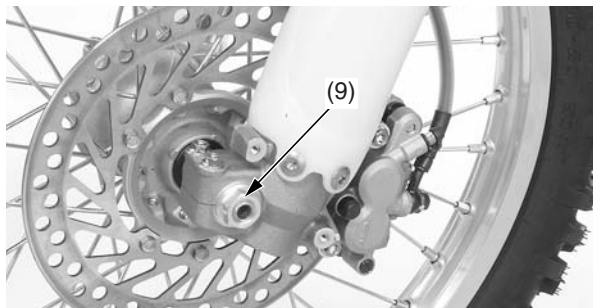

(9) axle nut


44. Align the brake caliper (16) and hose with the left fork leg, making sure that the brake hose is not twisted. An improperly routed brake hose may rupture and cause a loss of braking efficiency. Route the hose carefully.
45. Clean the threads of the caliper mounting bolts (15) and brake caliper thoroughly.
46. Apply locking agent to the bolt threads.
47. Install the brake caliper on the fork slider and tighten the caliper bolts to the specified torque:
22 lbf·ft (30 N·m, 3.1 kgf·m)

Fit the brake caliper over the disc, taking care not to damage the brake pads.

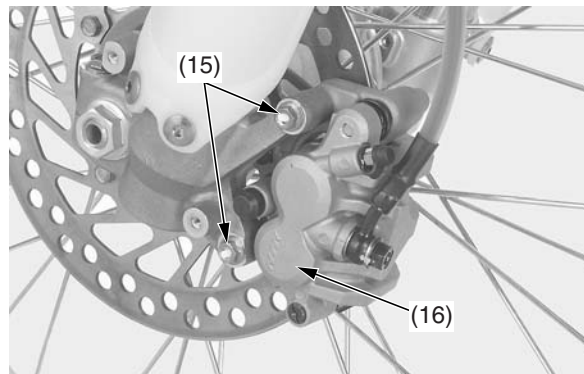


(15) brake caliper mounting bolts (16) brake caliper

48. Install the handlebar (4) mounting rubbers (34), washers and handlebar holder nuts (3) and tighten the handlebar holder nuts to the specified torque:
32 lbf·ft (44 N·m, 4.5 kgf·m)

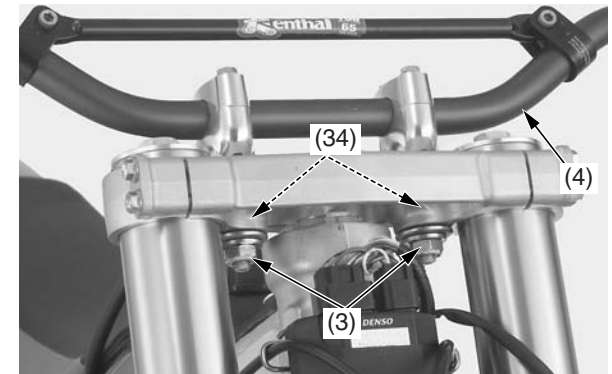

(3) washers/handlebar holder nuts
(4) handlebar
(34) mounting rubbers


49. Install the number plate (2) by aligning its hole (35) with the tab (36) on the steering stem.

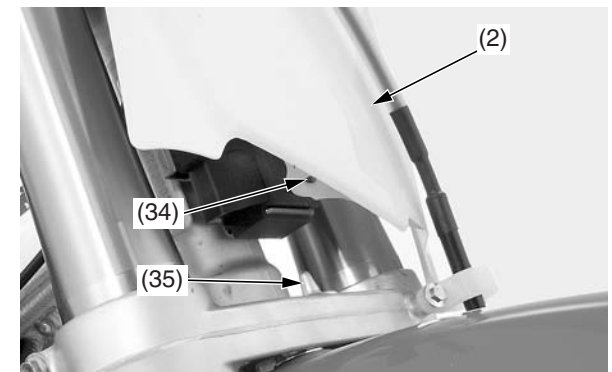

(2) number plate
(35) hole (36) tab


Front Suspension Adjustments

- 50. Install and tighten the number plate bolt (1).
- 51. Install the handlebar pad (37).

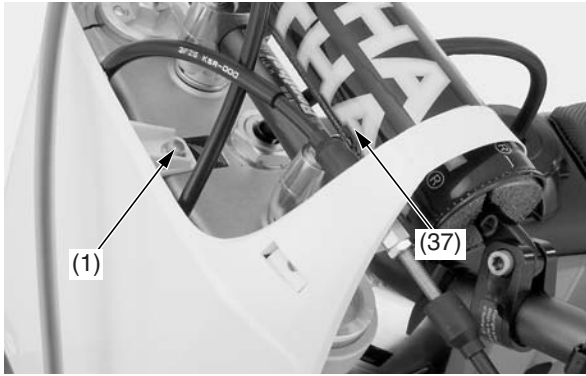

- (1) number plate bolt
- (37) handlebar pad

- 52. With the front brake applied, pump the fork up and down several times to seat the axle and check front brake operation.

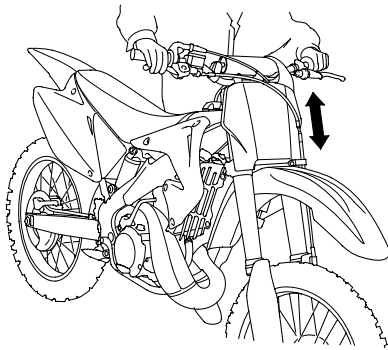

- 53. Tighten the left axle pinch bolts (38) alternately first.
While keeping the forks parallel, alternately tighten the right axle pinch bolts (39) to the specified torque:
15 lbf·ft (20 N·m, 2.0 kgf·m)




- (38) left fork pinch bolts (39) right fork pinch bolts

NOTICE

To avoid damage when torquing the axle pinch bolts, be sure the axle is seated firmly onto the left fork leg clamp inner surface.

- 54. Clean the threads of the bolts and axle holder thoroughly.
- 55. Apply locking agent to the bolt threads.
- 56. Install the disc cover (7) and tighten the bolts (8) to the specified torque:
10 lbf·ft (13 N·m, 1.3 kgf·m)

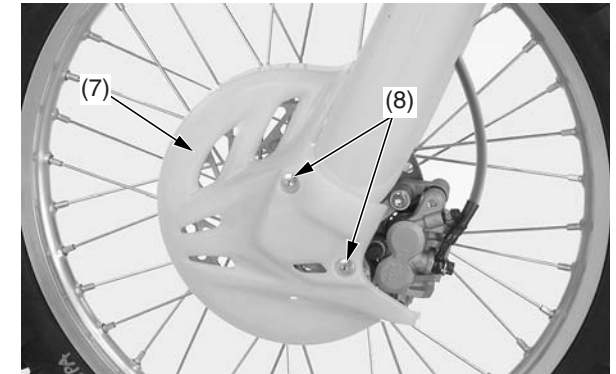

- (7) disc cover (8) bolts

- 57. Turn the rebound damping adjuster screws back to their original settings.

Rear Suspension Adjustments

The rear suspension can be adjusted for the rider's weight and riding conditions by changing the spring pre-load and the rebound and compression damping.

The rear shock absorber assembly includes a damper unit that contains high pressure nitrogen gas. Do not attempt to disassemble, service, or dispose of the damper; see your Honda dealer. The instructions found in this owner's manual are limited to adjustments of the shock assembly only.

Puncture or exposure to flame may also result in an explosion, causing serious injury. Service or disposal should only be done by your authorized Honda dealer or a qualified mechanic, equipped with the proper tools, safety equipment and the official Honda Service Manual.

If your CR is new, put enough part-throttle break-in time (about one hour) on it to ensure that the suspension has worked in.

Rear Suspension Spring Pre-Load


Pre-load should be adjusted when the engine is cold because it is necessary to remove the silencer (page 32).

An optional pin spanner is available for turning the lock nut and adjusting nut to adjust spring pre-load.

1. Place an optional workstand under the engine to raise the rear wheel off the ground.
2. Loosen the connecting tube clamp screw and remove the rear subframe's three mounting bolts, then remove the subframe. See page 32.

3. Check that the spring preload is adjusted to the standard length. Adjust as necessary by loosening the lock nut (1) and turning the adjusting nut (2).

Each complete turn of the adjuster nut changes the spring length by 1/16 in (1.5 mm).

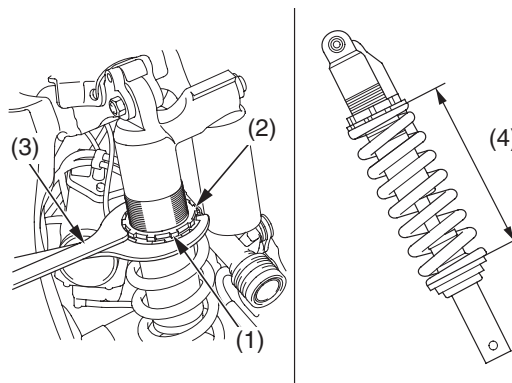

- (1) lock nut
(2) adjuster nut
(3) pin spanner
(4) spring length

To increase spring pre-load:

Loosen the lock nut with the optional pin spanner (3) and turn the adjusting nut to shorten the spring length (4). Do not shorten to less than: 10.0 in (254 mm)

To decrease spring pre-load:

Loosen the lock nut with the optional pin spanner (3) and turn the adjusting nut to increase the spring length (4). Do not increase to more than: 10.8 in (275 mm)

Each turn of the adjuster changes spring length and spring pre-load. One turn equals: spring length/spring pre-load:
0.06 in (1.5 mm) / 15.2 lbs (6.9 kg)

Pin spanners should be used for turning the lock nut and adjusting nut. See page 127 for optional pin spanners.

Spring preload length (Standard spring)

Standard: 10.5 in (266 mm)

Min. : 10.0 in (254 mm)

Spring preload length (Optional spring)

Min. (Softer, 4.4 kgf/mm): 10.0 in (254 mm)

Min. (Stiffer, 4.8 kgf/mm): 10.0 in (254 mm)

Min. (Stiffer, 5.0 kgf/mm): 10.0 in (254 mm)

Rear Suspension Damping

Compression Damping

Compression damping may be adjusted in two stages with separate adjusters.

The high speed damping adjuster (1) is effective when damping adjustment is desired for high speed operation. The low speed damping adjuster (2) should be used when damping adjustment is desired at relatively low speeds.

- Both the high and low speed compression damping can be increased by turning the appropriate adjuster clockwise.
- Adjust the high speed compression adjuster in 1/12 turn increments.



(1) high speed damping adjuster
(2) low speed damping adjuster

High Speed Damping:

The high speed damping can be adjusted by turning the hexagonal portion of the compression adjuster.

The high speed compression damping adjuster has 2 turns or more.

To adjust to the standard position:

1. Turn the adjuster clockwise until it will no longer turn (lightly seats). This is the full hard setting.
2. Turn the adjuster counterclockwise 1-1/6—1-1/2 turns and the punch marks are aligned.

Low Speed Damping:

The low speed damping can be adjusted by turning the center screw of the compression adjuster.

The low speed compression adjuster has 18 positions or more.

Turning the adjuster one full turn clockwise advances the adjuster 4 positions.

To adjust to the standard position:


1. Turn the adjuster clockwise until it will no longer turn (lightly seats). This is the full hard setting.
2. Turn the adjuster counterclockwise 8 – 12 clicks and the punch marks are aligned.

Rebound Damping

The rebound damping adjuster (3) is located at the lower end of the shock absorber.

It has 30 positions or more. Turning the adjuster one full turn advances the adjuster 8 positions.

- Rebound damping can be increased by turning the adjuster clockwise.

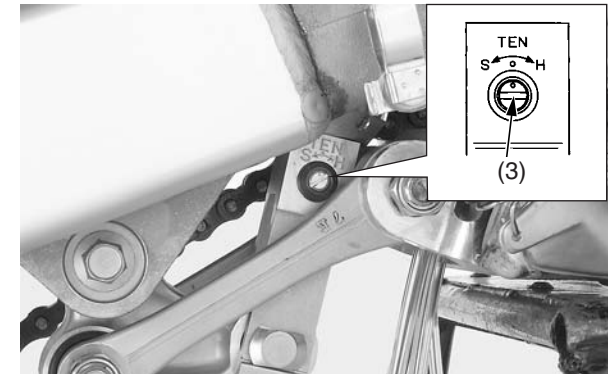

(3) rebound damping adjuster

To adjust to the standard position:

1. Turn the adjuster clockwise until it will no longer turn (lightly seats). This is the full hard position.
2. Turn the adjuster counterclockwise 20 – 24 clicks with the punch marks on the adjuster and the shock absorber aligned.

Rear Suspension Adjustments

Rear Suspension Race Sag

Setting the proper race sag (ride height) is very important for competition use.

Race sag refers to the amount of rear wheel travel used by your CR at rest, ready to ride, with you on the seat. As a general rule of thumb, the race sag dimension should be about one-third of the maximum travel.

On your CR, ride height is changed by adjusting the rear suspension spring pre-load.

Spring Pre-load & Race Sag Adjustment

The following adjustment procedure establishes the correct starting point for any suspension tuning — the proper rear spring pre-load adjustment for your specific needs.

Your CR should be at normal racing weight, including fuel and transmission oil. You should be wearing all your normal protective apparel. You will need two helpers.


To calculate the proper adjustment, it is necessary to measure between two fixed points — from the top of the most rearward point of the subframe down to the machined edge at the rear of the swingarm, as illustrated — for three different situations:

unloaded: motorcycle on optional workstand with rear suspension fully extended, no rider.

loaded with rider: motorcycle on ground, with rider.


loaded without rider: motorcycle on ground, without rider

1. Support your CR on a workstand with the rear wheel off the ground.
2. Measure the *unloaded* dimension.

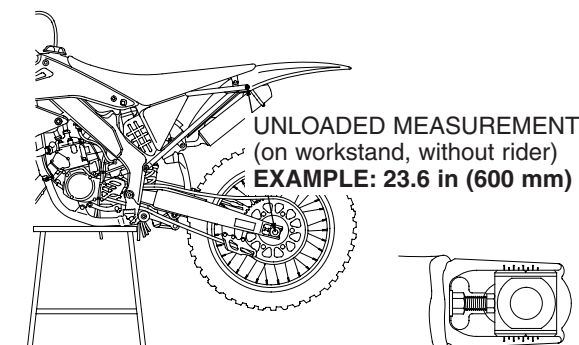

3. Measure the *loaded with rider* dimension. Remove the workstand. With two helpers available, sit as far forward as possible on your CR's seat, wearing your riding apparel. Ask one helper to steady your CR perfectly upright so you can put both feet on the pegs. Bounce your weight on the seat a couple of times to help the suspension overcome any stiction and settle to a good reference point.

Ask the other helper to measure the *loaded with rider* dimension.

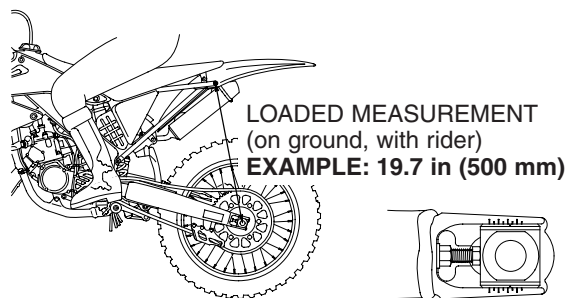

Race Sag Calculation:

| | |
|--------------------|------------------|
| unloaded | 23.6 in (600 mm) |
| —loaded with rider | 19.7 in (500 mm) |
| Race Sag | 3.9 in (100 mm) |

4. Calculate the *race sag* dimension. To do this, subtract the *loaded with rider* dimension (step 3) from the *unloaded* dimension (step 2).


Standard Race Sag: 3.9 in (100 mm)

Adjust spring pre-load as necessary to obtain the desired handling results.

Decreasing the race sag dimension (example: 3.5 in, 90 mm) improves turning ability for tight terrain at the cost of slightly reduced straight line stability.

Increasing the race sag dimension (example: 4.3 in, 110 mm) may improve stability on faster terrain with less turns, but will reduce turning performance slightly and may upset the balance between the front and rear suspension, producing a harsher ride. This will happen if the adjustment shifts the effective wheel travel toward the more progressive end of its range.

5. Measure the *loaded without rider* dimension. Do this with your CR set at the standard race sag.

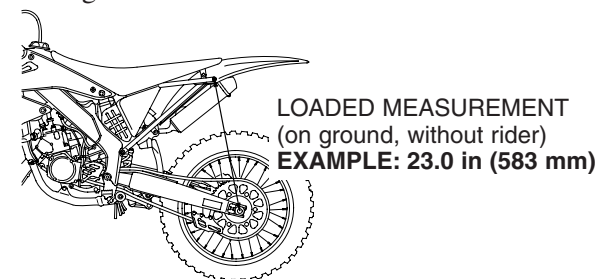

Free Sag Calculation:

| | |
|-----------------------|------------------|
| unloaded | 23.6 in (600 mm) |
| —loaded without rider | 23.0 in (583 mm) |
| Free Sag | 0.6 in (17 mm) |

6. Calculate the *free sag* dimension.

To do this, subtract the *loaded without rider* dimension (step 5) from the *unloaded* dimension (step 2).

Free sag indicates the distance your rear suspension should sag from the weight of the sprung portion of your CR.

With the spring pre-load set to obtain the proper race sag, the rear suspension should sag 0.4 to 1.0 in (10 to 25 mm).

If the rear of your CR sags more than 1.0 in (25 mm) from its own weight, the spring is too stiff for your weight. It is not compressed enough, even though you have the proper race sag adjustment. As a result, the rear suspension will not extend as far as it should.

Spring Rates

If you are lighter or heavier than the average rider and cannot set the proper ride height without altering the correct spring pre-load, consider an aftermarket shock absorber spring.

A spring that is too soft for your weight forces you to add excessive spring pre-load to get the right race sag and, as a result, the rear end of the motorcycle is raised. This can cause the rear wheel to unload too much in the air and top out as travel rebounds. The rear end may top out from light braking, or kick sideways over lips and square-edged terrain. It may even top-out when you dismount your CR.

Because of the great absorption quality of the shock bumper rubber, it may be difficult for you to notice when your CR's suspension is bottoming. Some riders may think the damping or perhaps the leverage ratio is too harsh. In reality, the problem is most likely insufficient spring pre-load or a spring that is too soft. Either situation prevents utilizing the full travel.

Keep in mind that a properly adjusted suspension system may bottom slightly every few minutes at full speed. Adjusting the suspension to avoid this occasional bottoming may cost more in overall suspension performance than it is worth.

A spring that is too firm for your weight will not allow the rear tire to hook up under acceleration and will pass more bumps on to you.

Suspension Adjustments for Track Conditions

Soft Surface

On soft ground, sand, and especially mud, consider increasing compression damping front and rear.

Sand often requires a bit more rebound damping to minimize rear end kick. Although sand bumps are usually larger, there's more distance between them, giving the shock more time to recover.

You may want a little bit stiffer front suspension for sand tracks to help keep the front end up and improve straight-line stability.

In a muddy event, stiffer aftermarket springs front and rear may help, especially if you are heavier than the average rider. Your CR may be undersprung because of the added weight of the clinging mud. This additional weight may compress the suspension too much and affect traction.

Hard Surface

For a fast, hard track with no large jumps, you can probably run the same spring as normal, but run softer damping both ways-compression and rebound. If you run softer rebound damping, the wheel will follow the rough ground and small bumps much better, and you will hook up better. With a lot of rebound damping, the wheel returns very slowly and doesn't contact the ground quickly enough after each bump. The result is a loss of traction and slower lap times.

Suspension Adjustment Guidelines

Follow the procedures described below to accurately adjust your CR, using the methods described on pages 82 - 96. Remember to make all adjustments in one-click increments. Test ride after each adjustment.

Front Suspension Adjustment Adjustments for Type of Track

| | |
|---------------------|---|
| Hard-surfaced track | Begin with the standard setting. If the suspension is too stiff/soft, adjust according to the chart below. |
| Sand track | Adjust to a stiffer position. Example: – Turn the compression damping adjuster to a stiffer position. – Install the optional stiff spring. (Adjust compression damping to a softer position and rebound damping to a harder position at this time.) |
| Mud track | Adjust to a stiffer position because mud build-up increases your CR's weight. Example: – Turn the compression damping adjuster to a stiffer setting. – Install the optional stiff spring. |

Adjustments for Too Soft/Stiff Damping

| | Symptom | Action |
|-----------------|---|--|
| Soft suspension | Initial travel too soft: • Steering is too quick. • Front end darts while cornering or riding in a straight line. | – Test stiffer compression damping adjustments in one-click increments. – Test stiffer rebound damping in one-click increments. |
| | Middle travel too soft: • Front end dives when cornering. | If suspension isn't stiff in initial travel: – Test stiffer compression damping adjustments in one-click increments. If initial travel becomes stiff because of the above adjustment: – Reduce the rebound damping in one click increments. – Test softer compression damping adjustments in one-click increments. If that doesn't solve the problem, install the optional stiff spring. |
| | Final travel too soft: • Bottoms on landings. • Bottoms on large bumps, especially downhill bumps. | If initial and middle travel aren't stiff: – Test stiffer compression damping adjustments in one-click increments. If initial and middle travel are stiff: – Install the optional stiff spring. If initial travel is stiff after installing the optional stiff spring: – Test soft compression damping adjustments in one-click increments. If initial travel is still soft after installing the optional stiff spring: – Test stiffer compression damping adjustments in one-click increments. If final travel is still soft after installing the optional stiff spring: – Increase the fork oil level in increments of 0.2 in (5 mm). |
| | Entire travel too soft: • Front end shakes. • Fork bottoms over any type of terrain. | – Install the optional stiff spring. – Test stiffer compression damping adjustments in one-click increments. – Increase rebound damping in one-click increments. |

Suspension Adjustment Guidelines

| | Symptom | Action |
|------------------|--|--|
| Stiff suspension | Initial travel too stiff: <ul style="list-style-type: none"> • Stiff on small bumps while riding at full throttle in a straight line. • Stiff on small cornering bumps. • Front end wanders while riding at full throttle in a straight line. | <ul style="list-style-type: none"> – Test softer compression damping adjustments in one-click increments. – Reduce the rebound damping adjustments in one-click increments. – Check for dirt in the dust seals. Check the fork oil for any contamination. <p>If the front end dives while cornering, reduce the rebound damping in one click increments. If that doesn't solve the problem, install the optional stiff spring.</p> <p>If the stiff spring makes the suspension too stiff over the full range of travel: test softer compression damping adjustments in one-click increments until the desired compression damping for initial travel is obtained.</p> |
| | Middle travel too stiff: <ul style="list-style-type: none"> • Stiff on bumps when cornering. • Front end wanders when cornering. • Stiff suspension on bumps, especially downhill bumps. • While braking, front end dives during initial travel, then feels stiff. | <p>If initial travel isn't stiff:</p> <ul style="list-style-type: none"> – Test stiffer compression damping adjustments in one-click increments. (This should produce smooth fork action from initial to middle travel.) <p>If initial and middle travel is stiff:</p> <ul style="list-style-type: none"> – Test softer compression damping adjustments in one-click increments. – Reduce the rebound damping in one-click increments. |
| | Final travel too stiff: <ul style="list-style-type: none"> • Doesn't bottom on landings, but feels stiff. • Stiff on large bumps, especially downhill bumps. • Stiff on large bumps when cornering. | <p>If initial and middle travel aren't stiff:</p> <ul style="list-style-type: none"> – Test stiffer compression damping adjustments in one-click increments. (This should produce smooth fork action from initial to middle travel.) <p>If final travel is still stiff after the above adjustment, or</p> <p>If initial and middle travel becomes stiff:</p> <ul style="list-style-type: none"> – Install the optional soft spring. – Test softer compression damping adjustments in one-click increments. <p>If the entire travel feels stiff after the above adjustment:</p> <ul style="list-style-type: none"> – Test softer compression damping adjustments in one-click increments until the desired initial travel compression damping is obtained. – Lower the oil level by 0.2 in (5 mm). |
| | Entire travel too stiff: <ul style="list-style-type: none"> • Stiff suspension on any type of terrain. | <ul style="list-style-type: none"> – Test softer compression damping adjustments in one-click increments. – Reduce the rebound damping in one-click increments. – Lower the oil level by 0.2 in (5 mm). |

Suspension Adjustment Guidelines

Rear Suspension Adjustment Adjustments for Type of Track

| | |
|---------------------|--|
| Hard-surfaced track | Begin with the standard settings. If the suspension is too stiff/soft, adjust according to the chart below. |
| Sand track | Lower the rear end (to improve front wheel stability) by increasing Race Sag (reduce spring preload). Example: – Turn the compression damping adjuster and, especially, rebound damping adjuster to a stiffer setting. – Increase standard Race Sag (+0.2 to 0.4 in/5 to 10 mm). |
| Mud track | Adjust to a stiffer position because mud build-up increases your CR's weight. Example: – Adjust the compression and rebound damping adjusters to stiffer settings. – Install the optional stiff spring. – Reduce standard Race Sag (–0.2 to 0.4 in/5 to 10 mm). |

Symptoms and Adjustment

- Always begin with the standard settings.
- Turn the low speed compression and rebound adjusters in one-click increments, and the high speed compression adjuster in 1/12 turn increments at a time. Adjusting two or more clicks or turns at a time may cause you to pass over the best adjustment. Test ride after each adjustment.
- If, after setting, the suspension feels unusual, find the corresponding symptom in the table and test stiffer or softer compression and/or rebound damping adjustments until the correct settings are obtained as described.

| | Symptom | Action |
|--------------------|--|---|
| Stiff suspension | Suspension feels stiff on small bumps | 1. Test softer low speed compression adjustment. 2. If it still feels stiff, further test softer low and high speed compression adjustments simultaneously. |
| | Suspension feels stiff on large bumps | 1. Test softer high speed compression adjustment. 2. If it still feels stiff, further test softer low and high speed compression adjustments simultaneously. |
| | Entire travel too stiff | 1. Test softer high and low speed compression adjustments and rebound adjustment simultaneously. 2. If it still feels stiff, replace the spring with a softer spring (optional) and begin with the standard settings to softer settings. |
| Soft suspension | Entire travel too soft | 1. Test stiffer high and low speed compression adjustments simultaneously. 2. If it still feels soft, replace the spring with a stiffer spring (optional) and begin with the standard settings to stiffer setting. |
| | Rear end sways | 1. Test stiffer high and low speed compression adjustments and rebound adjustment to stiffer settings simultaneously. |
| Suspension bottoms | Suspension bottoms at landing after jumping | 1. Test stiffer high speed compression adjustment. 2. If it still bottoms, test stiffer high and low speed compression adjustments, and replace the spring with a stiffer spring (optional) if necessary. |
| | Suspension bottoms after landing | 1. Test stiffer low speed compression adjustment. 2. If it still bottoms, test stiffer high and low speed compression adjustments, and replace the spring with a stiffer spring (optional) if necessary. |
| | Suspension bottoms after end of continuous bumps | 1. Test softer rebound dumping adjustment. 2. If it still bottoms, test stiffer high and low speed compression adjustments and softer rebound damping adjustment, and replace the spring with a stiffer spring (optional) if necessary. |

Carburetor Adjustments & Tuning Tips

The carburetor on your CR should perform suitably with the standard recommended settings under average load, climatic, and barometric conditions. However, to fine tune the engine's power output, the carburetor may require adjustments for specific competition needs.


Optional main jets and slow jets are available for your CR. See your Honda dealer.

Any engine or airbox modifications or the use of an aftermarket exhaust system may require jetting changes.

Carburetor Components


Starting Circuit

A very rich mixture must be delivered to the cylinder when the engine is being started. When the choke knob (1) is pulled up, fuel is metered by the starter jet (2) and is mixed with air from the air passage (3) to provide a rich mixture for starting. The mixture discharges through the orifice (4) into the cylinder.

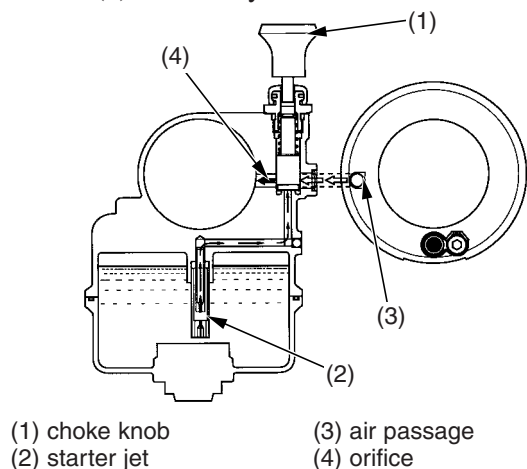

Slow Circuit

Fuel is metered by the slow jet (5) and is mixed with air that has been metered by the air screw (6). The mixture enters the venturi through the bypass (7) and slow jet outlet (8).

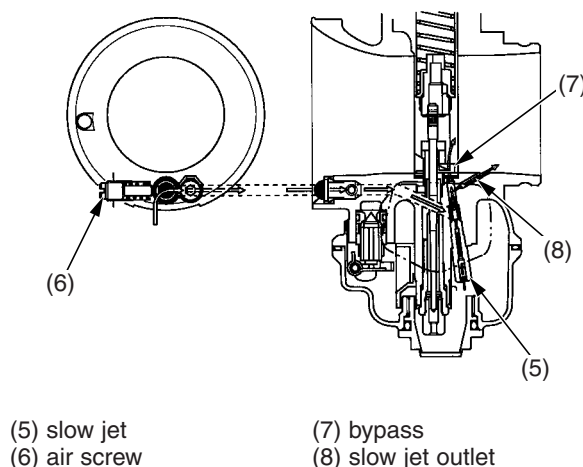

Main Circuit


Fuel is metered by the main jet (9), jet needle (10) and needle jet (11). It is then mixed with air coming from the air jet (12) and enters the venturi past the needle jet.

Baffle Plate

The baffle plate (13) prevents foaming of fuel or abnormal fuel level around the main jet.

Float Chamber


The float (14) and float valve (15) operate to maintain a constant level of fuel in the float chamber.

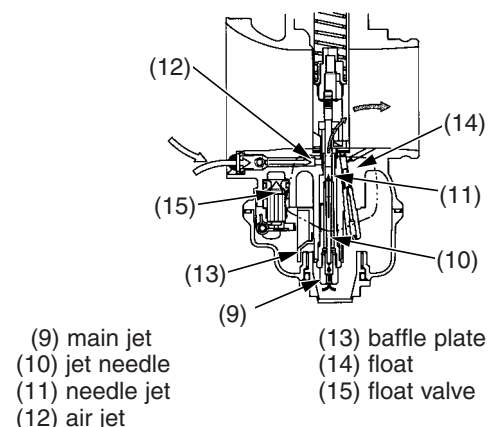

Carburetor Circuit Functions

The carburetor has several major circuits, each providing the fuel/air mixture over a given portion of throttle valve opening.

These major circuits overlap as shown below.

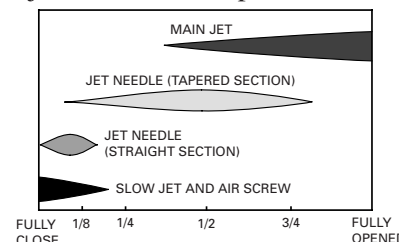

Main Jet


The main jet affects fuel/air ratio from half (1/2) to full throttle (4/4). The size should be reduced at higher altitudes.

Your CR's carburetor jet sizes are numbered in increments of 10. When changing the main jet size, increase or decrease it gradually until the desired jetting is obtained. Because your CR's jet size numbers do not correspond with other carburetor manufacturer's jet size numbers, use genuine Honda CR125R jets.

Carburetor Adjustments & Tuning Tips

Jet Needle

The jet needle controls fuel/air mixture over 1/16 to 3/4 throttle. The straight section (1) affects throttle response at smaller throttle openings. By changing the position of the clip (2) in its groove, you can improve acceleration at medium low and medium speed.

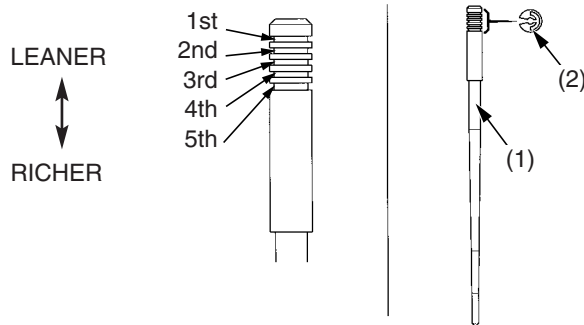

(1) straight section

(2) clip

Slow Jet and Air Screw

Refer to Carburetor Minor Adjustments (Page 106).

Standard Tuning Recommendations

For the following recommendations to be accurate, you must use the standard settings as a baseline. Also, don't change any of the settings until you've determined what changes are necessary.

| Adjustment | Standard settings |
|-----------------------|-------------------|
| Air screw opening | 1 3/4 turns out |
| Slow jet | #55 |
| Jet needle | 6DGY28-68 |
| Needle clip position | 3rd groove |
| Main jet | #430 |
| Float level | 0.30 in (7.5 mm) |
| Identification number | TMX05A |

All jetting is based on

- Standard Jetting
- 32:1 Fuel/Oil Ratio
- Unmodified Engine (Including Porting, Exhaust and Timing)

| TEMPERATURE | CENT. | -30°~-17° | -18°~-6° | -7° ~ 5° | 4° ~ 16° | 15° ~ 27° | 26° ~ 38° | 37° ~ 49° |
|--|---------------------------------|--------------------------------------|--------------------------------------|--------------------------------------|--------------------------------------|---|--------------------------------------|--------------------------------------|
| ALTITUDE | FAHR. | -21° ~ 0° | -1° ~ 20° | 19° ~ 40° | 39° ~ 60° | 59° ~ 80° | 79° ~ 100° | 99° ~ 120° |
| 10,000 ft (3050 m) to 7,500 ft (300 m) | AS: SJ: NC: JN: MJ: | 2 55 3 6DGY28-68 430 | 2 1/4 55 3 6DGY28-68 420 | 2 1/2 55 2 6DGY28-69 410 | 2 55 2 6DGY29-69 400 | 2 1/4 50 2 6DGY28-70 390 | 2 1/2 50 2 6DGY28-71 380 | 2 3/4 50 1 6DGY29-70 370 |
| 7,499 ft (2299 m) to 5,000 ft (1500 m) | AS: SJ: NC: JN: MJ: | 1 3/4 55 3 6DGY29-68 440 | 2 55 3 6DGY28-68 430 | 2 1/4 55 3 6DGY28-68 420 | 2 1/2 55 2 6DGY28-69 410 | 2 55 2 6DGY29-69 400 | 2 1/4 50 2 6DGY28-70 390 | 2 1/2 50 2 6DGY28-71 380 |
| 4,999 ft (1499 m) to 2,500 ft (750 m) | AS: SJ: NC: JN: MJ: | 1 1/2 55 3 6DGY29-67 450 | 1 3/4 55 3 6DGY29-68 440 | 2 55 3 6DGY28-68 430 | 2 1/4 55 3 6DGY28-68 420 | 2 1/2 55 2 6DGY28-69 410 | 2 55 2 6DGY29-69 400 | 2 1/4 50 2 6DGY28-70 390 |
| 2,499 ft (749 m) to 1,000 ft (300 m) | AS: SJ: NC: JN: MJ: | 1 1/4 60 4 6DGY29-67 460 | 1 1/2 55 3 6DGY29-67 450 | 1 3/4 55 3 6DGY29-68 440 | 2 55 3 6DGY28-68 430 | 2 1/4 55 3 6DGY28-68 420 | 2 1/2 55 2 6DGY28-69 410 | 2 55 2 6DGY29-69 400 |
| 999 ft (299 m) to Sea Level (0 m) | AS: SJ: NC: JN: MJ: | 1 3/4 60 4 6DGY29-66 470 | 1 1/4 60 4 6DGY29-67 460 | 1 1/2 55 3 6DGY29-67 450 | 1 3/4 55 3 6DGY29-68 440 | STANDARD 1 3/4 55 3 6DGY28-68 430 ADJUSTING | 2 1/4 55 3 6DGY28-68 420 | 2 1/2 55 2 6DGY28-69 410 |

Legend

AS: Air Screw opening from fully seated
 SJ: Slow Jet
 NC: Needle Clip position
 JN: Jet Needle
 MJ: Main Jet

Carburetor Adjustments & Tuning Tips

Adjustments for Altitude & Temperature

All jetting recommendations are based on standard jetting with an unmodified engine. The following conditions can affect the fuel mixture.

| Condition | Mixture will be | Adjust to | Component affected |
|------------------|-----------------|-----------|--------------------------------|
| Cold temperature | Lean | Richen | Main jet (jet needle stage) |
| Warm temperature | Rich | Lean | |
| Dry air | Lean | Richen | |
| High humidity | Rich | Lean | |
| High altitude | Rich | Lean | |

Special Tuning Conditions

There are some unique atmospheric conditions or situations that may require additional adjustments.

It should not be necessary to go more than one jet size richer or leaner to fine tune your CR. If larger jetting changes are necessary, check for air leaks, blocked or restricted exhaust or fuel systems, or a dirty air cleaner.

| Condition | Main Jet Adjustment |
|----------------------------|---------------------|
| long straights | next larger |
| uphill sections | |
| sand | |
| mud | |
| high humidity | next smaller |
| raining | |
| hotter than 113 °F (45 °C) | |

Once you've adjusted the carburetor for temperature and altitude, it shouldn't need major readjustment unless race conditions change drastically. However, there are some unique atmospheric conditions or race day situations that may require additional adjustments. They are as follows.

To prevent engine damage, always adjust the main jet before adjusting the jet needle. Always choose the next richer jet if there is any doubt so there is a margin for safety.

Main Jet

- Go richer on the main jet, by one number, when: the track has a very long straightaway or uphill section, a high percentage of sand, or the track is muddy.
- Go leaner on the main jet, by one number, when: it is very humid or raining, or it is hotter than 113 degrees F.

After using the chart, and making any adjustments for special conditions, it shouldn't be necessary to go more than one jet size richer or leaner to fine tune your CR. If larger jetting changes are necessary, check for worn crankshaft seals, air leaks, blocked or restricted exhaust or fuel systems, or a dirty air cleaner.

Pre-Adjustment Checks

Before adjusting carburetor settings, check the following:

- air cleaner
- air leaks
- float level
- clogged carburetor jets
- spark plug fouling (improper heat range or other cause)
- freshness of fuel and fuel/oil ratio
- owner modifications (such as exhaust system, holes in the air box, etc.)
- ignition timing
- compression

If the above check out, then, adjust the carburetor for your specific racing conditions. Engine response and appearance of the firing end of a spark plug are highly indicative of the engine condition.

Refer to the list on page 127 for the optional carburetor parts.


To prevent engine damage, always adjust the main jet before adjusting the jet needle. If there is any doubt — always choose the next richer jet so there is a margin for safety.

Carburetor Minor Adjustments

- The standard carburetor settings are ideal for the following conditions: 32-to-1 premix ratio using Pro Honda HP2 2-stroke oil or its equivalent, sea level altitude, and 68 °F (20 °C) air temperature. If your conditions are different, you may need to adjust the carburetor settings, using the tuning information on page 101 and 102. Confirm your settings are correct before proceeding.

Minor Adjustments

1. Adjust the carburetor setting using the turning information on page 101 and 102.
2. When the engine is warm enough to run without the choke, push the choke knob down to its off position.
3. Loosen the lock nut (1) and turn the throttle stop screw (2) to obtain the smoothest idle:
 - To decrease idle speed, turn the screw counterclockwise.
 - To increase idle speed, turn the screw clockwise.
4. Tighten the lock nut while holding the throttle stop screw to the specified torque:
1.5 lbf·ft (2 N·m, 0.2 kgf·m)
5. Adjust the air screw (3) to obtain the best off-idle performance.
 - If the engine blubbers (rich) exiting a corner, turn the air screw counterclockwise to lean the mixture.
 - If the engine surges (lean) exiting a corner, turn the air screw clockwise to richen the mixture.

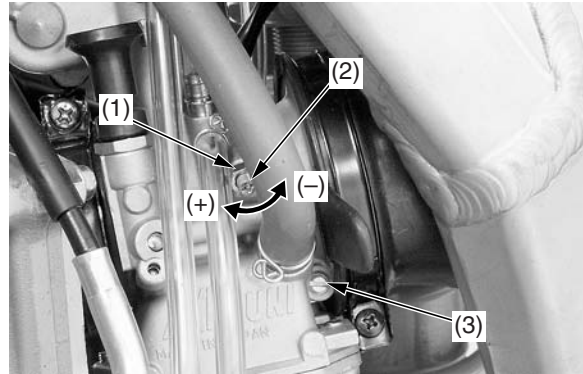

- (1) lock nut
(2) throttle stop screw
(3) air screw
- (+) increase
(-) decrease

The minimum to maximum range of air screw adjustments is 1 to 3 turns out from the lightly seated position. If you exceed 3 turns out, the next smaller slow jet is needed. If you are under 1 turn out, the next larger slow jet is needed.

Adjustment Procedure


1. Warm up the engine.
2. Make 2 – 3 laps of a course with the standard setting or corrected jetting (page 101) and spark plug. Note engine acceleration and other engine conditions in relation to throttle opening. Verify carburetion by removing the spark plug and reading its firing end (page 48, 109). It may take more than 2 – 3 laps to get a good spark plug reading with a new spark plug.
3. Change carburetor settings or select suitable carburetor jets, taking into consideration the engine conditions and factors for temperature and altitude (page 101).
4. If you've determined that the main and slow jets must be changed, you must remove the float chamber plug.
Removing the float chamber plug will allow the fuel in the float chamber to drain. Do not remove the plug if the engine is hot.

⚠ WARNING

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.


5. Turn the fuel valve OFF, and disconnect the fuel line from the fuel valve.
6. Loosen the connecting and insulator band screws. Rotate the carburetor. Remove the float chamber plug (4).

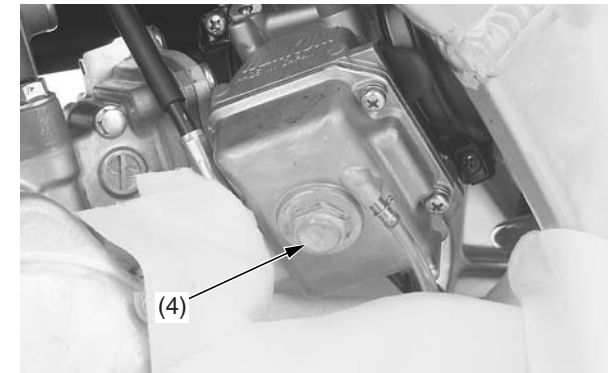

(4) float chamber plug

Carburetor Adjustments & Tuning Tips

7. Change the main jet (5) and slow jet (6) as required.

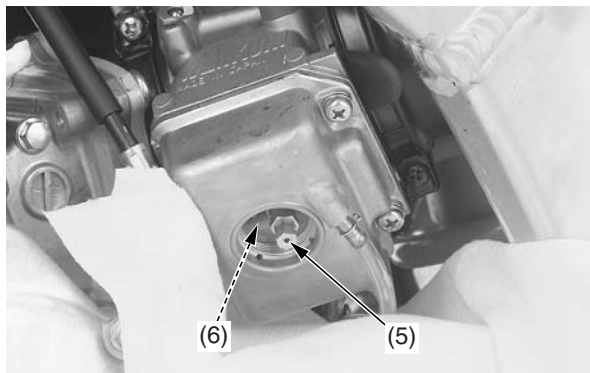


(5) main jet (6) slow jet

8. Check the O-ring for wear, then reinstall the float chamber plug securely.
9. Remove the carburetor top, throttle valve and cable holder (this page), and then change the jet needle clip position as required.
10. Reinstall the jet needle, throttle valve, cable holder and carburetor top (page 105).
11. Turn the carburetor upright and tighten its clamp screws.
12. Adjust the air screw opening required. Reconnect the fuel line at the carburetor.
13. Repeat steps 2 through 12 until the engine gives maximum power with the correct spark plug reading. It is always better to jet a little rich than a little lean. It is advisable to record the settings, course conditions, lap times, and climatic and barometric conditions for future reference.


Carburetor Disassembly/Assembly

1. Remove the fuel tank. (Page 30)
2. Remove the subframe. (Page 32)
3. Loosen the insulator band screw (1).

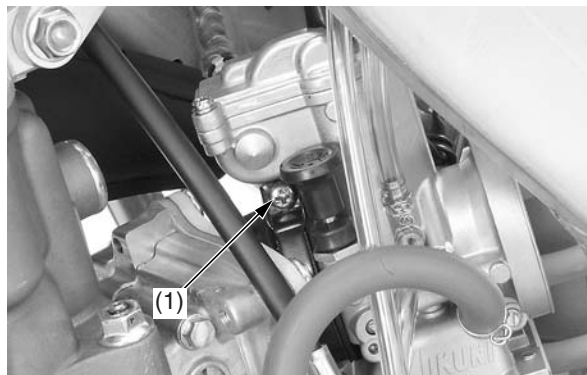


(1) insulator band screw

4. Disconnect the throttle sensor connector (2) and remove the wire band (3) and clamp (4).

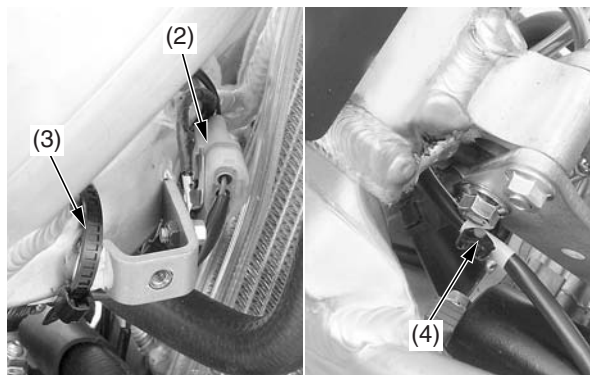


(2) throttle sensor connector
(3) wire band
(4) clamp

5. Loosen the screws (5) and remove the carburetor top (6).

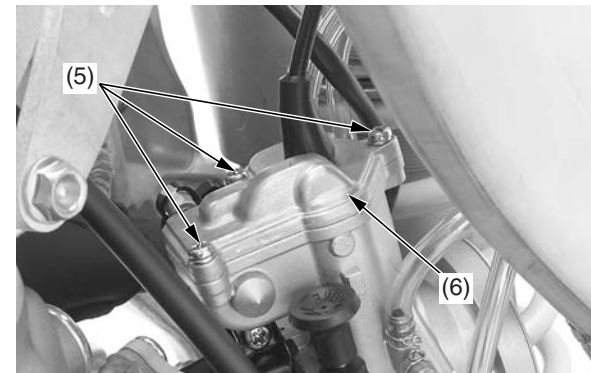

(5) screws (6) carburetor top



6. Pull up the throttle position sensor arm (7), then pull out the throttle valve (8) from the carburetor body.

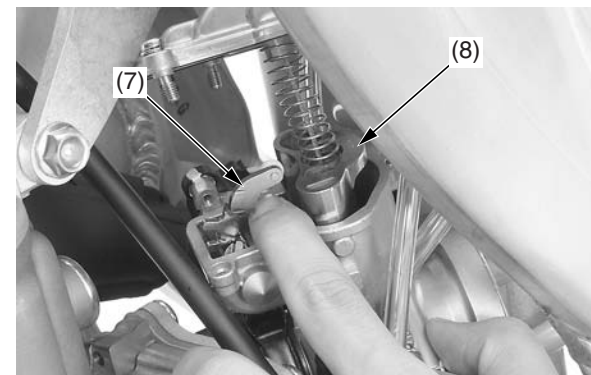

(7) throttle position sensor arm
(8) throttle valve

Carburetor Adjustments & Tuning Tips

7. Remove the throttle cable (9) and collar (10) from the cable holder (11).
8. Remove the collar and throttle valve spring (12) from the throttle cable.
9. Remove the throttle cable holder and jet needle (13) from the throttle valve (14).

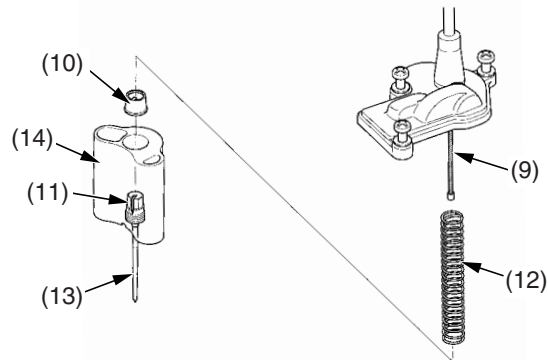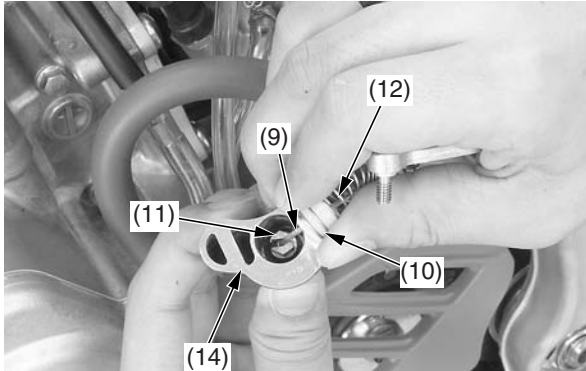

(9) throttle cable
(10) collar
(11) cable holder

(12) throttle valve spring
(13) jet needle
(14) throttle valve

10. Remove the carburetor to the left side.

Be careful not to damage the area around the throttle sensor.


Do not assemble or move the carburetor while holding the throttle sensor lead.

11. Remove the float chamber screws (15) and float chamber (16).

⚠ WARNING


Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

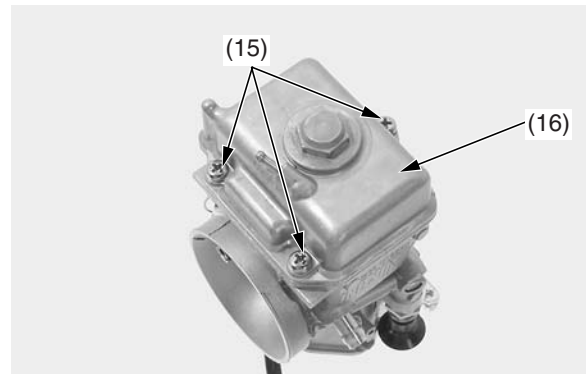

(15) float chamber screws (16) float chamber

12. Use a float level gauge (17) to measure the float level (18) with the float tab just contacting the float valve and the carburetor intake (19) facing up. The float level should be 0.30 in (7.5 mm). Adjust the float level by bending the float tab carefully.

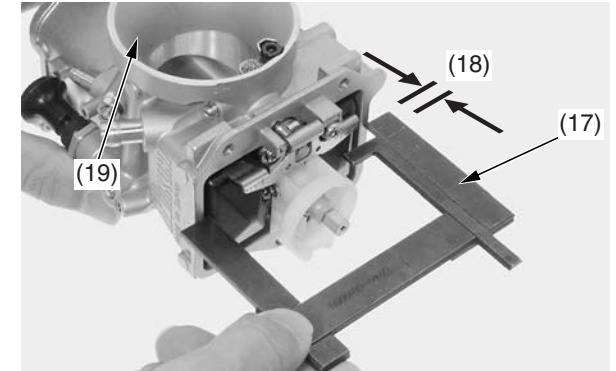


(17) float level gauge
(18) float level

(19) carburetor intake


13. To assemble, reverse the disassembly procedures.
To install the carburetor, reverse the removal procedures.

After installing the carburetor, check the air vent hoses (20) and overflow hose (21) for kinking or pinching and correct routing as necessary.

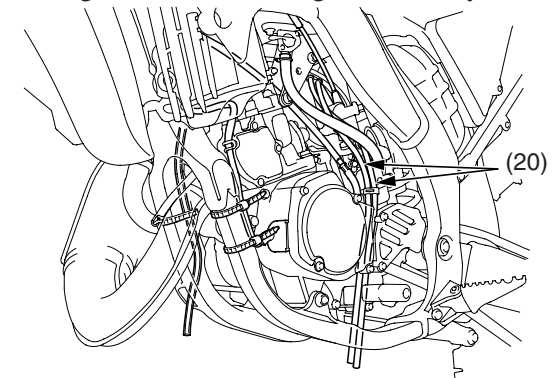

(20) air vent hoses

Carburetor Adjustments & Tuning Tips

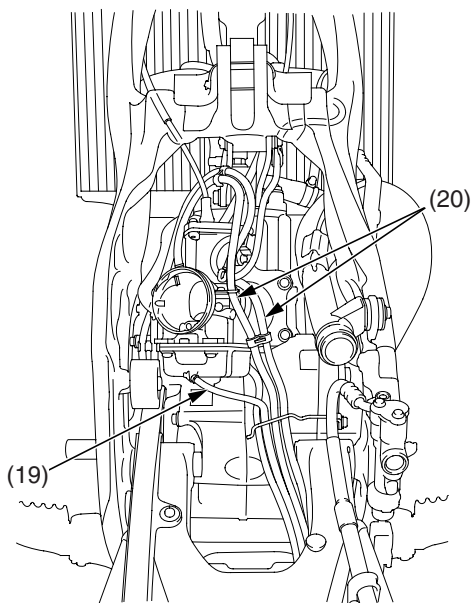

(20) air vent hoses

(21) overflow hose

Spark Plug Reading

Refer to *Spark Plug*, page 48.

Check any jetting change by reading the spark plug. The following procedure is recommended. You may not get an accurate reading if you simply turn off the engine and pull the plug for inspection.

Use a new spark plug. Inspect the plug before installing it.

NOTICE

Using spark plugs with an improper heat range or incorrect reach can cause engine damage.

Before removing the spark plug, clean the spark plug area thoroughly to prevent dirt from entering the cylinder.


Ride for 10 - 15 minutes before taking a plug reading. A new plug will not color immediately.

To obtain an accurate reading of a new spark plug:

1. Accelerate at full throttle on a straight.
2. Push the engine stop button and pull the clutch lever in to release the clutch.
3. Coast to a stop.
4. Remove the spark plug.
5. Use a magnifying glass to inspect the spark plug. The porcelain insulator (1) around the center electrode (2) should appear clean and colorless with a gray ring around the center electrode where it exits the porcelain. Metallic specks indicate lean jetting that is removing metal from the piston. Black sooty streaks on the porcelain indicate rich jetting.

NOTICE

An improperly tightened spark plug can damage the engine. If a plug is too loose, a piston may be damaged. If a plug is too tight, the threads may be damaged.

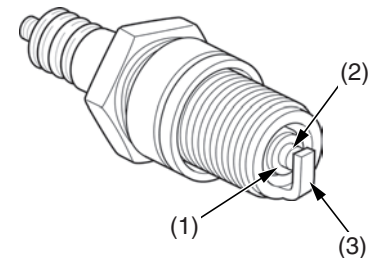

(1) insulator

(2) center electrode

(3) side electrode

Spark Plug Coloring Guidelines

| Condition | Spark Plug Appearance | Mixture |
|--------------------|--|---------|
| Normal | Dark brown to light tan color with dry electrode | correct |
| Overheating (Lean) | Light gray or white color | lean |
| Wet (Rich) | Wet or sooty | rich |

Remember that in addition to improper jetting:

- A lean condition can be caused by air leaks in the inlet tract, in the center crankcase joint and leaking ignition side crank seal.
- A rich condition may be caused by a leaking primary drive side seal — that draws transmission oil into the fuel/air mixture. Excessive smoking will occur.

The same simple throttle opening identification system used in the Break-In section of this manual can also be used to accurately identify where carburetion problems occur, should they arise (page 15).

The following suggestions may improve a specific concern. Subtle changes in overall handling may also be noted.

Rear End

If you have a problem with rear wheel traction, raise the rear end of your CR by increasing the rear spring pre-load. Instead of running 3.9 in (100 mm) of sag, you can run 3.5 in (90 mm) so the rear of the bike will sit a little higher. This should produce more traction because of the change to the swingarm and the location of your CR's center of gravity.

If you have a problem with the steering head shaking when you use the front brake hard or if your CR wants to turn too quickly, lower the rear of the motorcycle by reducing the rear spring pre-load. This will increase fork rake and trail and should improve stability in a straight line. The effective suspension travel will be transferred toward the firmer end of wheel travel.


Keep the race sag adjustment (page 94) in the 3.5 – 3.9 in (90 – 100 mm) range.

Fork Height/Angle

The position of the fork tubes in the clamps is not adjustable.


Standard Position

The standard position (1) aligns the index groove (2) with the top of the upper clamp (3).

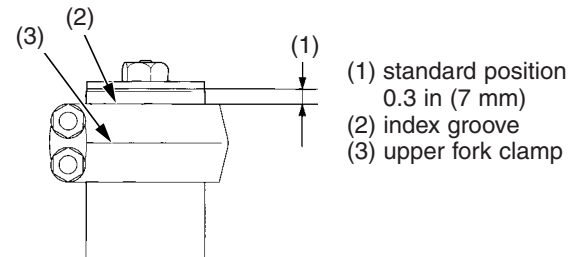

Standard Position For Optional Front Wheel

If you install the optional 20 inch wheel, align the top of the fork tube (5) (not the top of the fork cap) with the top of the upper fork clamp (6).

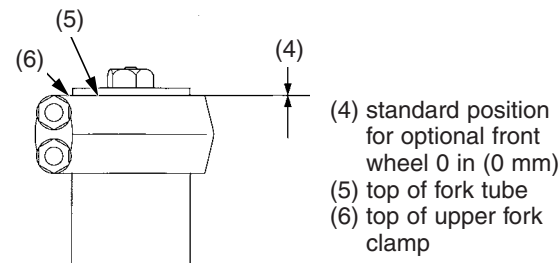


Wheelbase

Adjusting your CR's wheelbase can offer subtle changes in overall handling. You may adjust wheelbase by adding or removing links on the drive chain. If you change the wheelbase, be sure to re-check race sag and adjust, if necessary.

In the past, a general rule was lengthen the wheelbase to add straight line stability, shorten the wheelbase to improve turning. However, we suggest you do not lengthen the wheelbase of your CR unless you are racing on a track with more fast sections than normal.

As a general recommendation, keep the wheelbase as short as possible. This positions the wheels closer together, improves turning response, increases weighting (traction) on the rear wheel, and lightens weighting on the front wheel.

With your CR, you will probably find that the standard setting or a shorter wheelbase will offer more overall benefits.

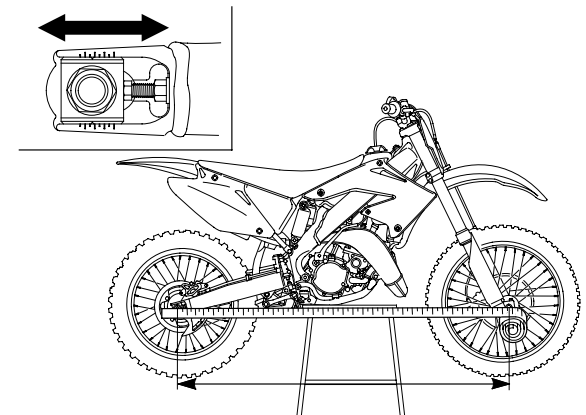

Gearing

You can “adjust” the power delivery of the standard engine to suit track conditions by changing gearing. This allows you to utilize a different portion of the engine’s power range at a given throttle setting. New gearing may provide the change you are looking for without the need to consider further modifications.

The portion of your engine’s power range you use can be adjusted by changing the final drive ratio with different sized rear sprockets. Gearing changes allow you to more closely match the type of terrain and the available traction. Normally, a change of one tooth on the rear sprocket will be sufficient.

There is a choice of both higher and lower final drive ratios with two optional aluminum driven sprockets. For muddy or sandy courses, there is a more durable steel driven sprocket with the standard number of teeth. Like the optional springs, these sprockets are listed in the Optional Parts List section of this manual.

Unless you have the required mechanical knowhow, tools, and an official Honda Service Manual, sprocket changing should be done by your Honda dealer.

Higher Gearing (less rear sprocket teeth)

- increases top speed in each gear (provided the engine will pull the higher gearing)
- reduces frequency of shifting (wider gear ratios)
- reduces engine rpm at a given throttle setting or ground speed (which may allow better rear wheel traction on slippery or loose terrain)

However:

- the engine may not pull the higher gearing
- the spacing between gears may be too wide
- engine rpm may be too low

Lower Gearing (more rear sprocket teeth)

- decrease top speed in each gear
- increases frequency of shifting (narrower gear ratios)
- increases engine rpm at a given throttle setting or ground speed (which may provide more power-to-the-ground on good traction surfaces)

However:

- spacing between gears may be too narrow
- engine rpm may be too high

Some tracks may be watered heavily prior to the first race, then lightly or not at all during the day. This results in a track surface that is slippery during the first few races, then changes from good to great and back to good and possibly ends the day with a slick rock-hard consistency. Ideally, your gearing should be adjusted to suit all these conditions.

- Wet and slippery or sandy conditions: use a higher gear (less teeth) to keep engine rpm down, and avoid unwanted wheelspin. The engine may bog in certain corners so you’ll need to slip the clutch to compensate; downshifting may be too drastic a change in speed.
- Average conditions: use the standard sprocket.
- Hard (but not slippery) track conditions: use lower gearing (more teeth) to keep the engine rpm high where the engine produces the most power. This may require an extra upshift on certain sections or perhaps you can just rev it out a bit longer.

For tight tracks, consider lower gearing to avoid having to slip the clutch frequently. Repeated fanning or pulling of the clutch lever in a turn to raise engine rpm may eventually damage the clutch system.

A gearing change may help for riding in sand, where you want to keep the front end light so it can float from the peak of one sand whoop to the next. Generally, with higher gearing, it is easier to maintain that perfect attitude (maximum rear wheel traction and a light front end) because you remain in the powerband longer in each gear. The higher gearing allows you to steer more efficiently with throttle control and body English.

If you are riding a track with sections where you choose to over-rev the engine temporarily rather than shifting up, higher gearing might help.

Sometimes you have to sacrifice performance on one section of the track to gain a better overall time. Your goal is the fastest overall lap time, even if the cost is some sections where the gearing feels wrong.

If you decide to try a gearing change, have someone check your times with a stopwatch (before and after the change) to get an accurate appraisal of the change. “Seat-of-the-pants” feelings can’t be trusted. Eliminating wheelspin with a gearing change can make you feel like you’re going slower when, in reality, you’ve decreased your time by increasing your speed with better traction.

These gearing recommendations should be evaluated by considering your ability, your riding style, and the track.

Choosing the correct tire tread pattern and rubber compound can affect your placing in competition. The tires on your CR offer a “happy medium” for the variety of soil conditions the majority of riders are likely to encounter.

Experienced competitors often switch to tires developed for specific terrain conditions. If you do switch, stay with the factory recommended sizes. Other tires may affect handling or acceleration.

Be aware that tire sizes (width and aspect ratio) do vary from manufacturer to manufacturer or even among tires made by the same manufacturer. Variations in tires, especially the sidewall profile, can change the attitude of your CR and its handling. Tire variations that raise or lower the rear of your CR have a more significant effect on handling than variations in front tires which, generally, don’t vary as much. Often, you can see or feel the change in tire size. Another way to check is to measure the rolling circumference of the old and new tires. A higher profile tire will have a larger rolling circumference.

If you do switch to tires designed for special terrain use, remember they will be less acceptable in other circumstances. For example, an aggressive mud tire will give excellent grip on wet, loamy terrain, but less impressive grip on a hard surface.

If you choose a tire with a sticky compound for added traction, remember that it may transfer additional loads to the transmission because it grips so well, especially when riding in situations that normally place unusual demands on the transmission.

Complete consumer information can be obtained from the various tire manufacturer representatives and dealers.

Some general recommendations for specific terrain follow:

Hard, Slick Soil

Use tires with many relatively short knobs that are close together in order to obtain the largest possible contact patch on the surface. The rubber compound needs to be softer for hard ground in order to hook up, but not so soft that the knobs roll over easily and affect holding a straight line. These tires tend to wear more quickly than standard tires because of the combination of soft rubber and hard terrain.

Muddy Soil

Use a more open tread pattern to avoid clogging. For these conditions, the relatively long knobs will probably be made from a harder rubber compound to reduce any tendency to bend back under acceleration or wear quickly.

Loose, Sandy Soil

Use a tire that is similar in construction to those needed for tacky soil and mud, but with a few more knobs.


Personal Fit Adjustments

The following suggestions may make your ride both more comfortable and more responsive to your control input.

Control Positioning

- Position the control levers so that you can use them comfortably when seated and standing.
- Adjust the mounting bolt torque of the clutch and brake lever assemblies so that they can rotate on the handlebar in a fall. If an assembly does not rotate, it may bend or break a control lever. Make sure that the bolts are torqued securely enough to prevent slippage during normal operation.


Apply Honda Thread Lock or an equivalent to the threads of these bolts prior to adjustment to help ensure the correct torque is retained. Tighten the top bolts first.

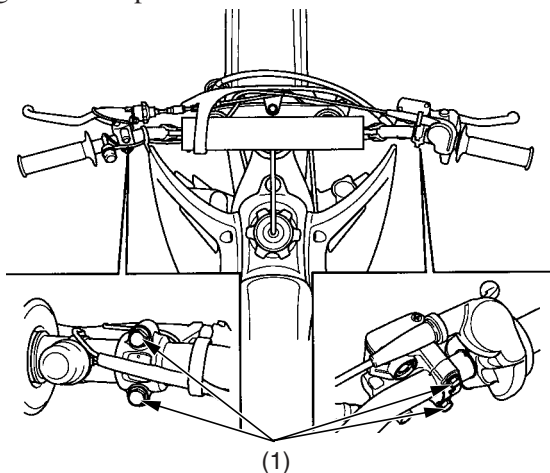

(1) control lever mounting bolts

As an alternative, consider wrapping the handlebar area under the control assemblies with teflon tape. Then tighten the assemblies to their normal torque. Upon impact, the fully-tightened assemblies should rotate on the Teflon tape.


- Position the shift lever and brake pedal so they are close to your boot for rapid access, but not so close that either is depressed when sitting or standing comfortably on your CR.

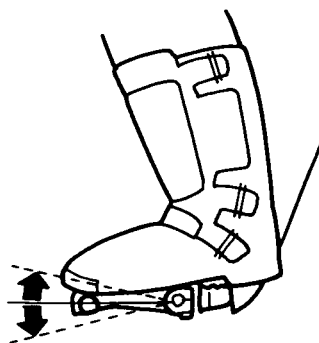

Handlebar Position, Width & Shape

- Position the handlebar so that both gripping the bar and operating the controls is comfortable while both seated and standing, while riding straight ahead and turning. Tighten the forward bolts first.
- The handlebar position may be moved forward either 3 mm (using optional handlebar lower holders) or 6 mm (by rotating the standard holders 180 degrees). Refer to the Service Manual for installation instructions. Be sure to check control cable and wiring harness routing after the adjustment.

- Handlebar width can be trimmed with a hacksaw to better suit your particular shoulder width and riding preference. Think this through carefully and cut off just a small amount at a time from both sides equally. It is obviously much easier to make the handlebar narrower than it is to add material.

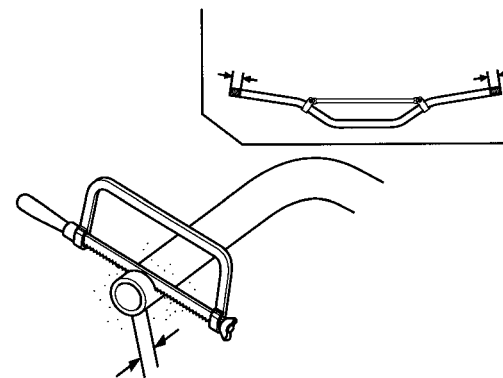

- Chamfer the edges to remove burrs and other irregularities or roughness after sawing the handlebar.
- An alternate handlebar shape, through varying rise or rearward sweep dimensions, will provide further adjustment to riding position and may better suit your particular body size or riding style. Each of the ergonomic dimensions of the machine were determined to suit the greatest possible number of riders based on an average size rider.


Here’s helpful advice on how to transport and store your Honda, as well as two troubleshooting flow charts.

Transporting Your Motorcycle112
Storing Your Honda.....113
You & the Environment114
Troubleshooting.....115

Transporting Your Motorcycle

If you use a truck or motorcycle trailer to transport your Honda, we recommend that you follow these guidelines:

- Use a loading ramp.
- Make sure the fuel valve is off.
- Secure the motorcycle in an upright position, using motorcycle tie-down straps. Avoid using rope, which can loosen and allow the motorcycle to fall over.

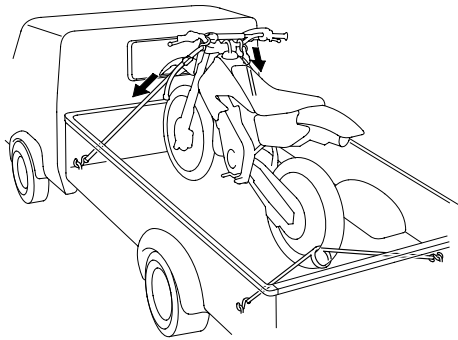

To secure your CR, brace the front wheel against the front of the truck bed or trailer rail. Attach the lower ends of two straps to the tie-down hooks on your vehicle. Attach to the upper ends of the straps to the handlebar (one on the right side, the other on the left), close to the fork.

Check that the tie-down straps do not contact any control cables or electrical wiring.

Tighten both straps until the front suspension is compressed about half-way. Too much pressure is unnecessary and could damage the fork seals.

Use another tie-down strap to keep the rear of the motorcycle from moving.

We recommend that you do not transport your CR on its side. This can damage the motorcycle, and leaking gasoline could be a hazard.

If you won't be riding for an extended period, such as during the winter, thoroughly inspect your Honda and correct any problem before storing it. That way, needed repairs won't be forgotten and it will be easier to get your CR running again.

To reduce or prevent deterioration that can occur during storage, also follow the following procedures.

Preparation for Storage


1. Completely clean all parts of your CR. If your CR has been exposed to sea air or salt water, wash it down with fresh water and wipe dry.
2. Replace the transmission oil (page 37).
3. Drain the fuel tank and carburetor into an approved gasoline container.
Turn the fuel valve OFF and remove the carburetor drain plug. Drain gasoline into an approved container. Reinstall the drain plug.

⚠ WARNING

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

4. Remove the radiator cap and coolant drain bolt (1) at the water pump (2) to drain coolant. After the coolant has been completely drained, ensure that the drain bolt sealing washer is in good condition and reinstall the drain bolt and radiator cap.

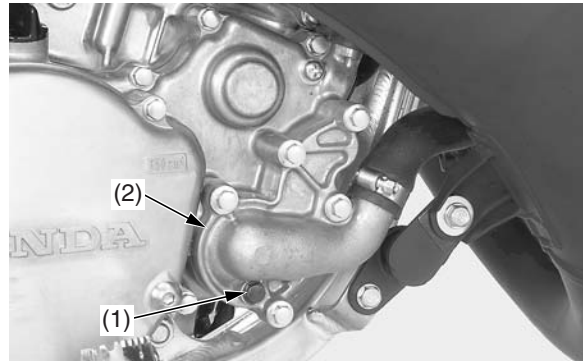

(1) drain bolt (2) water pump

5. Lubricate the drive chain.
6. Remove the spark plug and pour a tablespoon (0.51 - 0.68 US oz; 15 - 20 cm³) of clean engine oil into the cylinder. With the spark plug grounded or the engine stop button pressed in, crank the engine several times to distribute the oil, then reinstall the spark plug.
7. Inflate the tires to their recommended pressures.
8. Place your CR on the optional workstand or equivalent to raise both tires off the ground.
9. Stuff a rag into the silencer outlet. Then tie a plastic bag over the end of the silencer to prevent moisture from entering.
10. Store your CR in an unheated area, free of dampness, away from sunlight, with a minimum of daily temperature variation.
11. Cover your CR with a porous material. Avoid using plastic or similar non-breathing, coated materials that restrict air flow and allow heat and moisture to accumulate.

Removal from Storage

1. Uncover and clean your CR.
Change the transmission oil if more than 4 months have passed since the start of storage.
 2. Uncover the end of the silencer and remove the rag from the silencer outlet.
 3. Fill the fuel tank with pre-mixed fuel (page 34).
 4. Pour a fresh recommended coolant mixture (page 38) slowly into the radiator filler hole up to the filler neck.
Capacity:
1.06 US qt (1.00 ℓ)
at disassembly
0.98 US qt (0.93 ℓ)
at draining
- Lean your CR slightly right and left several times to bleed trapped air in the cooling system.
If the coolant level lowers, add coolant and repeat the above procedure.
Install the radiator cap securely.
5. Perform all maintenance checks (page 9).

You & the Environment

Owning and riding a motorcycle can be enjoyable, but you must do your part to protect nature. When you show respect for the land, wildlife, and other people, you also help preserve the sport of off-road riding.

Following are tips on how you can be an environmentally-responsible motorcycle owner.


- **Choose Sensible Cleaners.** Use a biodegradable detergent when you wash your CR. Avoid aerosol spray cleaners that contain chlorofluorocarbons (CFCs) which damage the atmosphere's protective ozone layer. Don't throw cleaning solvents away; see the following guidelines for proper disposal.
- **Recycle Wastes.** It's illegal and thoughtless to put used engine oil in the trash, down a drain, or on the ground. Used oil, gasoline, and cleaning solvents contain poisons that can hurt refuse workers and contaminate our drinking water, lakes, rivers, and oceans. Before changing your oil, make sure you have the proper containers. Put oil and other toxic wastes in separate sealed containers and take them to a recycling center. Call your local or state office of public works or environmental services to find a recycling center in your area and get instructions on how to dispose of nonrecyclable wastes.

NOTICE


Improper disposal of drained fluids is harmful to the environment.

The items that are serviceable using this Manual are followed by the page number reference in parenthesis. The items that require use of the Honda Service Manual are followed by an asterisk.

POOR PERFORMANCE AT LOW AND IDLE SPEEDS

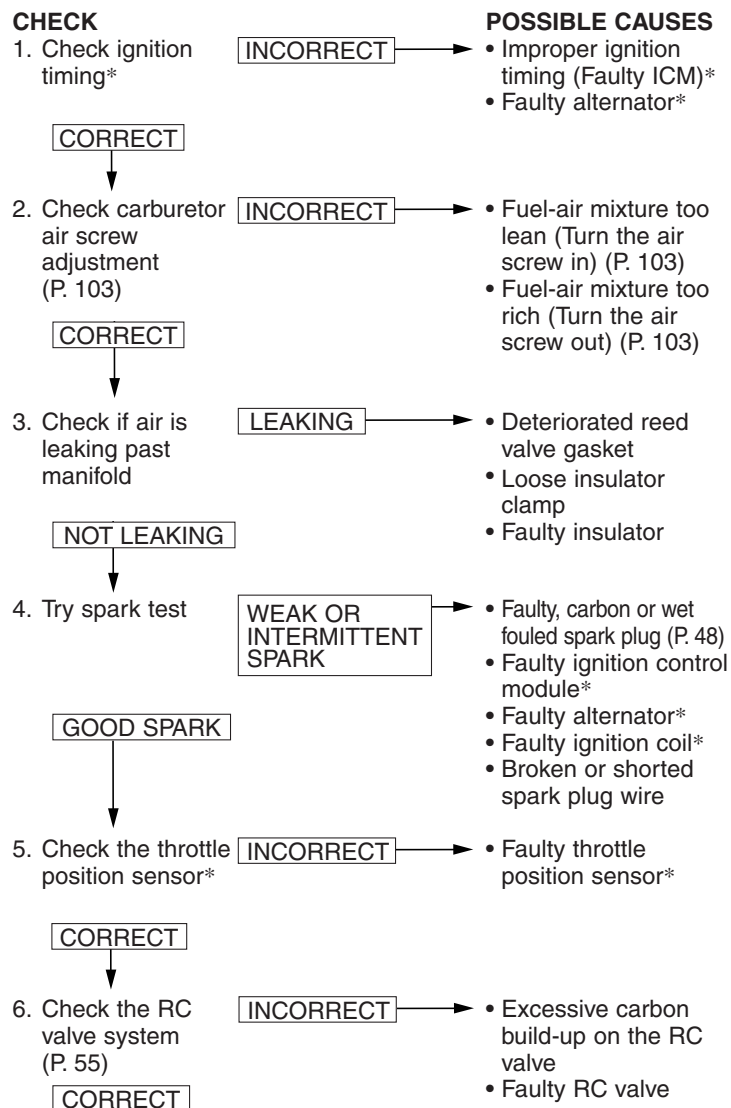

POOR PERFORMANCE AT HIGH SPEED

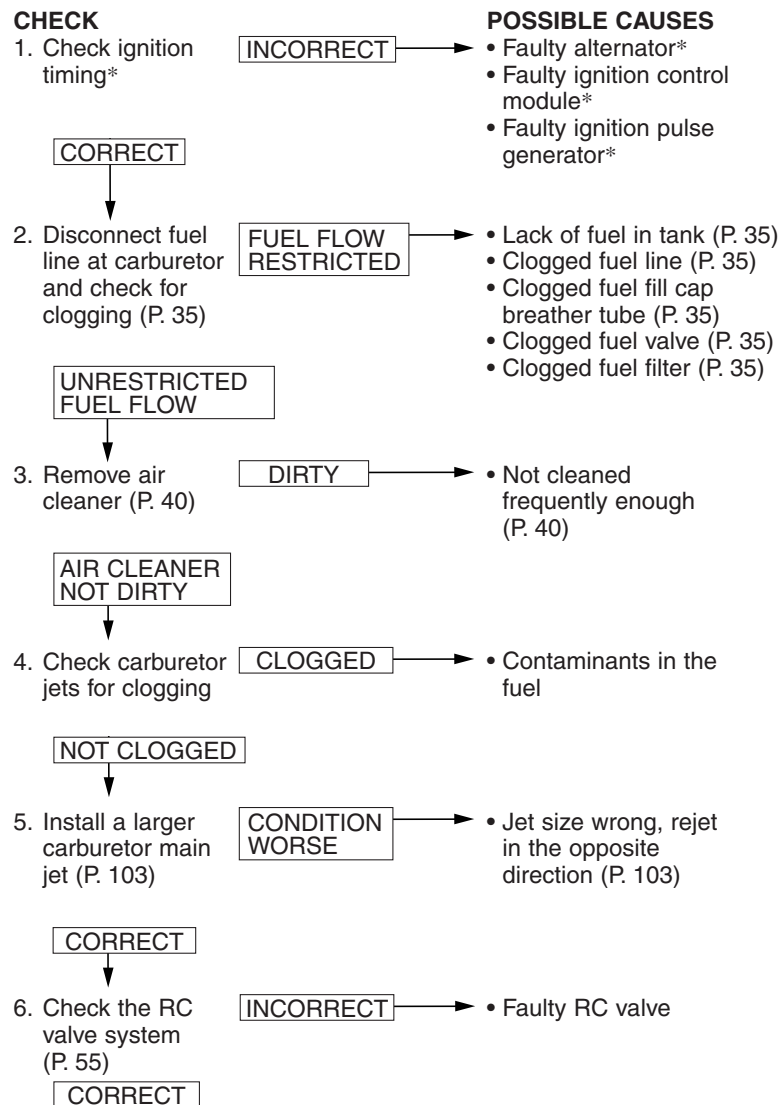

This section contains dimensions, capacities, and other technical data.

Vehicle Identification118
Specifications119
Torque Specifications120
High Altitude Carburetor Adjustment123
Oxygenated Fuels124
Competition Logbook125
Optional Parts List127
Spare Parts & Equipment.....128
Wiring Diagram.....129


Vehicle Identification

Serial Numbers

The VIN, frame and engine serial numbers are required when you register your CR. They may also be required when ordering replacement parts. You may record these numbers in the Quick Reference section at the rear of the manual.

The VIN (vehicle identification number) (1) appears on the Safety Certification Label attached to the right side of the frame.


RIGHT SIDE

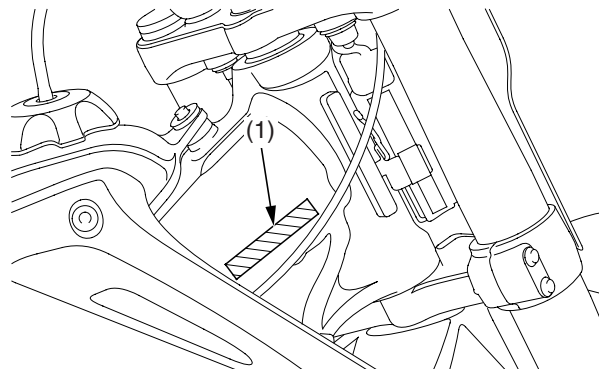

(1) VIN

The frame number (2) is stamped on the right side of the steering head.


RIGHT SIDE

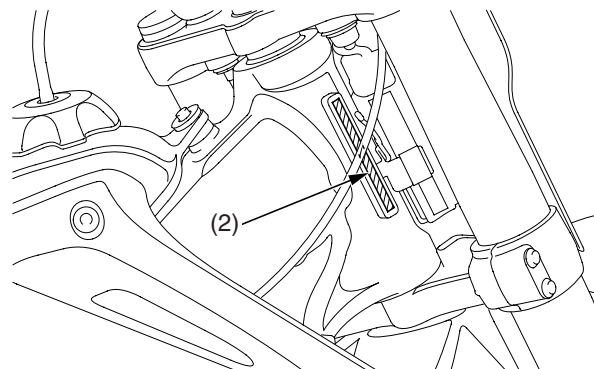

(2) frame number

The engine number (3) is stamped on the left crankcase.

LEFT SIDE

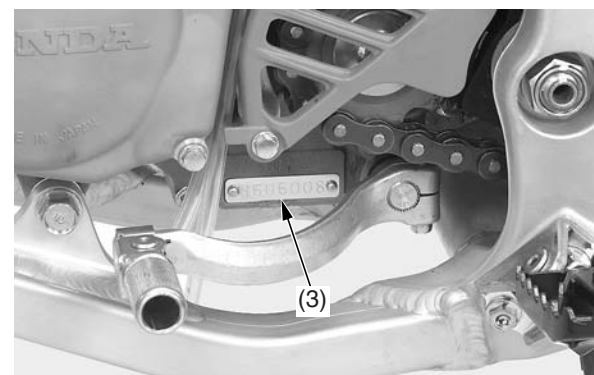

(3) engine number

| Item | English | Metric |
|---|--|-----------|
| Dimension | | |
| Overall length | 85.2 in | 2,163 mm |
| Overall width | 32.3 in | 821 mm |
| Overall height | 50.5 in | 1,282 mm |
| Wheelbase | 57.9 in | 1,470 mm |
| Seat height | 37.6 in | 954 mm |
| Foot peg height | 17.3 in | 439 mm |
| Ground clearance | 13.8 in | 352 mm |
| Frame | | |
| Type | Twin tube | |
| F. suspension | Telescopic fork, travel 10.8 in (275 mm) stroke 12.0 in (305 mm) | |
| R. suspension | Pro-link, travel 12.6 in (320 mm) | |
| F. tire size, pressure psi (kPa, kgf/cm ²) | 80/100-21 51M 15 (100, 1.0) | |
| R. tire size, pressure psi (kPa, kgf/cm ²) | 100/90-19 57M 15 (100, 1.0) | |
| Tire type | bias-ply, tube | |
| F. brake, swept area | Single disc brake 51.8 in ² (334.5 cm ²) | |
| R. brake, swept area | Single disc brake 60.6 in ² (391.1 cm ²) | |
| Fuel capacity | 2.0 US gal | 7.7 liter |
| Caster angle | 25°45' | |
| Trail length | 3.9 in | 100 mm |
| Fork oil (per leg) | Level (Std.) | 2.8 in |
| | | 71 mm |

| Item | English | Metric |
|------------------------------|--|-----------------------|
| Engine | | |
| Type | Liquid cooled, 2-stroke | |
| Cylinder arrangement | Single 18.5° inclined from vertical | |
| Bore and stroke | 2.13 × 2.14 in | 54.0 × 54.5 mm |
| Displacement | 7.62 cu-in | 124.8 cm ³ |
| Compression ratio | 8.6 : 1 | |
| Transmission oil capacity | | |
| After draining | 0.60 US qt | 0.57 ℓ |
| After disassembly | 0.69 US qt | 0.65 ℓ |
| Carburetor | | |
| Type | Piston valve | |
| Identification number | TMX05A | |
| Main jet (standard) | #430 | |
| Slow jet (standard) | #55 | |
| Air screw opening | 1 3/4 turns out | |
| Float height | 0.30 in | 7.5 mm |
| Drive train | | |
| Clutch type | Wet, multi-plate type | |
| Transmission | 5-speed, constant mesh | |
| Primary reduction | 3.150 | |
| Gear ratio I | 2.308 | |
| Gear ratio II | 1.867 | |
| Gear ratio III | 1.529 | |
| Gear ratio IV | 1.294 | |
| Gear ratio V | 1.130 | |


| Item | English | Metric | |
|----------------------|--|--------------------|--|
| Drive train | | | |
| Final reduction | 4.000 | | |
| Gear shift pattern | Left foot-operated return system 1-N-2-3-4-5 | | |
| Electrical | | | |
| Ignition | CDI | | |
| Starting system | Kickstarter | | |
| Spark plug: Standard | NGK BR9EG | | |
| | DENSO W27ESR-V | | |
| | Optional | NGK BR9EV | |
| | | DENSO W27ESR-ZU | |
| Spark plug gap | 0.020-0.024 in (0.5-0.6 mm) | | |

Torque Specifications


Nuts, Bolts, Fasteners
Check and tighten nuts, bolts, fasteners before every outing.

Engine

RIGHT SIDE

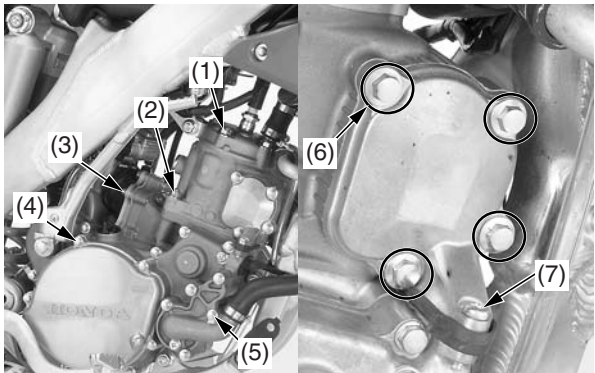


LEFT SIDE

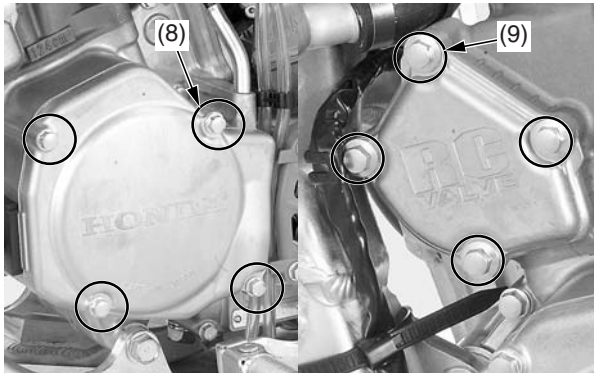

| | Item | Torque | | | Remarks |
|---|---------------------------|--------|-----|-------|---------|
| | | lbf·ft | N·m | kgf·m | |
| | ENGINE | | | | |
| 1 | Cylinder head nut | 20 | 27 | 2.8 | |
| 2 | Cylinder mounting nut | 20 | 27 | 2.8 | |
| 3 | Carburetor insulator bolt | 7 | 10 | 1.0 | |
| 4 | Clutch cover bolt | 7 | 10 | 1.0 | |
| 5 | Water pump cover bolt | 9 | 12 | 1.2 | |
| 6 | Right RC cover bolt | 9 | 12 | 1.2 | |
| 7 | Right RC cover screw | 1.5 | 2 | 0.2 | |
| 8 | Alternator cover bolt | 7 | 10 | 1.0 | |
| 9 | Left RC cover bolt | 9 | 12 | 1.2 | |

Torque Specifications

Frame

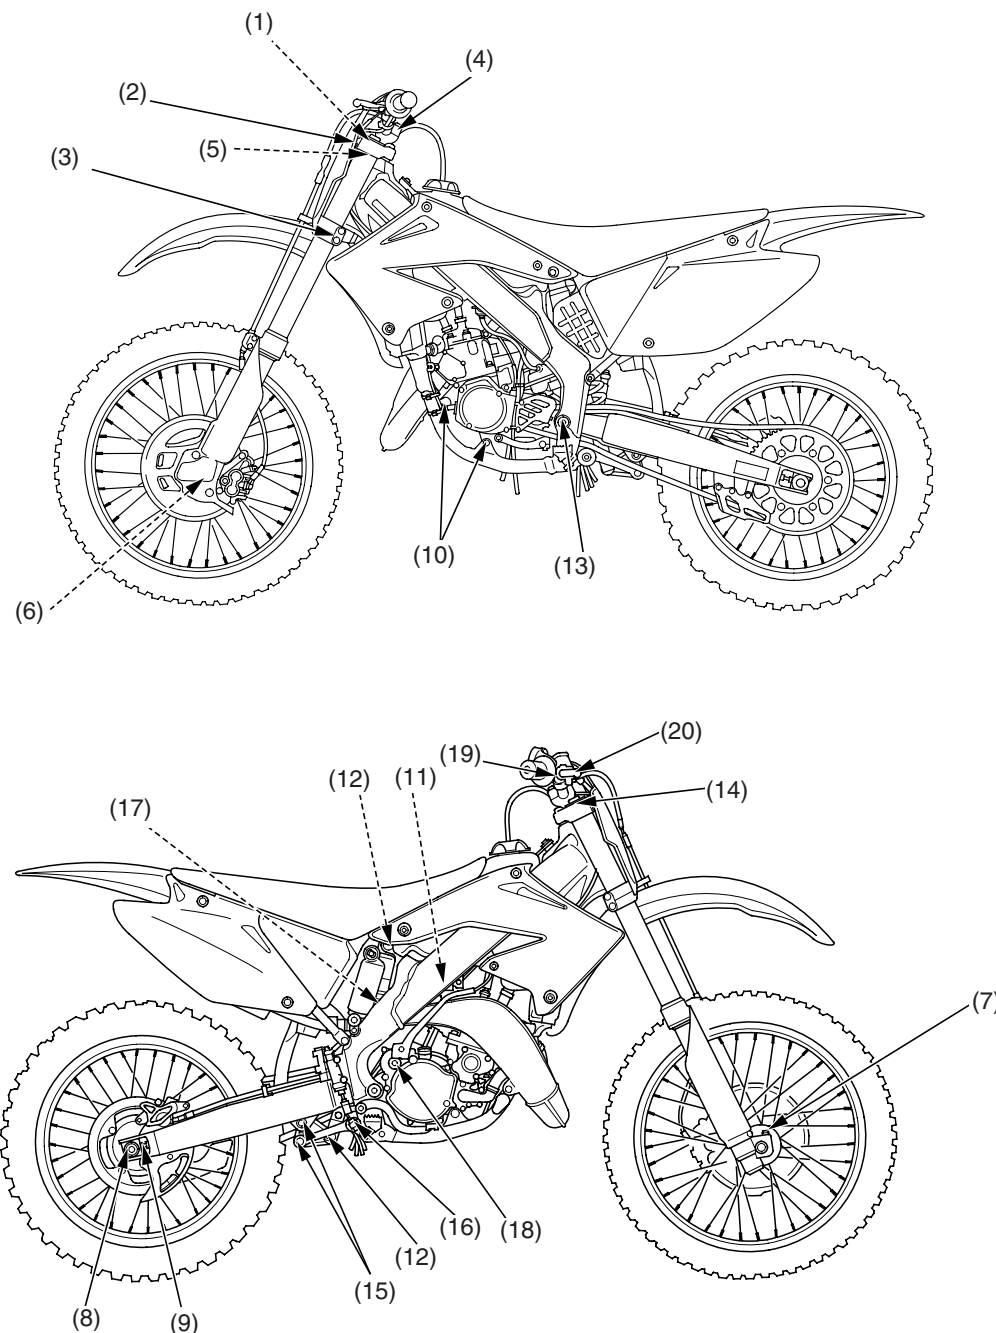


| Item | | Torque | | | Remarks |
|------|------------------------------------|--------|-----|-------|----------|
| | | lbf-ft | N-m | kgf-m | |
| | FRAME | | | | |
| 1 | Steering stem nut | 80 | 108 | 11.0 | |
| 2 | Fork bridge upper pinch bolts | 16 | 22 | 2.2 | |
| 3 | Fork bridge lower pinch bolts | 15 | 20 | 2.0 | |
| 4 | Handlebar upper holders | 16 | 22 | 2.2 | |
| 5 | Handlebar lower holder nut | 32 | 44 | 4.5 | |
| 6 | Front axle nut | 65 | 88 | 9.0 | |
| 7 | Front axle pinch bolts | 15 | 20 | 2.0 | |
| 8 | Rear axle nut | 94 | 128 | 13.1 | NOTE 4 |
| 9 | Chain adjuster lock nut | 20 | 27 | 2.8 | NOTE 5 |
| | Engine mounting bolts | 40 | 54 | 5.5 | |
| 11 | Engine hanger plate bolts | | | | |
| | | 25 | 34 | 3.5 | |
| 12 | Shock absorber (upper) | 32 | 44 | 4.5 | NOTE 4 |
| | (lower) | 32 | 44 | 4.5 | NOTE 4 |
| 13 | Swingarm pivot nut | 65 | 88 | 9.0 | NOTE 4 |
| 14 | Fork cap | 22 | 30 | 3.1 | |
| 15 | Rear shock arm | | | | |
| | (swingarm side) | 39 | 53 | 5.4 | NOTE 2,4 |
| | (shock link side) | 39 | 53 | 5.4 | NOTE 2,4 |
| 16 | Rear shock link nuts | | | | |
| | (Frame side) | 39 | 53 | 5.4 | NOTE 2,4 |
| 17 | Shock spring lock nut | 21 | 29 | 3.0 | |
| 18 | Kickstarter arm bolt | 28 | 38 | 3.9 | |
| 19 | Front brake master cylinder holder | | | | |
| | | 7.3 | 9.9 | 1.0 | |
| 20 | Brake hose bolts | 25 | 34 | 3.5 | |

NOTES: 1. Apply Honda Thread Lock or an equivalent to the threads.
 2. Apply oil to the threads and flange surface.
 3. Stake.
 4. U-nut.
 5. UBS nut.
 6. SH bolt.

Torque Specifications

Frame

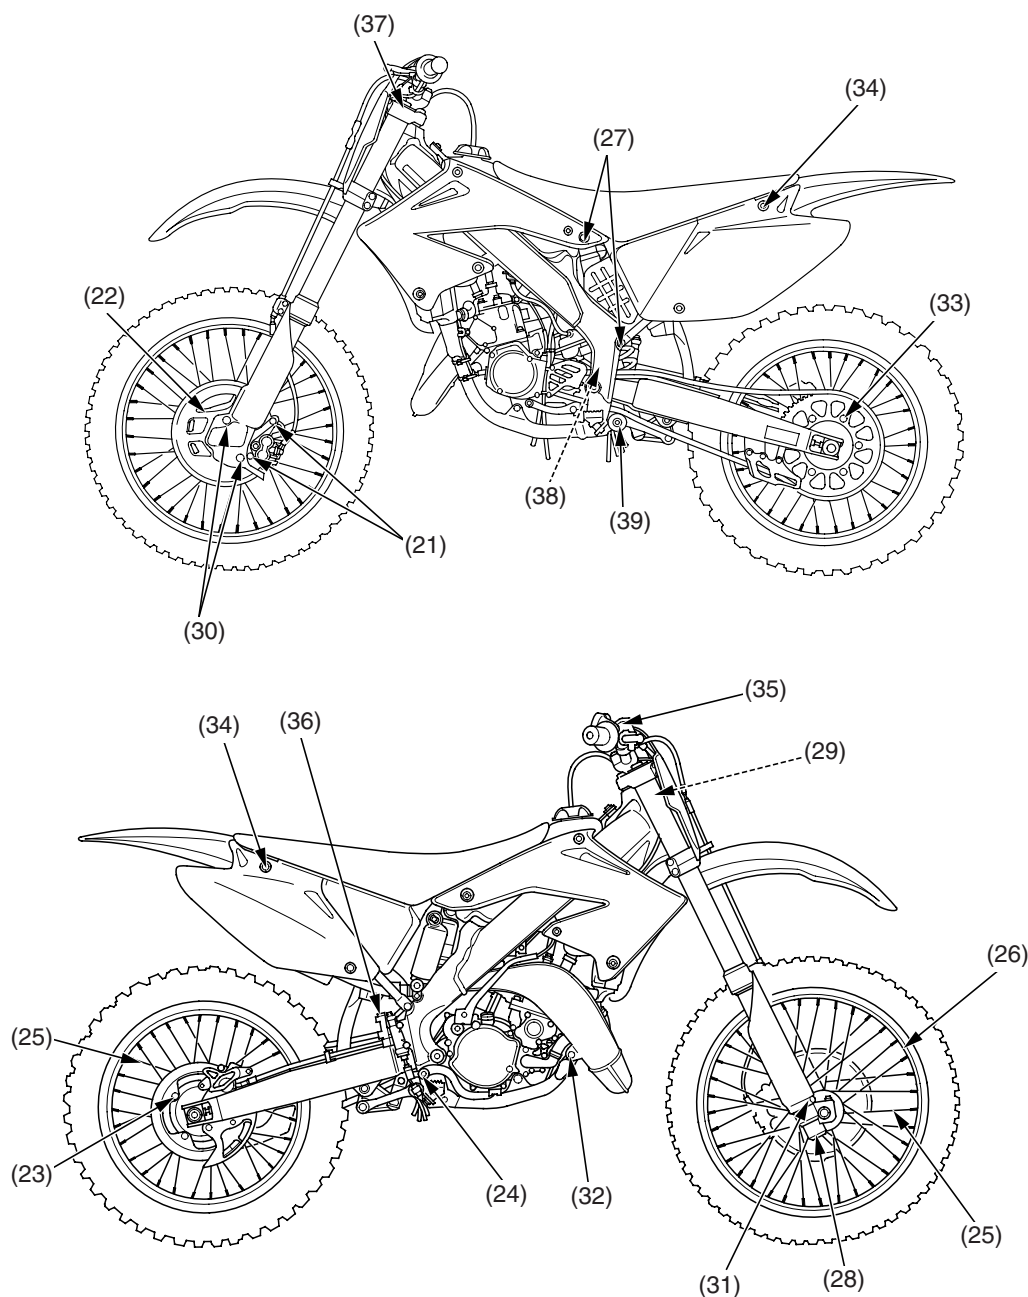

| Item | | Torque | | | Remarks |
|------|--|--------|------|------|---------|
| | | lbfft | Nm | kgfm | |
| | FRAME | | | | |
| 21 | Caliper mount bolts | 22 | 30 | 3.1 | NOTE 1 |
| 22 | Front brake disc nuts | 12 | 16 | 1.6 | NOTE 4 |
| 23 | Rear brake disc nuts | 12 | 16 | 1.6 | NOTE 4 |
| 24 | Brake pedal pivot bolt | 27 | 36 | 3.7 | |
| 25 | Spokes (front) | 2.7 | 3.68 | 0.4 | |
| | (rear) | 2.7 | 3.7 | 0.4 | |
| 26 | Rim locks | 9 | 12 | 1.2 | |
| 27 | Subframe bolt (upper) | 22 | 30 | 3.1 | |
| | (lower) | 22 | 30 | 3.1 | |
| 28 | Fork center bolt | 40 | 54 | 5.5 | |
| 29 | Fork piston rod lock nut | 21 | 28 | 2.9 | |
| 30 | Disc cover bolt | 10 | 13 | 1.3 | |
| 31 | Fork protector bolts | 5.2 | 7 | 0.7 | NOTE 1 |
| 32 | Expansion chamber mounting bolt (front stay) | 9 | 12 | 1.2 | |
| 33 | Sprocket nuts | 24 | 32 | 3.3 | NOTE 4 |
| 34 | Seat mounting bolts | 20 | 27 | 2.8 | |
| 35 | Front brake reservoir cap screw | 0.7 | 1 | 0.1 | |
| 36 | Rear brake reservoir cap bolt | 0.7 | 1 | 0.1 | |
| 37 | Fork air plug | 0.9 | 1.2 | 0.1 | |
| 38 | Upper chain roller | 9 | 12 | 1.2 | NOTE 6 |
| 39 | Lower chain roller | 9 | 12 | 1.2 | NOTE 4 |

NOTES: 1. Apply Honda Thread Lock or an equivalent to the threads.
2. Apply oil to the threads and flange surface.
3. Stake.
4. U-nut.
5. UBS nut.
6. SH bolt.

High Altitude Carburetor Adjustment

When operating this motorcycle at high altitude, the air-fuel mixture becomes overly rich.

Above 6,500 feet (2,000 m), driveability and performance may be reduced and fuel consumption increased. The carburetor can be modified to compensate for this high altitude richness.

However, the carburetor must be returned to standard factory specifications when lower altitude riding is desired. See your Honda dealer for high altitude modification.

NOTICE

Sustained operation at altitudes below 5,000 feet (1,500 m) with high altitude carburetor modifications may cause engine overheating and damage.

Oxygenated Fuels

Some conventional gasolines are being blended with alcohol or an ether compound. These gasolines are collectively referred to as oxygenated fuels. To meet clean air standards, some areas of the United States and Canada use oxygenated fuels to help reduce emissions.

If you use an oxygenated fuel, be sure it is unleaded and meets the minimum octane rating requirement.

Before using an oxygenated fuel, try to confirm the fuel's contents. Some states/provinces require this information to be posted on the pump.

The following are the EPA-approved percentages of oxygenates:

ETHANOL (ethyl or grain alcohol) 10% by Volume

You may use gasoline containing up to 10% ethanol by volume. Gasoline containing ethanol may be marketed under the name "Gasohol".

MTBE (Methyl Tertiary Butyl Ether) 15% by Volume

You may use gasoline containing up to 15% MTBE by volume.

METHANOL (methyl or wood alcohol) 5% by Volume

You may use gasoline containing methanol containing up to 15% methanol by volume as long as it contains cosolvents and corrosion inhibitors to protect the fuel system. Gasoline containing more than 5% methanol by volume may cause starting and/or performance problems. It may also damage metal, rubber, and plastic parts of your fuel system.

If you notice any undesirable operating symptoms, try another service station or switch to another brand of gasoline.

Fuel system damage or performance problems resulting from the use of an oxygenated fuel containing more than the percentages of oxygenates mentioned above are not covered under warranty.

Oxygenated the fuels can damage paint and plastic. Be careful not to spill fuel when filling the fuel tank. Wipe up any spills immediately.

NOTICE

Oxygenated fuels can damage paint and plastic.

Any serious competition effort relies heavily on the knowledge gained and compiled from previous racing events. The best way to organize the many bits of information is to record them in a logbook.

Your logbook can include such information as suspension adjustments, carburetor adjustments, gearing, and tire selection. This detailed information, along with your comments, can prove valuable when you compete at the same track or on similar terrain.

Your logbook can also tell you when maintenance was performed and when it will be necessary again. Your logbook also lets you record any repairs and lets you keep track of the running time on the engine and suspension components.

If you choose to sell your CR, the accurate maintenance records in your logbook might be the deciding deal-maker for a potential buyer.

Consider using different color pens or pencils to record important information on specific subjects. For example, record results in black, jetting changes in red, suspension/chassis settings in blue, and gearing selections in green. Color codes will help you identify the information you want with a glance.

Tuning & Adjustment Records

Keep track of the settings and adjustments that worked best at a particular location. These items include:

- basic track conditions, altitude, and temperature
- carburetion changes
- suspension settings
- chassis adjustments tested and selected
- gearing
- tire selection
- air pressure

Competition Records

- your placings
- thoughts to improve performance next time: both yours and your CR's
- strategy notes

Maintenance Records

- regular interval maintenance
- repairs
- running time on engine
- running time on suspension components

Timekeeping

This Manual lists maintenance intervals for every-so-many races or every-so-many hours of running.

Because all races are not the same, the most effective way to schedule maintenance is by the hours you have run your CR.

An official "guestimate" is close enough for our timekeeping purposes. You may choose to record your time the same way aircraft operators do (but without the benefit of an electrical hourmeter). All running time is broken down into hours and tenths of an hour (each six minutes represents one tenth of an hour).

Racing Records

Information worth recording for this section of your logbook may include:

- Your placing in each moto and overall finishing position.
- Thoughts on what you could do to improve your performance next time.
- Notes on any patterns noted in choice of starting gate positions or in riding portions of the course as the day progressed that may prove helpful in future events.
- Any places on the course where you chose the wrong line and were passed too easily.
- Notes on strategy used by your competition or by riders in another event that are worth remembering.

Maintenance Records

Regular maintenance items you'll want to record in your logbook should include:

- Dates and results of cylinder, piston and ring examinations
- Patterns for frequency of need for decarbonization with a particular oil
- When you last performed shock linkage and swingarm pivot bearing maintenance
- transmission, fork and suspension oil changes
- chain, sprocket, chain guide and slider replacements
- coolant changes and related component replacements
- spark plug, brake pad and control cable replacements



In addition, you should record any irregularities noted in component wear so you'll remember to keep a close eye on these areas in the future.

Competition Logbook



[illegible]





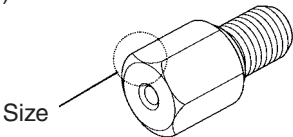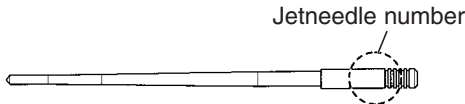

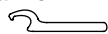

(Make several photocopies of this page for future use)

These parts and tools may be ordered from your authorized Honda dealer.

| CARBURETOR | Remarks | |
|---|---|---|
| Main jet (Standard: #430) | #370—490 (in increments of 10)  | |
| Slow jet (Standard: #55) | #45—65 (in increments of 5) | |
| Jet Needles Standard needle: 6DGY28-68 Straight diameter: ø2.68 mm  | | |
| | Jet needle number (standard series) | Jet needle number (1/2 clip position richer than standard series at 1/8 to 3/4 throttle) |
| General flow characteristics Richer ↑ Leaner ↓ (at 1/16 to 1/8 throttle) | 6DGY28-65 ø 2.65 mm | 6DGY29-65 ø 2.65 mm |
| | 6DGY28-66 ø 2.66 mm | 6DGY29-66 ø 2.66 mm |
| | 6DGY28-67 ø 2.67 mm | 6DGY29-67 ø 2.67 mm |
| | (standard needle) 6DGY28-68 ø 2.68 mm | 6DGY29-68 ø 2.68 mm |
| | 6DGY28-69 ø 2.69 mm | 6DGY29-69 ø 2.69 mm |
| | 6DGY28-70 ø 2.70 mm | 6DGY29-70 ø 2.70 mm |
| | 6DGY28-71 ø 2.71 mm | 6DGY29-71 ø 2.71 mm |

| FRAME | Remarks |
|------------------------|--|
| Driven sprocket | < >: Drive chain links |
| Higher gearing | 51 Teeth, Aluminum <116> |
| Standard | 52 Teeth, Aluminum <116> |
| Lower gearing | 53 Teeth, Aluminum <116> |
| Handlebar lower holder | |
| Standard | 3 mm offset |
| Optional | no offset |
| Front wheel | |
| Standard | 21 inch Fork height: 0.3 in (7.0 mm) (align the index groove with the top of the upper clamp) |
| Optional | 20 inch <ul style="list-style-type: none"> • wheel assembly (except brake disk) • tire tube • tire flap • rim lock (bead stopper) • front tire (90/100—20 56M) Fork height: 0 in (0 mm) (align the top of the fork tube with the top of the upper clamp) |

| TOOLS | Remarks |
|--|--|
| Pin spanner A  | To adjust shock spring preload. (two spanners required) |
| Workstand  | For maintenance |
| Air gauge | For checking tire air pressure. |

| FRAME | Remarks |
|------------------------|---|
| Shock spring Softer | 246.4 lbf/in (4.4 kgf/mm)  Green mark |
| Standard | 257.6 lbf/in (4.6 kgf/mm)  No mark (factory products) or  White mark (aftermarket parts) |
| Stiffer | 268.8 lbf/in (4.8 kgf/mm)  Blue mark 280.0 lbf/in (5.0 kgf/mm)  Red mark |
| Fork springs Softer | 23.52 lbf/in (0.42 kgf/mm)  1 scribe mark |
| Standard | 24.64 lbf/in (0.44 kgf/mm)  No mark (factory products) |
| Stiffer | 25.76 lbf/in (0.46 kgf/mm)  2 scribe marks |

The standard fork and shock springs mounted on the motorcycle when it leaves the factory are not marked. Before replacing the springs, be sure to mark them so they can be distinguished from other optional springs.

Spare Parts & Equipment

There are numerous spare parts you can take to an event to help ensure you get in a full day of riding. In addition to the usual nuts and bolts, consider the following:

Spare Parts

spark plugs
air cleaner (clean & oiled, sealed in a plastic bag)
optional carburetor jets/needles
chain & masterlinks
chain guide slider
chain guide
chain rollers
inner tubes (front & rear)
fenders
footpegs
front & side number plates
handlebar
grips
levers (brake & clutch)
clutch lever handlebar mount
clutch cable
throttle assembly
throttle cable
shift lever
brake pedal
spokes (front & rear, each side)
sprockets (larger & smaller than standard, for gearing changes & collision damage replacement)
assorted nuts, bolts, washers, screws, cotter pins

Additional Spares

front brake master cylinder
rear brake assembly
wheels & tires (front & rear, mounted)
clutch plates & transmission oil
seat
ignition components
top end-complete
radiator hoses
radiator shrouds (L & R)
brake hoses (front & rear)

General Tools

sockets (3/8 in drive)
screwdrivers: blade & Phillips No. 1, 2, 3
wrench, large adjustable
wrenches: open end & box
wrenches: hex (Allen)
wrench, spoke
torque wrench (metric scale, click-stop style)
pliers: standard, needle-nose, channel-lock set
hammer, plastic head
syringe with adjustable stop
tire pressure gauge
tire irons
tire pump or air tank
feeler gauge set
Vernier caliper (metric)
pressure/vacuum testing equipment (USA only)

Honda Special Tools

Any special tools for your CR purchased from your Honda dealer.
spoke wrench, 6.6 mm 070MA-KZ30100
spoke wrench, 5.8 x 6.1 mm 07701-0020300
lock nut wrench, 46 mm 070MF-KSR0100


Chemical Products

Pro Honda HP Trans Oil or Pro Honda GN4 or HP4 (without molybdenum additives only)
Pro Honda HP Fork Oil 5W
Pro Honda HP2 2-stroke Oil
Honda thread Lock
Honda Brake Fluid
Pro Honda Chain Lube
Pro Honda Foam Filter Oil
Honda brite Cleaner
Honda Contact Cleaner
Honda Dielectric Compound
Honda Hand Grip Cement
Honda Hondalock
Honda Moly 60 Paste (U.S.A. only) or molybdenum disulfide paste (containing more than 40% molybdenum disulfide additive)
Honda White Lithium Grease
Wheel Bearing Grease
Silicone Sealer
high-temperature grease
antifreeze

Other Products

pliers-safety wire
safety wire
mechanic's wire
duct tape
plastic tie-wraps
hose clamps
drop light
electrical tape

Wiring Diagram

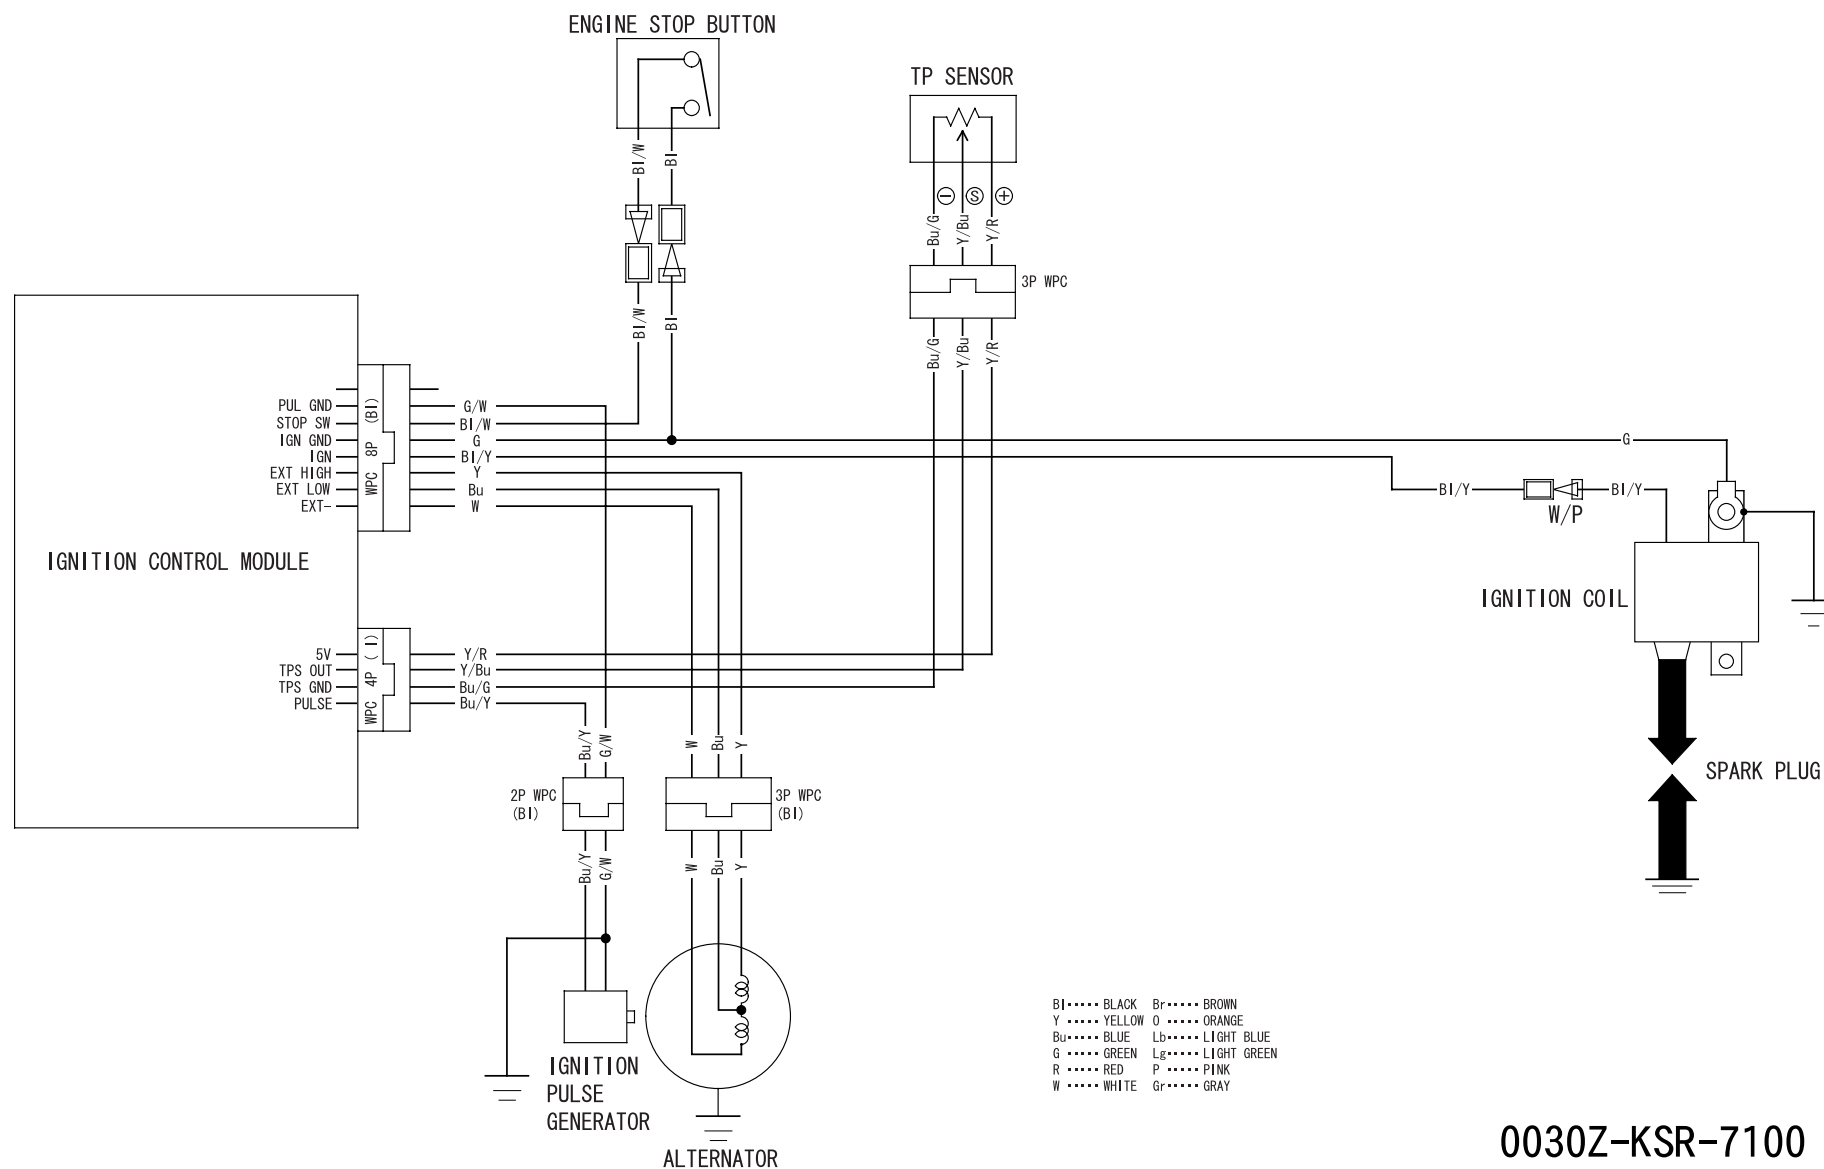

0030Z-KSR-7100

This section contains information about contacting Honda and how to get an official Honda service manual.

Authorized Manuals132
Contacting Honda.....133
Your Honda Dealer.....134
The Honda Rider’s Club (USA only)135

Authorized Manuals

The Service Manual used by your authorized Honda dealer is available from Helm, Inc.

Also available, but not necessary to service your model is the Honda Common Service Manual, which explains theory of operation and basic service information for various systems common to all Honda motorcycles, motor scooters and ATVs.

These Honda manuals are written for the professional technician, but most mechanically-capable owners should find them helpful if they have the proper tools and skills. Special Honda tools are necessary for some procedures.

| Publication Item No. | Description | Price Each* |
|--|----------------------------|-------------|
| 61KSR02 | 2006 CR125R Service Manual | \$48.00 |
| 61CM002 | Common Manual | \$48.00 |
| 31KSR620 | 2006 CR125R Owner's Manual | \$16.00 |
| *Prices are subject to change without notice and without incurring obligation. | | |

Order On-Line: www.helminc.com

Order Toll Free: 1-888-CYCLE93 (1-888-292-5393)

(NOTE: For Credit Card Orders Only)

Monday - Friday 8:00 AM - 6:00 PM EST

OR

By completing this form you can order the materials desired. You can pay by check or money order, or charge to your credit card. Mail to Helm, Incorporated, at the address shown on this order form.

Canada: See your Honda dealer to order authorized manuals.

| Publication Item No. | Item Description | Qty. | Price Each* | Total Price |
|--|------------------|--|-------------|-------------|
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| *Prices are subject to change without notice and without incurring obligation. Orders are mailed within 10 days. Please allow adequate time for delivery. | | Sub Total | | |
| | | Purchaser's Sales Tax Mich. Add 6% Calif. Add 8.25 % | | |
| | | Handling Charge | | \$5.00 |
| | | Grand Total | | |

NOTE: Dealers and Companies, please provide dealer or company name, and also the name of the person to whose attention the shipment should be sent. For purchases outside U.S.A., please write to the address shown below for a quotation.

**S
H
I
P
T
O**

Customer Name _____

Attention _____

Street Address-No P.O. Box Number _____ Apt. # _____

City _____ State _____ Zip Code _____

Daytime Telephone Number () _____

**P
A
Y
M
E
N
T**

☐ Check or money order enclosed payable to Helm, Inc. U.S. funds only. Do not send cash.

☐ Master Card

☐ VISA

☐ Discover

☐ Check here if your billing address is different from the shipping address shown above.

Account Number

| | | | | | | | | | |
|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|

Expiration Date: Mo. Yr

| | |
|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> |
|----------------------|----------------------|

Customer Signature _____ Date _____

These Publications cannot be returned for credit without receiving advance authorization within 14 days of delivery. On returns, a restocking fee may be applied against the original order.

HELM P.O. BOX 07280 • DETROIT • MI 48207

Your owner's manual was written to cover most of the questions you might ask about your Honda. Any questions not answered in the owner's manual can be answered by your Honda dealer. If he doesn't have the answer right away, he will get it for you.

If you have a difference of opinion with your dealer, please remember that each dealership is independently owned and operated. That's why it's important to work to resolve any differences at the dealership level.

If you wish to comment on your experiences with your Honda or with your dealer, please send your comments to the following address (USA only):

Motorcycle Division, American Honda Motor Co., Inc., P.O. Box 2220, Torrance, CA 90509-2220, mailstop: 100-4W-5B, telephone: (310) 532-9811.

Canada: Refer to the warranty booklet that was supplied with your vehicle.

Please include the following information in your letter:

- name, address, and telephone number
- product model, year, and frame/VIN serial number
- date of purchase
- dealer name and address

We will likely ask your Honda dealer to respond, or possibly acknowledge your comments directly.

Your Honda Dealer

Once you purchase your new Honda, get familiar with the organization of your Honda dealer so you can utilize the full range of services available.

The service department is there to perform regular maintenance and unexpected repairs. It has the latest available service information from Honda.

The parts department offers Genuine Honda parts, Pro Honda products, Hondaline accessories (USA only), and Honda accessories and products (Canada only). The same quality that went into your Honda can be found in Genuine Honda replacement parts. You'll also find comparable quality in the accessories and products available from the parts department.

Your dealer can inform you about competition events in your area. You'll also find that your dealer is a source of information (USA only) the Honda Rider's Club of America.

We're sure you'll be as pleased with the service your Honda dealer continues to provide after the sale as you are with the quality and dependability of your Honda.

One of the best ways to get the most enjoyment from owning and riding your Honda is through the Honda Rider's Club of America. Your purchase of a new motorcycle, scooter, ATV or PWC from a participating U.S. Honda dealer entitles you to a complimentary one-year membership in the Club. There are hundreds of HRCA Chapter sponsoring dealers across the USA with events and activities almost every weekend.

Membership benefits include:

- 24 hour, toll-free roadside assistance for your new Honda (includes roadside assistance for your transport vehicle as long as your Honda is aboard or in tow).
- Vehicle transport to the nearest Honda dealer or service center, if necessary.
- An exclusive HRCA website complete with access to the official Honda Common Service Manual, contests, insider information and more.
- Reimbursement (up to \$75) for Motorcycle Safety Foundation training.
Separate free training from the Specialty Vehicle Institute of America for ATV owners.
- One full year of the *Honda Red Rider* magazine or *Honda Red Rider ATV* (for ATV purchasers).
- Discounts from HRCA partners for experienced rider courses.
- Discounted vehicle insurance from the HRCA's insurance partner.
- Racing contingency programs and assistance at selected dual-sport, off-road, and motocross events.

Contact your Honda dealer for more information or call: 1 800-847-HRCA or log on to www.hrca.honda.com.

Table of Contents

The following presents the contents of each section of your owner's manual.

| |
|---|
| MOTORCYCLE SAFETY.....1 |
| Important Safety Information.....2 |
| Important Safety Precautions.....2 |
| Accessories & Modifications3 |
| Safety Labels.....4 |
| OPERATING CONTROLS5 |
| Operation Component Locations6 |
| BEFORE RIDING.....7 |
| Are You Ready to Ride?.....8 |
| Is Your Motorcycle Ready to Ride?.....9 |
| Pre-ride Inspection.....9 |
| BASIC OPERATING INSTRUCTIONS11 |
| Safe Riding Precautions12 |
| Starting & Stopping the Engine13 |
| Preparation.....13 |
| Starting Procedure13 |
| Flooded Engine.....13 |
| How to Stop the Engine.....14 |
| Break-in Guidelines15 |
| SERVICING YOUR HONDA.....17 |
| <i>Before You Service Your Honda</i> |
| The Importance of Maintenance18 |
| Maintenance Safety19 |
| Important Safety Precautions.....19 |
| Maintenance Schedule20 |
| General Competition Maintenance22 |
| Before & After Competition Maintenance.....26 |
| Between Motos & Practice Maintenance26 |
| After Competition Maintenance27 |

| |
|---|
| <i>Service Preparations</i> |
| Maintenance Component Locations.....28 |
| Seat Removal29 |
| Fuel Tank Removal30 |
| Subframe Removal32 |
| <i>Service Procedures</i> |
| <u>Fluids & Filters</u> |
| Fuel System34 |
| Transmission Oil36 |
| Coolant38 |
| Air Cleaner40 |
| <u>Engine</u> |
| Throttle42 |
| Clutch System44 |
| Spark Plug48 |
| Cylinder System49 |
| RC Valve55 |
| Reed Valve.....58 |
| <u>Chassis</u> |
| Suspension.....60 |
| Brakes.....65 |
| Wheels.....69 |
| Tires & Tubes.....70 |
| Drive Chain72 |
| Expansion Chamber75 |
| Additional Maintenance Procedures76 |
| Appearance Care78 |

| |
|--|
| ADJUSTMENTS FOR COMPETITION81 |
| Front Suspension Adjustments.....82 |
| Rear Suspension Adjustments92 |
| Suspension Adjustments for Track Conditions.....96 |
| Suspension Adjustment Guidelines.....97 |
| Carburetor Adjustments & Turning Tips100 |
| Chassis Adjustments.....107 |
| Gearing108 |
| Tire Selection for Track Conditions.....109 |
| Personal Fit Adjustments.....110 |
| TIPS111 |
| Transporting Your Motorcycle112 |
| Storing Your Honda.....113 |
| You & the Environment114 |
| Troubleshooting.....115 |
| TECHNICAL INFORMATION117 |
| Vehicle Identification118 |
| Specifications119 |
| Torque Specifications.....120 |
| High Altitude Carburetor Adjustment.....123 |
| Oxygenated Fuels.....124 |
| Competition Logbook125 |
| Optional Parts List127 |
| Spare Parts & Equipment.....128 |
| Wiring Diagram.....129 |
| CONSUMER INFORMATION131 |
| Authorized Manuals132 |
| Contacting Honda.....133 |
| Your Honda Dealer.....134 |
| The Honda Rider's Club (USA only)135 |
| TABLE OF CONTENTS136 |
| INDEX137 |
| QUICK REFERENCE |

A

| | |
|-------------------------------------|-----|
| accessories | 3 |
| adjustments, | |
| altitude and temperature | 102 |
| carburetor | 100 |
| chassis | 107 |
| control freeplay | 44 |
| for competition | 81 |
| gearing..... | 108 |
| high altitude carburetor..... | 123 |
| personal fit..... | 110 |
| suspension, front | 82 |
| suspension, rear..... | 92 |
| suspension, track conditions | 96 |
| tire selection | 109 |
| after competition maintenance | 22 |
| air cleaner..... | 40 |
| air pressure, | |
| front suspension | 82 |
| tires | 70 |
| American Honda, contacting | 133 |
| apparel, protective | 2 |
| coolant | 38 |
| appearance care | 78 |
| authorized manuals..... | 132 |

B

| | |
|--|----|
| basic operation | 11 |
| before riding | 7 |
| between motos & practice maintenance | 26 |
| brakes, | |
| fluid level | 66 |
| lever, front adjustment | 65 |
| pad wear | 68 |
| pedal height..... | 65 |
| break-in guidelines | 15 |

C

| | |
|---|-----|
| capacity, fuel | 35 |
| carburetor, | |
| adjustment | 101 |
| circuit functions | 100 |
| components | 100 |
| disassembly/assembly | 104 |
| high altitude adjustment | 123 |
| idle speed..... | 103 |
| maintenance..... | 104 |
| minor adjustments | 103 |
| care, appearance | 78 |
| chain drive | 72 |
| chassis adjustment for track conditions | 96 |
| choke knob | 13 |
| cleaner, air | 40 |
| cleaning, appearance care | 78 |
| clutch system, adjustment | 44 |
| component locations, | |
| maintenance..... | 28 |
| operation | 6 |
| competition logbook..... | 125 |
| consumer information | 131 |
| contacting Honda | 133 |
| controls, operating | 5 |
| coolant | 38 |
| customer service..... | 134 |
| cylinder system..... | 49 |

D

| | |
|--------------------------|-----|
| damping adjustments, | |
| front..... | 83 |
| rear..... | 96 |
| dealer, your Honda | 134 |
| diagram, wiring | 130 |
| drive chain | 72 |

E

| | |
|-------------------------------|-----|
| engine, | |
| flooded | 13 |
| idle speed..... | 103 |
| number..... | 118 |
| pinging | 48 |
| starting..... | 13 |
| stop button..... | 14 |
| stopping | 14 |
| won't start | 13 |
| environment, protecting | 114 |
| expansion chamber..... | 75 |

F

| | |
|------------------------------------|-----|
| filter, | |
| air | 40 |
| flooded engine, starting | 13 |
| fork, | |
| front suspension adjustment | 82 |
| front suspension inspection..... | 60 |
| oil recommendation..... | 62 |
| frame number | 118 |
| front brake lever adjustment | 65 |
| front suspension maintenance | 82 |
| fuel, | |
| line..... | 35 |
| filter..... | 35 |
| recommendation | 34 |
| refueling | 35 |
| system | 34 |
| oxygenated | 124 |
| tank capacity | 35 |
| valve | 35 |

Index

G

gap, spark plug48
gasohol124
gasoline34
gearing108
guidelines, suspension adjustment97

H

handlebar inspection76
high altitude carburetor adjustment.....123
Honda,
 contacting133
 Rider's Club135
 Service Manual132
 your dealer134

I

identification, vehicle118
idle speed, engine103
inspection, pre-ride9

L

labels, safety4
locations, component
 maintenance28
 operation.....6
logbook, competition.....125

M

maintenance,
 additional procedures76
 after competition26
 before & after competition.....26
 between motos & practice26
 component locations28
 general competition22
 importance18
 safety19
 schedule20
manual, service132
modifications3

O

oil,
 fork62
 transmission36
operation component locations6
operating,
 controls5
 instructions11
optional,
 parts list127
 sprockets.....127
oxygenated fuels124

P

pads, brake.....68
parts, optional127
personal fit adjustments.....110
pinging, engine34
plug, spark48
pre-load, rear suspension.....92
pre-ride inspection.....9
protective apparel2

R

RC valve55
rear suspension maintenance.....61
reed valve58
Rider's Club Honda.....135
riding,
 apparel2
 basic operation11
 before7
 important safety information2
 safety precautions.....2

S

safety,
 important information2
 important precautions.....2
 labels4
 maintenance19
 riding precautions.....12
schedule, maintenance.....20
serial numbers118
service,
 customer134
 manuals132
spare parts128
spark knock48
spark plug
 maintenance48
 reading106
specifications119
spring pre-load, rear suspension92
starting,
 engine13
 troubleshooting.....115
steering stem inspection76
stopping engine14
storage113
subframe32

| | |
|----------------------------|----|
| suspension, | |
| front | 60 |
| rear | 61 |
| suspension adjustment, | |
| front | 82 |
| rear | 92 |
| for track conditions | 96 |
| guidelines | 97 |

T

| | |
|-----------------------------|-----|
| transmission oil | 36 |
| tuning tips | 100 |
| throttle, | |
| freeplay | 42 |
| inspection | 43 |
| tires, | |
| air pressure | 70 |
| flat | 70 |
| selection | 109 |
| tools | 128 |
| torque specifications | 120 |
| transporting | 112 |
| troubleshooting | 115 |
| tubes, replacing | 70 |

V

| | |
|------------------------------|-----|
| valve, fuel | 35 |
| valve, RC | 55 |
| valve, reed | 58 |
| vehicle identification | 118 |

W

| | |
|-------------------------------|-----|
| washing your motorcycle | 78 |
| wheels | 69 |
| writing diagram | 129 |

Quick Reference

The following is a brief, but important collection of information you need to know about your Honda. You'll also find space to record important notes.

How To Avoid Costly Repairs

The engine of your Honda can be the most expensive component to repair. Proper maintenance, especially the use of the recommended fluids and filters, prevents premature wear and damage.

Frequent causes of costly engine repairs are:

- Transmission oil & premix oil: insufficient quantity, improper oil.
- Air cleaner: dirty, leaking because of improper installation (poor seal).

Record important information here:

| | |
|--------------|--|
| Frame No. | |
| Engine No. | |
| Owner's: | |
| Name | |
| Address | |
| City/State | |
| Phone | |
| Dealer's: | |
| Name | |
| Address | |
| City/State | |
| Phone | |
| Service Mgr. | |

| | |
|-------------------------|--|
| Maintenance | The maintenance schedule (page 21) lists service frequencies for: each race or about 2.5 hours, every 3 races or about 7.5 hours, and every 9 races or about 22.5 hours |
| Pre-ride Inspection | Check the items listed on the Pre-Ride inspection checklist each time before you ride (page 9): tires, spokes & rims, leaks, transmission oil, fuel, drive chain, drive chain guide & sliders & guide rollers, cables, nuts & bolts, spark plug and cap, throttle, brakes, clutch lever, expansion chamber. |
| Fuel/Capacity | unleaded gasoline, pump octane number of 91 or higher Premix: Pro Honda HP2 2-stroke oil (32 : 1) Tank: 2.0 US gal (7.7 ℓ) |
| Transmission oil | Pro Honda HP Trans oil, Pro Honda GN4 or HP4 (without molybdenum additives) 4-stroke oil, or an equivalent. |
| Tires | Front: 80/100-21 51M, Rear: 100/90-19 57M Type: bias-ply, tube |
| Tire Pressure (cold) | Front: 15 psi (100 kPa, 1.0kgf/cm²) Rear: 15 psi (100 kPa, 1.0kgf/cm²) |
| Spark Plug | Standard: BR9EG (NGK) or W27ESR-V (DENSO) Optional: BR9EV (NGK) or W27ESR-ZU (DENSO) |
| Drive Chain | DID 520DMA2 |